


# Fashion Sports Portable MP3 Recorder

## User's Guidance

\*Please read this user guide carefully before use\*

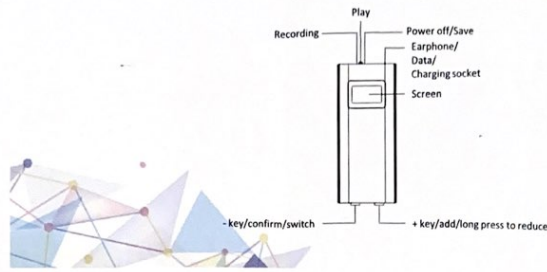

### Recording function

**Recording** : Push the switch to the Rec position, enter recording state.

**Saving recording** : ①Push the switch to PLAY position, You can save the recording directly and play the recording; ②Push the switch to the OFF position to save the recording file and shut it down.

▲ **Note**: the computer cannot be connected during recording, otherwise the file being recorded will be lost.

### Play function

#### 01 Music/Recording play

**Play** : Plug in the earphone, push the key to the PLAY position and enter the music play state.

**Switch music/recording** : short press "-" key, can switch music and recording play ;

**Next song** : short press "+" key to play next song.

#### 02 Volume adjustment

**Enter volume adjustment** : During the play state, Long press "+" key to enter volume adjustment state ;

**Volume adjustment** : Long press "+" key to reduce volume, short press "+" key to add volume.

### Extended function

**Play state**: Plug in the earphone, push the key to the PLAY position and enter the playback state.

**Pause**: During the Play state, press "+" key and "-" key together to enter pause state ;

**Enter menu** : During the pause state, press "+" key and "-" key to enter menu ;

**Up** : Long press "+" key to move up or down ;

 
**Down** : Short press the "-" key to move down or increase ;

**Confirm** : short press "-" key to confirm.

Syst time	Press the "-" button to switch and change year/month/day, short press the "+" button or long press the "+" button to change
Auto Record	Set timed recording, record automatically after time is correct
Vox Set	If the surrounding sound level is below 25db (like low whisper), the recording will automatically pause. The recording will resume when it is loud enough. Note: VOX only works in recording mode.
Rec Type	The larger of the number, the file will be more clearer and will need more memory. Please choose carefully.
Split	Set the length of the segmented recording, save the file automatically by the time
+ - key	Set the length of the +- corresponding function when playing music
Password	Setting power-on password
Delete file	Delete the currently paused file
Delete All	Delete all files
Language	Languages from different countries are available
Exit	Exit menu

#### 01 Change system time

① You can operate the <Menu/System Time> adjustment time directly on the machine (the playback interface can also directly press the "-" to quickly adjust the time). Short press "-" to change the setting item, long press "+" to decrease, short press "+" to increase. ② Or connect the machine to the computer directly and enter the disk. You can see the folder named called <Time synchronization tool>, copy this folder to the desktop backup, open the folder, double-click <SET DISK TIME>, and it will appear. As shown in the figure, to confirm whether the computer time is accurate, click <SetTime>, as shown in the figure, indicating that the time synchronization is successful.



▲ If you need to format the machine, please backup this folder. Prevent loss.

#### 02 Timed recording

① First set <recording length>: the duration of each recording (in minutes); ② then set <number of loops>: after timing, how many days of continuous recording (starting recording at that time every day); ③ then select <timing (on)> : Set the start time of automatic recording, and confirm it.

#### 03 Voice activated recording

After setting <Voice control On>, push the switch to the REC position, and after recording starts, it is turned on Voice-activated recording, push the switch to the OFF position to save the recording file and shut down.

#### 04 Long press+ -

After setting to <fast forward and rewind>, in the play state, long press the "+" button to fast forward, long press the "-" button to rewind. (The volume adjustment and quick setup time cannot be used under this function)

#### 05 Privacy protection

How to set Password: (At first, please set the default password "on", then to set your own password).

1. Set default password on: in "menu"---> "Password"---> "Password"---> "Input Password"---> 0000 (default password is 0000)---> On, then you have set the password on now.

2. Set your own password: in "menu"---> "Password"---> "Set Password"---> "Input Default Password"---> Input your own password---> After setting, press "+" button to choose "Exit", press "-" button to Exit and back to pause mode. Switch off the device, then switch on. You need a password now. ( Please remember your password firmly, we do not accept any return due to password forgotten.)

#### 06 Delete Files

Select <Delete File> to delete the file at pause state.

Select <Delete All Files> to delete all files.

▲ Note: Playing the recording status means deleting all the recordings. Playing the music status means deleting all the music.

#### 07 Recording while charging

Connect the charger through the data cable, the display is charging, press and hold the "+" button, push the switch to the REC position, and then release the "+" button after the recording interface appears, then enter recording while charging state and push it to the OFF position. Save the recording file and shut it down.

### Troubleshooting

#### 01 Suddenly unable to record ?

Please back up the important files first and format them on the computer. If they can be used normally after formatted. Please clean the computer in time. This is a computer virus infection recorder, which makes the recorder unusable. It may take a long time. The machine will be damaged and cannot be repaired.

#### 02 The screen is not responding or is always in an abnormal state ?

Please back up important files first, then restore the factory settings. After connecting to the computer, click on My Computer, find the mobile drive letter, right click the mouse, select Format, and then select Quick Format. This will allow you to complete the factory reset and most of the faults can be eliminated.

#### 03 No response after connecting to the computer via the data cable ?

First check if the plug is in place. If the computer still does not respond, try to switch to a different computer connection. Some computers cannot be recognized because of the lack of a driver. If you still can't identify it after you try it, you can contact after-sales upgrade or after-sales service.

### Function parameter

Product type	Recording pen with screen clip	4GB	Can save for 48 hours
Recording method	Power on recording, Power off saving	8GB	Can save for 96 hours
Battery	Environmentally friendly polymer lithium battery	16GB	Can save for 192 hours
Charging time	Around 1 hour	32GB	Can save for 384 hours
Sample rate	48KHz	Recording bit rate	192Kbps
Recording format	WAV	Play format	MP3/WMA/WAV

### Precautions

1. When charging or when connecting to the computer, the switch will be in the "OFF" position. When unplugging, wait until the screen is off and then use it.
2. After recording the sound, no matter whether the recorder has power or not, you must first switch the switch to the "OFF" position to save the recording. File, otherwise it will cause the recording file to be lost.
3. Please use the power adapter with a charging current of 1A or less to charge it, otherwise it may damage the unit or Dangerous (this product does not come standard with a power adapter).
4. It is recommended to connect the unit to the computer with a USB cable.
5. Charging status, the recorder screen display is charging; full state, the recorder screen display is full.

This unit comes with a smart reset system. Please save the file being recorded before connecting to the computer.

Due to the high recording quality and clear sound parameters of this product, the recording file is relatively large. Please extract it in time. The company is not responsible for the loss of data.

#### Note:

- \* Do not place this product in a heating device or in a high temperature environment.
- \* Please use the charger with a current of 1A or less to charge the computer.
- \* This product uses flash memory to store data, please backup the required data on the computer or other storage devices in time. If the product is damaged or cannot be read/recognized, the company is not responsible for the loss of data.