

HOW TO SET TIME STAMP ON MICRONIC VOICE RECORDER

WINDOWS

Connect your voice recorder to your windows PC or laptop.

Open the recorder files and locate Time Synchronisation Tool, open this folder and then open the SET DISK TIME.exe file.

A window will pop up with the time and date which should be in sync with your computer.

You can then save this and safely eject your voice recorder ready to use.

MAC

Connect your voice recorder to your Mac computer/laptop.

Go into Finder and locate the recorder on the left side, this is usually called VOICE

Open the FACTORY.TXT file

Edit the time and date, if there are other options such as bit rate, do not change these!

Click the red X to exit, it will save automatically, a pop up will tell you you cannot access older versions of the file, select OK.

There will now be an edited FACTORY.TXT file with a range of letters and numbers, you can delete this.

Safely eject your voice recorder ready to use.