


# JUMP SLIDER

## Trampoline Ramp Slide

### USERS MANUAL

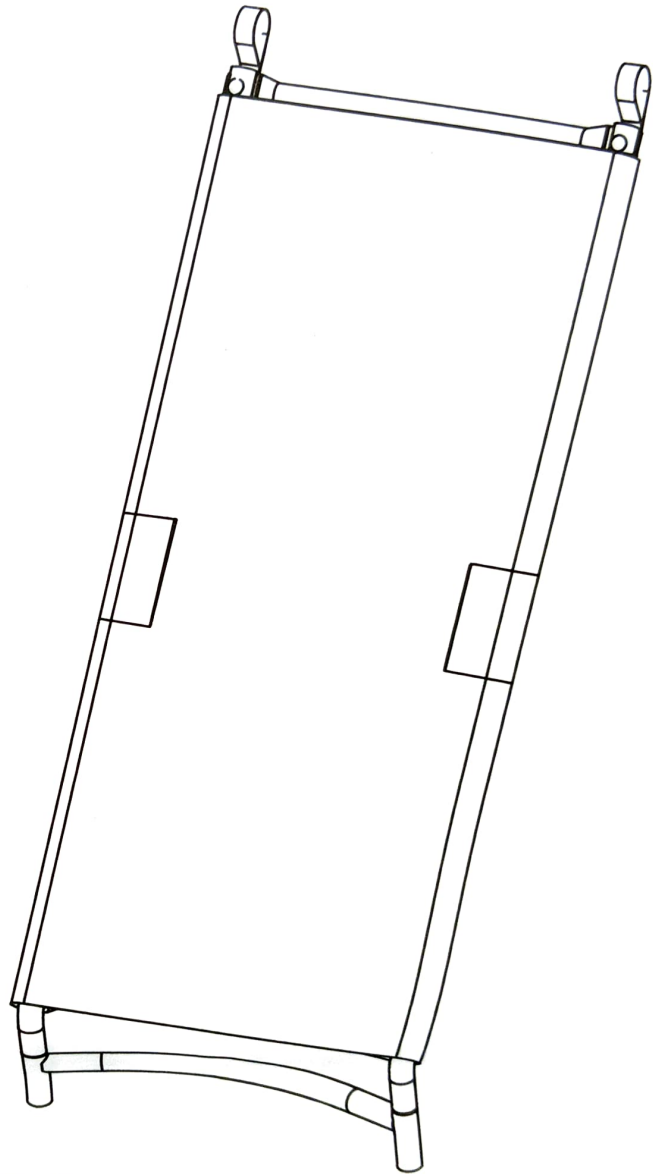

If you have questions after reading this manual, or need to order replacement parts, please call our Customer Care Hotline at (800) 473-5867.

#### **CAUTION**

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

**Trampoline Ramp Slide**  
Replaces Traditional Ladders

# ⚠ WARNING

Read the assembly, installation, care, maintenance, and user instructions in this manual prior to assembling and using this equipment. Save this manual for future reference.

## BEFORE YOU BEGIN

Thank you for selecting the Jump Slider. This accessory, when combined with a properly placed and maintained trampoline and enclosure, will provide many years of safe backyard fun. It allows you to stow it away underneath the jump surface while still attached to free up more space. This information must be read by all supervisors and users before any person is allowed to use the Jump Slider. If you have any questions after reading this manual, please call our toll-free Customer Care Hotline at 1-800-473-5867. To help us better assist you, please mention the number of the product when calling. [www.trampolinepro.com](http://www.trampolinepro.com)


## CARE AND MAINTENANCE

If your Jump Slider becomes dirty, spray with water to clean. Do not allow use until completely dry. Check all hardware before each use. Tighten any bolts and nuts that have become loose and if you notice any broken parts, put your Jump Slider away until it can be fixed.

The Jump Slider has a user weight limit of 200 lbs and will accommodate any trampoline frame up to 3”.

### Exploded Parts Drawing

Key No.	Qty.	Description
1	1	Lower Tube
2	2	Bent Tube
3	2	Upper Tube
4	2	Wing Nut
5	1	Cross Tube
6	1	Mat
7	2	Open C Bracket
8	2	M10 X 55mm Bolt

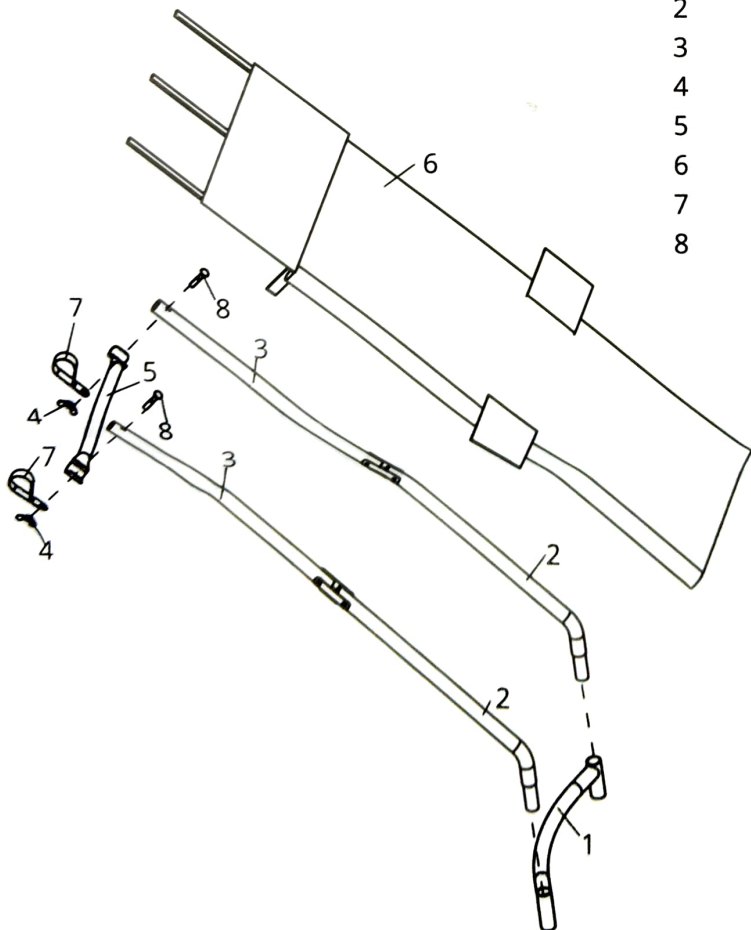


Front

# 200071.2—ASSEMBLY


## Step 1. Attach Base Tube

Unfold the Jump Slider and lay on a flat, level surface or ground with the slightly bent tube facing upward in the air. Attach the Lower Tube (1) into the Bent Tube (2) as shown. Make sure the curved bottom tube arc is facing outward. Line up insert buttons with holes.

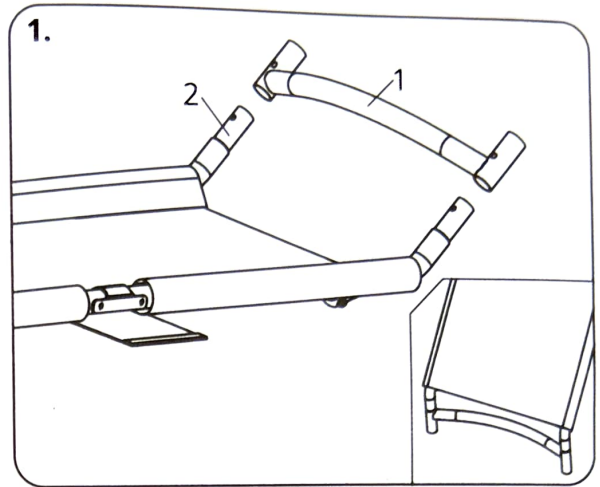


## Step 2. Place Cross Tube

Slide the Cross Tube (5) through the two loops sewn on the Mat (6) surface.

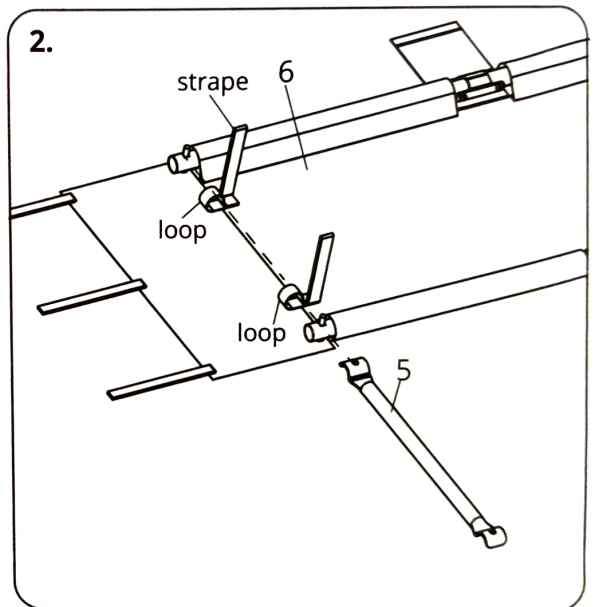

## Step 3. Clamp Location


Lift spring pad to access the frame. Place the Open C Brackets (7) approximately 20" apart - same width as the preassembled Jump Slider in front of the enclosure net opening.

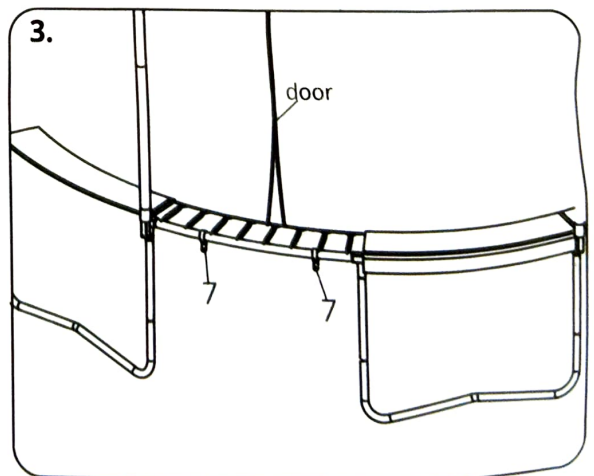

# 200071.2—ASSEMBLY


## Step 4. Secure Jump Slider

Tighten one pole's Wing Nut (4) to the M10X55 mm Bolt (8), securing it to the trampoline frame. Repeat on the opposite side.

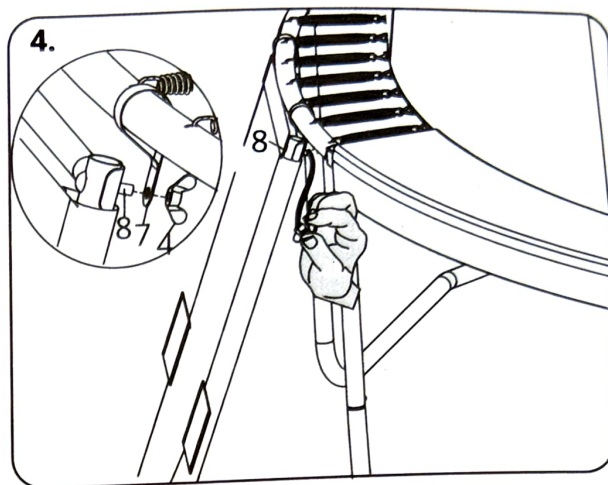


## Step 5. Cover hinges and tie straps to rings

Find tie down straps sewn into the top edge of the Jump Slider mat (6). Tie the straps to the V-rings of your trampoline mat. Cover the hinges with Velcro Fastener.

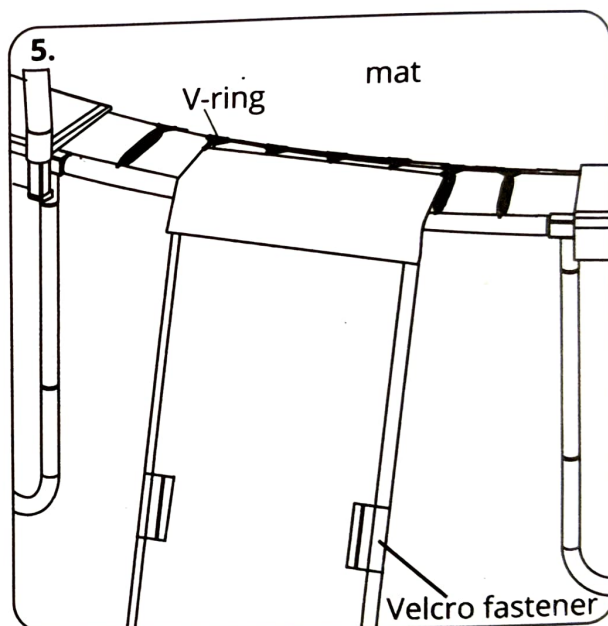

## Step 6. Storage Space


To help prevent unwanted access to the jumping surface and securely stow-away, open the hinge velcro covers, then fold the Bent Tube (2) underneath the Upper Tube (3) as shown. Use the Velcro Fasteners straps underneath to secure and hold in place.

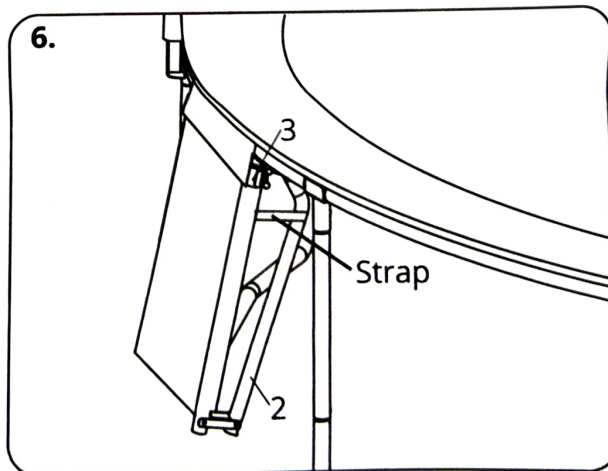

# 200071.2—ASSEMBLY

## Step 7. Jump Slider !

Lower your trampoline spring pad so that it lays over the top of the Mat Surface. Adjust your spring pad as necessary to ensure the top of the Slide Surface is fully covered by the spring pad. Prior to first use, adult or supervisor should apply pressure in the center of slide to test stability.

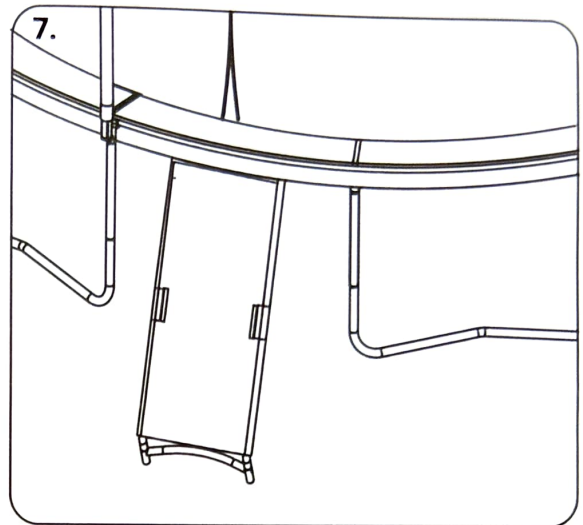

## 90 DAY FULL WARRANTY

Beginning from the date of purchase, the owner of the product has a 90 day warranty.

This warranty applies only to manufacturers defects of the products materials or construction.

This warranty becomes void if: The product is used incorrectly or if the product is used in a way that is out of the scope of use by its design. The product is not assembled and/or not maintained according to the instruction booklet. Aftermarket parts are installed or if the product is altered/ modified from its original design.

*This warranty covers damage or failure that occurs during the course of NORMAL and INTENDED USE of the product. NOT COVERED is damage due to weather or Acts of God, improper storage, negligence, user hanging, vandalism, or any other activity that could be regarded as abusive.*

This warranty is non-assignable and non-transferable.

Contact Customer Service at (800) 473-5867 for further instruction on how to return the product to Trampoline Pro under the warranty program.