





<p><b>US UK</b></p> <p><b>Dear user</b></p> <p>Thank you for you choosing <b>REDRAGON</b> Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> <li>1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.</li> <li>2. Consumable parts (such as foot stick) and spare parts replacement are not included in our warranty.</li> </ol> <p>1</p>	<p><b>OS support</b> Windows XP/Vista/Win7/Win8/Win10/Win11</p> <p><b>Product Feature</b> Ergonomic design N-Keys rollover Double injection for durable keycaps High-performance gaming switches</p> <p><b>Backlighting Modes</b> FN+INS, switch 3 backlighting modes: 1. The trial of Light 2. Breathing 3. Normally on FN+HOME, switch 3 backlighting modes: 1. Ripple Graff 2. Pass without Trace 3. Coastal FN+PGUP, switch 3 backlighting modes: 1. Hurricane 2. Accumulate 3. Digital Times FN+DEL, switch 3 backlighting modes: 1. Go with the stream 2. Clouds fly 3. Winding Paths FN+END, switch 3 backlighting modes: 1. Flowers blooming 2. Snow winter jasmine 3. Swift action FN+PGDN, switch 3 backlighting modes: 1. Both ways 2. Surmount 3. Fast and the furious</p> <p><b>Keyboard function</b> FN+WIN, Lock Windows and APP function, repeat to unlock. FN+“ ” 4 Level running speed adjustable FN+“ ← ” Adjust the backlight running direction FN+“ → ” Adjust the backlighting color, colors switching by circle FN+“ ↑↓ ” 4 Level brightness adjustable FN+PRTSC To restore default as flow mode Install the software CD in packaging or download the software from</p> <p>2</p>	<p>www.redragonzone.com for Macro recording and backlight setting</p> <p><b>Multi-media keys</b> FN+F1 Open the media player FN+F2 Volume down FN+F3 Volume up FN+F4 Mute FN+F5 Stop FN+F6 Pre-track FN+F7 Play/ Pause FN+F8 Next track FN+F9 E-mail FN+F10 Home FN+F11 Calculator FN+F12 Search</p> <p><b>FAQ</b></p> <ol style="list-style-type: none"> <li>1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.</li> <li>2. If you spill liquid on the keyboard, please remove keyboardsUSB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.</li> </ol>  <p>3</p>	<p><b>FCC Statement</b></p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>-- Reorient or relocate the receiving antenna.</li> <li>-- Increase the separation between the equipment and receiver.</li> <li>-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>-- Consult the dealer or an experienced radio/TV technician for help</li> </ul> <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>California Proposition 65</b></p> <p>⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov</p> <p>4</p>
---	---	--	---

<p><b>DE</b></p> <p><b>Lieber Nutzer</b></p> <p>Vielen Dank, dass Sie sich für die Marke <b>REDRAGON</b> entschieden haben. Zum Schutz Ihrer Rechte und für einen optimalen Kundenservice möchten wir Sie bitten, unsere Garantiebestimmungen zu beachten.</p> <ol style="list-style-type: none"> <li>1. Innerhalb der Garantiezeit sind Reparaturen infolge von Probleme mit elektrischen Schaltungen gewährleistet. Schäden, die auf Benutzereingriffe zurückzuführen sind, beispielsweise Demontage, starke Schläge, Eintauchen in Wasser, Verbindung mit dem falschen Strom- oder Spannungskreis oder Schäden infolge von Naturkatastrophen, wie Feuer, Flut oder Erdbeben, sind kein Bestandteil der Garantieleistungen.</li> <li>2. Verbrauchsmaterialien (wie Fußpedal) und Ersatzteile sind kein Bestandteil der Garantieleistungen.</li> </ol> <p>1</p>	<p><b>Unterstützes Betriebssystem</b> Windows XP/Vista/Win7/Win8/Win10/Win11</p> <p><b>Produktmerkmal</b> Ergonomisches Design N-Tasten-Rollover Doppelinjektion für haltbare Tastenkappen High-Performance-Gaming-Schalter</p> <p><b>Hintergrundbeleuchtungsmodi</b> FN+INS, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Lichttest; 2. Atmung 3. Normal Ein FN+HOME, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Rippel-Graff 2. Übergabe ohne Spur 3. Küste FN+PGUP, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Hurrikan 2. Zusammenfassen 3. Digitalzeiten FN+DEL, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Mit dem Strom 2. Fliegende Wolke 3. Gewundene Pfade FN+END, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Blühende Blumen 2. Schneiender Winterjasmin 3. Schnelle Aktion FN+PGDN, Schalter 3 Hintergrundbeleuchtungsmodi: 1. Zweiwege 2. Überwinden 3. Rasant</p> <p><b>Tastaturfunktionen</b> FN+WIN, Fenster und APP-Funktion sperren, zum Entsperren wiederholen FN+“ ” 4 einstellbare Schnelligkeitsstufen FN+“ ← ” Hintergrundbeleuchtungsrichtung anpassen FN+“ → ” Hintergrundbeleuchtungsfarbe anpassen, aufeinanderfolge Farbumschaltung FN+“ ↑↓ ” 4-stufige anpassbare Helligkeit</p> <p>2</p>	<p>FN+PRTSC Wiederherstellung des standardmäßigen Flow-Modus Installieren Sie die Software von der beiliegenden CD oder laden Sie die Software hier herunter www.redragonzone.com für die Makroaufzeichnung und die Einstellung der Hintergrundbeleuchtung.</p> <p><b>Multimedia-Tasten</b> FN+F1 Media Player FN+F2 V- FN+F3 V+ FN+F4 Stumm schalten FN+F5 Stopp FN+F6 Vorlauf FN+F7 Wiedergabe/Pause FN+F8 Nächster Titel FN+F9 E-Mail FN+F10 Start FN+F11 Rechner FN+F12 Suche</p>  <p><b>FAQ</b></p> <ol style="list-style-type: none"> <li>1. Wenn die Tastatur nicht reagiert, überprüfen Sie bitte, ob die Tastatur korrekt in den entsprechenden USB-Anschluss im Computer eingesteckt ist oder versuchen Sie, die Tastatur an einem anderen USB-Anschluss des Computers anzuschließen.</li> <li>2. Wenn Sie Flüssigkeit über die Tastatur verschütten, ziehen Sie bitte die Tastatur sofort aus dem Computer, wischen Sie die Flüssigkeit von der Tastatur ab und legen Sie die Tastatur zum Trocknen in die Sonne. Stellen Sie vor dem nächsten Gebrauch sicher, dass die Flüssigkeit in der Tastatur vollständig verdunstet ist.</li> </ol> <p>3</p>	 <p><b>REDRAGON</b> <b>RUDRA</b> Wired Mechanical Gaming Keyboard</p>  <p>Please scan here to download user manual</p> <p>Wired Mechanical Gaming Keyboard (RGB) Operating Instructions</p>
--	--	--	--

型号	K565-RGB/8238		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色正反印刷		E Eostertimes Tech
名称	说明书				
日期	2022-7-5				
页码	1 OF 1		文件编号		
绘图	雷国建	审核		核准	版本 A.0