

<p><b>US UK</b></p> <p><b>Dear user</b></p> <p>Thank you for choosing our <b>REDRAGON</b> product. To protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> <li>Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.</li> <li>Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.</li> </ol>	<p><b>OS support</b> Windows XP/Vista/Win7/Win8/Win10</p> <p><b>Basic Operation:</b> <b>How to connect the keyboard with a computer</b></p> <p><b>Wired Connection</b></p> <ol style="list-style-type: none"> <li>Take out the USB to USB C cable in the package and connect the keypad with your computer.</li> <li>Slide the power switch on the bottom of the keyboard to Power On.</li> <li>The computer will recognize and configure the keypad automatically.</li> <li>The keypad will be ready for use when the configuration is finished. The LED of the keys will light on.</li> <li>The keypad is under recharging whatever the power switch is put to ON or OFF. It may take about four hours for the keypad to be fully recharged.</li> </ol> <p><b>Wireless Connection</b></p> <ol style="list-style-type: none"> <li>Take out the USB receiver in the package and plug it into any available USB port on your computer.</li> <li>Slide the power switch on the bottom of the keypad to Power On.</li> <li>The computer will recognize and configure the keypad automatically.</li> <li>The keypad will be ready for use when the configuration is finished. The LED of the keypad will light on.</li> <li>Recharge the keyboard when the indicator (the LED on space bar) is flash in Red, the indicator will turn to green after full charge.</li> </ol>	<p><b>Function Introduction</b></p> <ol style="list-style-type: none"> <li>Computer USB port interfaces with the keyboard without needing to install drivers or software.</li> <li>Detachable cable type C to USB, cell phone cable are available.</li> <li>There are 7 backlighting effects by press FN+Space: Go with the stream, The trial of Light, Ripple Graff, Flowers blooming, Pass without Trace, Stars, both ways</li> <li>FN+ESC: Press and hold for 3 seconds, back to factory setting.</li> <li>5 Pre-set backlights modes: M1 (Default as F9) Go with the stream M2 (Default as F10) The trial of Lights M3 (Default as F11) The Ripple Graff M4 (Default as F12) Pass without trace</li> <li>7 Macro keys for recording: G1-G5 (G1-G5 default as F1-F5), ~, T.</li> <li>How to recording by macro keys? Step 1: Press REC key, get ready for recording. Step 2: select the light modes by press M1-M4. Step 3: Select the macro key from 7 buttons (G1-G5, ~, T). Step 4: Input the keys to be recorded (7 Macro keys G1, G2, G3, G4, G5, ~, T are not available for recording). Step 5: Press REC to save the recording.</li> </ol> <p>Noted: Every macro recording need to be coordinate with a light mode while it is recording and play. For example: Record 123 on G1 at Light mode M1: REC → M1 → G1 → 123 → REC</p> <ol style="list-style-type: none"> <li>How to play a macro? For example: M1 → G1</li> <li>How to delete a macro? Press FN+ESC to delete all macro</li> </ol>	<p><b>How to Reconnect the keypad with the USB Receiver</b></p> <p>The keypad may lost connection with the USB receiver for some occasional reasons such as strong magnet, violent vibration. So you may need to reconnect the keyboard with the USB receiver. In this case, unplug the receiver and plug it back again. Press FN+Q to pair, The space bar will light on in blue, then keypad LED change back to the previous light effect. The reconnection will be completed and you can use the keypad then.</p> <p><b>FAQ</b></p> <ol style="list-style-type: none"> <li>If the keyboard doesn't respond, please check if the keyboard USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.</li> <li>If you spill liquid on the keyboard, please remove keyboard USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.</li> </ol>	<p><b>FCC Statement</b></p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>- Reorient or relocate the receiving antenna.</li> <li>- Increase the separation between the equipment and receiver.</li> <li>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
1	2	3	4	5

<p><b>ES</b></p> <p><b>Estimado usuario</b></p> <p>Gracias por elegir <b>REDRAGON</b> Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.</p> <ol style="list-style-type: none"> <li>Dentro del periodo de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.</li> <li>Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no están incluido en nuestra garantía.</li> </ol>	<p><b>Sopor te ténico</b> Windows XP/Vista/Win7/Win8/Win10</p> <p><b>Operación básica:</b> <b>Cómo conectar el teclado a una computadora</b></p> <p><b>Conexión por cable</b></p> <ol style="list-style-type: none"> <li>Retire el cable USB a USB C del paquete y conecte el teclado a la computadora.</li> <li>Deslice el interruptor de alimentación en la parte inferior del teclado para encenderlo.</li> <li>La computadora reconocerá y configurará el teclado automáticamente.</li> <li>El teclado estará listo para su uso cuando finalice la configuración. El LED de las teclas se encenderá.</li> <li>El teclado se está recargando sin importar si el interruptor de alimentación está en ON o en OFF. Puede tardar cuatro horas para que el teclado se recargue por completo.</li> </ol> <p><b>Conexión inalámbrica</b></p> <ol style="list-style-type: none"> <li>Retire el receptor USB del paquete y cóncetelo a cualquier puerto USB disponible en la computadora.</li> <li>Deslice el interruptor de alimentación en la parte inferior del teclado para encenderlo.</li> <li>La computadora reconocerá y configurará el teclado automáticamente.</li> <li>El teclado estará listo para su uso cuando finalice la configuración. El LED de las teclas se encenderá.</li> <li>Recargue el teclado cuando el indicador (el LED de la barra espaciadora) destelle en rojo, el indicador se tornará verde después de completar la carga.</li> </ol>	<p><b>Introducción a las funciones</b></p> <ol style="list-style-type: none"> <li>El puerto USB de la computadora se conecta al teclado sin tener que instalar controladores o software.</li> <li>El cable extraíble tipo C a USB y el cable de teléfono celular están a disposición.</li> <li>Hay 7 efectos de retroiluminación al presionar FN + Espacio: Ir con la corriente, Prueba de luces, Ripple Graff, Flores en crecimiento, Pasar sin dejar rastro, Estrellas, en ambos sentidos.</li> <li>FN + ESC: Manténgalas presionadas durante 3 segundos, para volver a la configuración de fábrica.</li> <li>5 modos de retroiluminación predefinidos: M1 (predefinido como F9) Ir con la corriente M2 (predefinido como F10) Prueba de luces M3 (predefinido como F11) Ripple Graff M4 (predefinido como F12) Pasar sin dejar rastro</li> <li>7 teclas macro para grabación: G1-G5 (G1-G5 predefinida como F1-F5), ~, T.</li> <li>¿Cómo grabar con las teclas macro? Paso 1: presione la tecla REC y prepárese para grabar. Paso 2: seleccione los modos de iluminación al presionar M1-M4. Paso 3: seleccione la tecla macro de 7 botones (G1-G5, ~, T). Paso 4: ingrese las teclas que se usarán para grabar (7 teclas macro G1, G2, G3, G4, G5, ~, T no están disponibles para grabación). Paso 5: presione REC para guardar la grabación.</li> </ol> <p>Nota: cada grabación de macros debe coordinarse con un modo de iluminación mientras se graba y se reproduce.</p> <p>P.ej.: grabe 123 en G1 en modo de iluminación M1: REC → M1 → G1 → 123 → REC</p> <ol style="list-style-type: none"> <li>¿Cómo reproducir una macro? Por ejemplo: M1 → G1</li> <li>¿Cómo eliminar una macro? Presione FN + ESC para eliminar todas las macros</li> </ol>	<p><b>Cómo volver a conectar el teclado al receptor USB</b></p> <p>El teclado puede perder la conexión con el receptor USB por algunas razones ocasionales, como un imán fuerte o una vibración violenta. Por tanto, es posible que deba volver a conectar el teclado al receptor USB. En este caso, desenchufe el receptor y vuelva a enchufarlo de nuevo, pulse FN + Q para sincronizar. La barra espaciadora se encenderá en azul, luego el LED de la tecla cambiará al efecto de iluminación anterior. La reconexión se completará y podrá utilizar el teclado en ese momento.</p> <p><b>Preguntas y respuestas</b></p> <ol style="list-style-type: none"> <li>Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora.</li> <li>Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo.</li> </ol>	  <p><b>DITI ELITE</b> MECHANICAL GAMING KEYBOARD</p> <p>2.4G wireless gaming keypad Operating Instructions</p> <p>Please scan here to download user manual</p> 
1	2	3	4	5

<p><b>型号</b></p>	K585RGB-KS/8469		<b>备注：</b> 尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷	
<b>名称</b>	<b>说明书</b>			
<b>日期</b>	2022-3-11(修改)			
<b>页码</b>	1 OF 1		<b>文件编号</b>	
<b>绘图</b>	雷国建		<b>审核</b>	
			<b>核准</b>	
			<b>版本</b>	
	A.0			