

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

- 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- 2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.
- 3. Please fill out the warranty card. Warranty card is valid with the stamp of the retailer.
- 4. This warranty card will not be reissued if lost. Please keep it in a safe place.

OS support

Windows XP/Vista/Win 7/Win 8/Win 10/Mac OS

1.Plug and play, no need software.

2.Keyboard interface: USB full speed

Function Introduction

1.FN+INS for 20 backlight effects.

2. Commands of key combinations with [FN] key

[FN]+[Ins]: Change backlight mode. There are 20 backlight effects.

[FN]+[Del]: Change back light color.

 $[FN] + [\leftarrow]$: Slow down the running speed of backlight.

 $[FN] + [\rightarrow]$: Add up the running speed of backlight.

[FN]+[TAB]: Turn the backlight to white.

[FN] + [Win]: Disable or enable the [Win] kev.

[FN] + [ESC]: Set the keyboard to default setting.

[FN] +[W]: Swapping ASDW key to Arrow key

Scroll button function



Scroll button is place on right upcorner of keyboard for volume adjustment and keyboard backlight brightness adjustment function.

Backlight brightness adjustment: Press (key, it is light on White color, Scroll button can switch in different brightness level

Volume adjustment: Press (key, the key light's OFF, scroll button can be switch the volume level.

2

Marco profile key (M key) on F1-F4

FN+F3=M3 FN+F4=M4

Multimedia function on F9-F12

FN+9: Browser

FN+10: Research FN+11: Calculator

FN+12: E-mail

Shortcut key function

Previous track
Next track

Play /Pause
Stop

Macro recording function

There are 4 profiles keys from M1 to M4, each profile can assign with 5 macro keys from G1 to G5, total 20 group macro recording.

1. Press FN+(F1-F4)key to set a profile group, the key lights ON.

2. Press MR key (MR key lights ON), then press G key (G1/G2/G3/G4/G5), the key lights ON.

3. Record the desired keys. 4. Press MR key to complete recording (MR key lights OFF). For example: M1 \rightarrow MR \rightarrow G1 \rightarrow ABC \rightarrow MR

3

How to play Macro

1. Choose the profile group by press M key from M1 to M4.

2. Press the Macro key from G1 to G5.

For example : $M1 \rightarrow G1(ABC)$.

How to delete Macro

- 1. Choose the profile group by press M key from M1 to M4 (The key lights ON).
- 2. Press MR key (MR key lights ON).
- 3. Double press G keys from G1 to G5 (The key lights OFF).
- 4. Press MR key to save(MR key lights OFF).

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
- 2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired



REDRAGON



Mechanical Gaming Keyboard Operating Instructions