

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

OS Support

WinXP/Vista/Win7/Win8/Win10

How to plug in

Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.

Key Function Introduction

FN key work with other keys

1. FN + **[F1]** = F1
2. FN + **[F2@]** = F2
3. FN + **[F3#]** = F3
4. FN + **[F4\$]** = F4
5. FN + **[F5%** = F5
6. FN + **[F6^]** = F6
7. FN + **[F7&]** = F7
8. FN + **[F8*]** = F8
9. FN + **[F9J]** = F9
10. FN + **[F0]** = F10
11. FN + **[F- _]** = F11
12. FN + **[F=+]** = F12
13. FN + **[F"]** = Insert
15. FN + **[F{[** = Home
16. FN + **[F}]]** = End
17. FN + **[F;:]** = PRTSC
18. FN + **[FZ]** = Volume-
19. FN + **[FX]** = Volume+
20. FN + **[FC]** = Mute
21. FN + **[FV]** = STOP

2

22. FN+ **[FB]** =Previous track
23. FN+ **[FN]** =Play/Pause
24. FN+ **[FM]** =Next track
25. FN+ **[FESC]** =Press and hold for 3 seconds, back to default setting

Backlight setting

FN+ **[PGDN]** : Switch backlighting effects, total 20 patterns.

FN+ **[↑ ↓]** : Adjust lighting brightness.

FN+ **[< >]** or **[< >]** : Adjust lighting speed.

FN+ **[Backspace]** : Turn OFF the backlighting

FN+ **[WIN]** : Lock Windows key and APP key, repeat to unlock.

FN+ **[TAB]** : Press FN+[TAB] to get ready for setting the backlight colors on keys. [TAB] key now is your palette. Press FN+[TAB] for color switching, including 8 color options and light off mode.

Meanwhile 3 indicators [Num, Cap, Scroll] twinkle. Then press the desired key for colors setting.

Finally press FN+[TAB] key to save the setting.

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboard's USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a warm and ventilated place. Make sure the keyboard is dried naturally before the next use.



3

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

4

ES

Estimado usuario

Gracias por elegir REDRAGON Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

1

Sistemas Operativos admitidos

WinXP / Vista / Win7 / Win8 / Win10

Cómo conectar el teclado

Conecte el teclado con cable USB tipo C a la PC. De conexión instantánea, no requiere un controlador.

Introducción a las teclas de funciones

La Tecla FN funciona con otras teclas

1. FN + **[F1]** = F1
2. FN + **[F2@]** = F2
3. FN + **[F3#]** = F3
4. FN + **[F4\$]** = F4
5. FN + **[F5%** = F5
6. FN + **[F6^]** = F6
7. FN + **[F7&]** = F7
8. FN + **[F8*]** = F8
9. FN + **[F9J]** = F9
10. FN + **[F0]** = F10
11. FN + **[F- _]** = F11
12. FN + **[F=+]** = F12
13. FN + **[F"]** = Insert
15. FN + **[F{[** = Inicio
16. FN + **[F}]]** = Fin
17. FN + **[F;:]** = ImprPant
18. FN + **[FZ]** = Bajar volumen
19. FN + **[FX]** = Subir volumen
20. FN + **[FC]** = Silenciar
21. FN + **[FV]** = Parar
22. FN + **[FB]** = Pista anterior
23. FN + **[FN]** = Reproducir / Pausar

2

24. FN + **[FM]** = Pista siguiente
25. FN + **[FESC]** = Manténgalas pulsadas por 3 segundos para volver a la configuración predeterminada.

Ajuste de la retroiluminación

FN + **[AvPág]** : cambia los efectos de retroiluminación, con 20 patrones en total.

FN + **[↑ ↓]** : ajusta el brillo de la iluminación.

FN + **[< >]** o **[< >]** : ajusta la velocidad de la iluminación.

FN + **[Retrosceso]** : apaga la retroiluminación.

FN + **[WIN]** : bloquea la tecla de Windows y la tecla de Aplicación, repita para desbloquear.

FN + **[TAB]** : presione FN + [TAB] para prepararse para configurar los colores de la retroiluminación en las teclas. La tecla [TAB] ahora es su paleta. Presione FN + [TAB] para cambiar de color, incluidas 8 opciones de color y modo de apagado de la luz. Mientras tanto, 3 indicadores [Num, Mayús, Desp] destellarán. Luego presione la tecla deseada para configurar los colores. Finalmente presione la tecla FN + [TAB] para guardar la configuración.

Preguntas y respuestas

1. Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora.
2. Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo.



3



REDRAGON
CASTOR
68 KEY WIRED MECHANICAL KEYBOARD



Please scan here to download user manual

Mechanical Gaming Keyboard
Operating Instructions

型号	K631-RGB/8682	备注：尺寸：100x100mm (折页)	
名称	说明书	材质：80g书写纸	
日期	2021-11-29	印刷：单黑色双面印刷	
页码	1 OF 1	文件编号	
绘图	雷国建	审核	
		核准	
		版本	A.0