# Mission

### About

Chris Wiegand - President, takes extreme pride in every watch we produce. He is always available to answer questions and help customers.

We take pride in our service. With service points around the globe, you can be assured that for any repair you will have a fast turnaround time, so you can get your watch back on your wrist fast and enjoy it.

LÜM-TEC® takes watch manufacturing and design to a personal level. We freely communicate with our customers through email, phone, and on web forums daily. We value our customer's opinions and input. We use customer feedback to improve our products and our business. Our customers are what makes LÜM-TEC unique and what separates us from other watch companies.

### CONTENTS

Basic Instructions2-4	
OS205-6	
515.24H7-8	
R150 & SW2009-10	
7004.B11-12	
EPSON VS42A13-14	

Contact.....15

# CARE AND MAINTENANCE

A maintenance interval of between 5 and 10 years is recommended and is in addition to required battery replacement on quartz models.

Never open the watch yourself. If your watch needs repair or adjustment, take or mail it directly to a **LÜM-TEC** authorized service repair center.

**LÜM-TEC** assumes responsibility only for service performed at its authorized service centers.

#### Shock

All **LÜM-TEC** watches have shock-resistant movements, individually tested to meet international standards.

#### Dust

Dust can enter a watch if the case, crystal or crown is not intact. A small particle is enough to stop the movement. Have your watch repaired promptly if the crystal becomes loose, chipped or cracked, or if there is damage to the case or crown.

### Magnetism

The exposure of a timepiece to strong magnetic fields will affect its time-keeping and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field. A mechanical timepiece may require demagnetization before it will operate properly again.

## Water Resistance

All LÜM-TEC watches are tested to meet international standards for water resistance.


To maintain water resistance, periodic maintenance is required.

The gaskets and crown which seal the case are subject to wear and deterioration under normal use. These parts should be inspected and replaced as needed each time the watch is opened for service, including battery changes.

CAUTION: **LUM-TEC** will not be responsible for any damage caused by or related to leakage origination from improper handling or damage to the case, crown, gaskets or crystal.

IMPORTANT: Do not operate the chronograph pushbutton on a chronograph model while the time piece is under water.

MODELS:RPM Series Caliber: Miyota OS20J

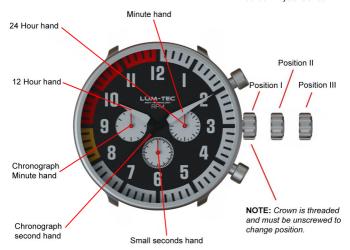

### OS20J INSTRUCTIONS

#### A) DATE SETTING :

To adjust the date, pull the crown to position II. Rotate the crown counter clock- wise

to the correct date. \* If the date is set between the hours of 9:00 PM and 1:00 AM, the date

may not change on the following day. Once finished, push the crown in completely.

#### B) TIME SETTING:

 $\mbox{Pull}$  the crown out to the Position III. Turn the crown to set hour and minute hands. When the

crown is pushed back to the normal position, small second hand begins to run.

#### C) CHRONOGRAPH USE:

The chronograph can be started and stopped each time button A is pressed. Pressing button B

resets the chronograph and the chronograph second hand and chronograph ...

minute hand return to zero position.

Note: If the central hand is not resetting to 12:00 position, pull the crown to position III and press button A to adjust the reset position.

MODELS: B54 Caliber: RONDA 515.24H

Minute hand Position II 24 Hour hand Position I Position III LÜM-TEC Combat B Seconds hand NOTE: Crown is threaded and must be unscrewed to change position.

### 515.24H INSTRUCTIONS

#### Pos. I Position of rest (watch running)

Pos. II Quick-change correction for date

The date can also be corrected during the day-changing phase between 10 pm and midnight. The date of the following day has to be set, because no automatic date change takes place at midnight.

- Pull the crown out to position II (watch still running).
- Turn the crown clockwise until the required date appears.
- Push the crown back into position I.
- Quick-change correction for 24-hour display
- Pull the crown out to position II (watch still running).
- Turn the crown anticlockwise until the desired time appears.
- Push the crown back into position I.

#### Pos. III Setting the time

- Pull the crown out to position III (watch stopped).
- Turn the crown, until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position I.



# R150 & SW200 INSTRUCTIONS

Pos. I Manual winding position and normal resting position (watch running)

Pos. II Quick-change correction for date

The date can also be corrected during the day-changing phase between 10 pm and midnight. The date of the following day has to be set, because no automatic date change takes place at midnight.

- Pull the crown out to position II (watch still running).
- Turn the crown until the required date appears.
- Push the crown back into position I.

### Pos. III Setting the time

- Pull the crown out to position III (watch stopped).
- Turn the crown, until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position I.

# MODELS:B53 Caliber: RONDA 7004.B Minute hand Big date display Position II Hour hand Position I Position III NOTE: Crown is threaded and must be unscrewed to change position. Small seconds hand

## 7004.B INSTRUCTIONS

### Pos. I Position of rest (watch running)

Pos. Il Quick-change correction for date
The date can also be changed during the day-changing
phase between approx. 8.00 pm and midnight.

The date of the following day has to be set, because no automatic date change takes place at midnight.

- Pull the crown out to position II (watch still running).
- Turn the crown until the current date appears.
- Push the crown back into position I.

### Pos. III Setting the time

- Pull the crown out to position III (watch stopped).
- Turn the crown, until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position I.

#### MODELS:Solar Marine CALIBER: EPSON VS42A



# **VS42A INSTRUCTIONS**

### Pos. I Position of rest (watch running)

Pos. II Quick-change correction for date (Only used for models with date function)

The date can also be corrected during the day-changing phase between 10 pm and midnight. The date of the following day has to be set, because no automatic date change takes place at midnight.

- Pull the crown out to position II (watch still running).
- Turn the crown clockwise until the required date appears.
- Push the crown back into position I.

Pos. III Setting the time

- Pull the crown out to position III (watch stopped).
- Turn the crown, until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position I.

### Power depletion warning function

The two-second intervals movement of the second hand is a signal of energy depletion.

The watch continuous running time after two-second intervals movement is 1 day.

### CONTACT

WIEGAND CUSTOM WATCH, LLC. 7245B INDUSTRIAL PARK BLVD MENTOR, OH 44060

> T.(440)-951-1296 1-877-2LUMTEC

### INTERNET

www.Lum-Tec.com

info@lum-tec.com

service@lum-tec.com

### SOCIAL NETWORK

TWITTER - @LUMTECWATCHES

FACEBOOK - FACEBOOK COM/LUMTECLLC