

Mission

About

Chris Wiegand - President, takes extreme pride in every watch we produce. He is always available to answer questions and help customers.

We take pride in our service. With service points around the globe, you can be assured that for any repair you will have a fast turnaround time, so you can get your watch back on your wrist fast and enjoy it.

LÜM-TEC® takes watch manufacturing and design to a personal level. We freely communicate with our customers through email, phone, and on web forums daily. We value our customer's opinions and input. We use customer feedback to improve our products and our business. Our customers are what makes **LÜM-TEC** unique and what separates us from other watch companies.

CONTENTS

Basic Instructions..... 4-7

Miyota OS20..... 8-9

Selita SW 200-1..... 10-11

Contact..... 12-13

CARE AND MAINTENANCE

A maintenance interval of between 5 and 10 years is recommended and is in addition to required battery replacement on quartz models. Never open the watch yourself. If your watch needs repair or adjustment, take or mail it directly to a LüM-TEC authorized service repair center.

NOTE: LüM-TEC assumes responsibility only for service performed at its authorized service centers.

Shock

All LüM-TEC watches have shock-resistant movements, individually tested to meet international standards.

Dust

Dust can enter a watch if the case, crystal or crown is not intact. A small particle is enough to stop the movement. Have your watch repaired promptly if the crystal becomes loose, chipped or cracked, or if there is damage to the case or crown.

Magnetism

The exposure of a timepiece to strong magnetic fields will affect its time-keeping and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field. A mechanical timepiece may require demagnetization before it will operate properly again.

Water Resistance

All LüM-TEC watches are tested to meet international standards for water resistance.

To maintain water resistance, periodic maintenance is required. The gaskets and crown which seal the case are subject to wear and deterioration under normal use. These parts should be inspected and replaced as needed each time the watch is opened for service, including battery changes.

CAUTION: LüM-TEC will not be responsible for any damage caused by or related to leakage origination from improper handling or damage to the case, crown, gaskets or crystal.

IMPORTANT: Do not operate the chronograph pushbutton on a chronograph model while the time piece is under water.

SW200-1 Instructions

FUNCTION

A) SETTING THE DATE:

Unscrew the crown and pull to the 2nd position. Turn the crown clockwise to set the proper date. Once finished, push the crown in and screw down completely.

B) SETTING THE TIME :

Unscrew the crown and pull to the 3rd position. Rotate the crown counter clockwise to set the time. Once finished, push the crown in and screw down completely.

C) MANUAL WINDING:

Set the crown to the 1st position and rotate the crown clockwise.

MODELS B43/M82/83/84



OS20J Instructions

FUNCTION

A) DATE SETTING :

To adjust the date, pull the crown to the 2nd position. Rotate the crown counter clockwise to the correct date. * If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change on the following day. Once finished, push the crown in completely.

B) TIME SETTING:

Pull the crown out to the 3rd position. Turn the crown to set hour and minute hands. When the crown is pushed back to the normal position, small second hand begins to run.

C) CHRONOGRAPH USE:

The chronograph can be started and stopped each time button "A" is pressed. Pressing button "B" resets the chronograph and the chronograph second hand and chronograph minute hand return to zero position.

MODELS B44



CONTACT

WIEGAND CUSTOM WATCH, LLC.
7245B INDUSTRIAL PARK BLVD
MENTOR, OH 44060

T. (440)-951-1296

1-877-2lumtec

INTERNET

www.Lum-Tec.com

info@lum-tec.com

service@lum-tec.com

SOCIAL NETWORK

TWITTER - @LUMTECWATCHES

FACEBOOK - FACEBOOK.COM/LUMTECLLC

