

**USB SMART & FAST CHARGER**  
**– TYPE G PLUG, 1 QC3.0 USB-A, 1 PD3.0 USB-C**  
**DUAL VOLTAGE 100-240 AC, 30W**  
**NEON LED**


**PP7983**

Plug	Destinations*
<b>G</b>	<p>Bahrain, Bangladesh, Brunei, Cambodia, Hong Kong, Jordan, Kuwait  Macau, Malaysia, Maldives, Myanmar, Oman, Qatar, Saudi Arabia  <b>Singapore</b>, Sri Lanka, UAE, UK</p> <p>Africa (Botswana, Ethiopia, Gambia, Ghana, Kenya, Malawi, Mauritius, Nigeria  Rwanda, Seychelles, Sierra Leone, Somalia, Tanzania, Uganda, Zambia, Zimbabwe)</p>



Using USB Chargers properly is critical to your safety. With continuous use over time, a charger can rapidly deteriorate, creating a potentially dangerous electric shock or fire hazard.

## Parts & Description

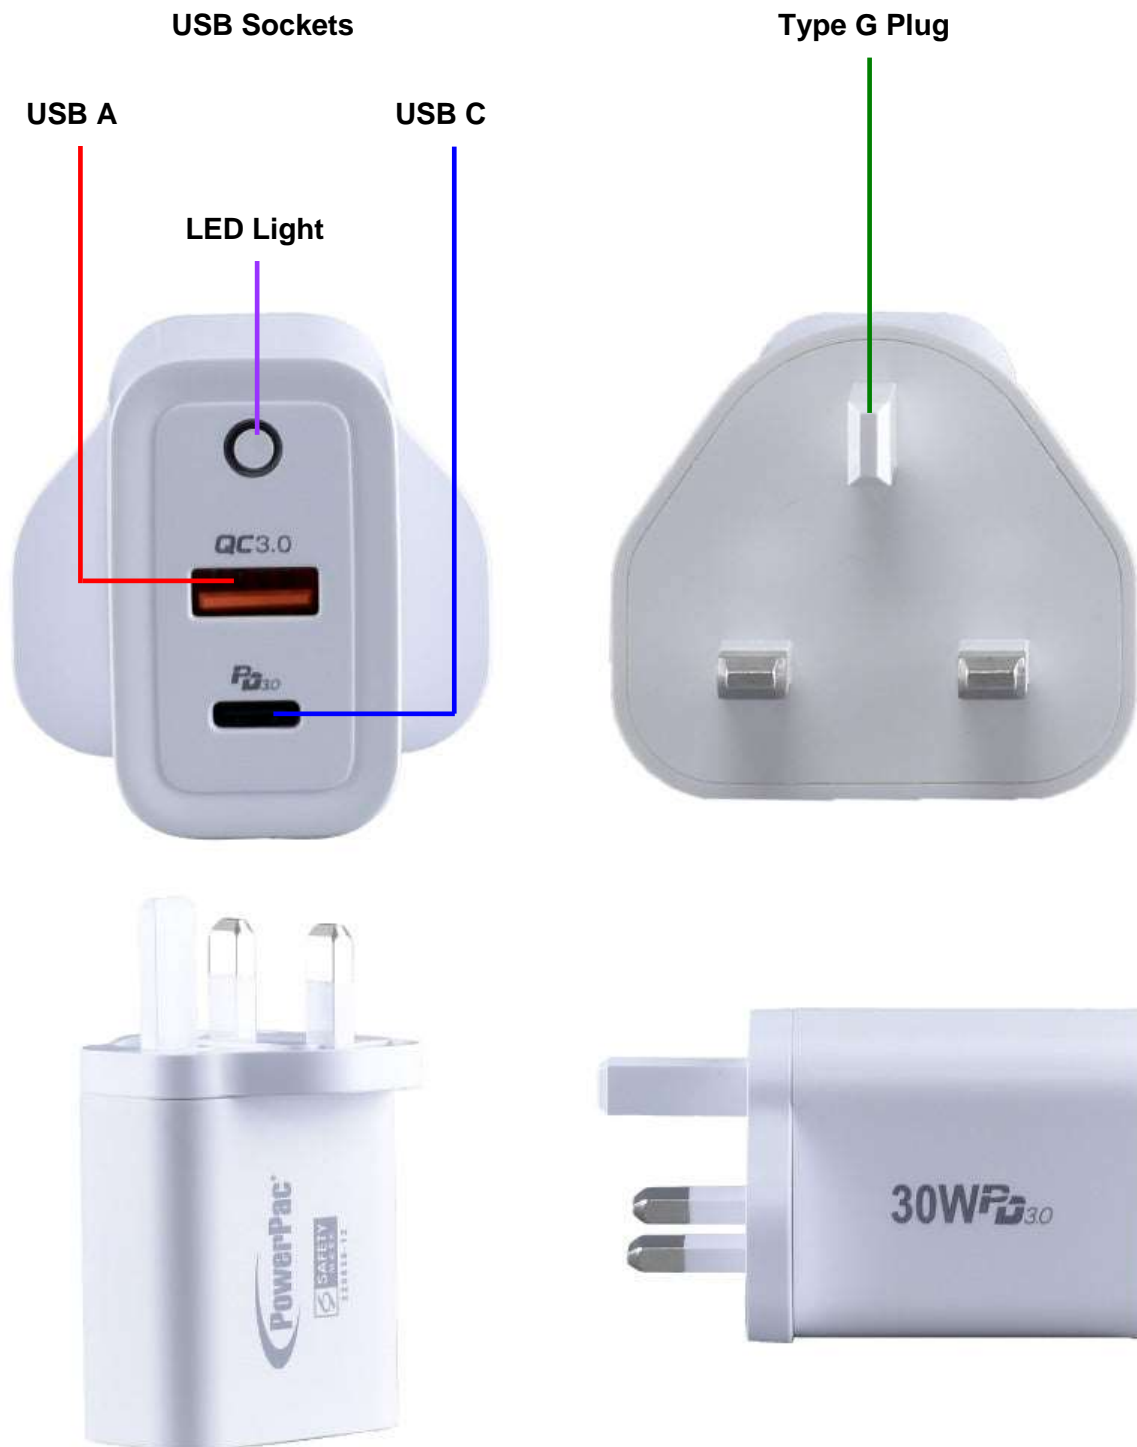

## **Warnings**

### **ATTENTION :**

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance.

Important instructions to be kept for future reference.

The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the USB Charger.

### **The USB Charger**

2. This USB Charger must be used only for the purpose it was expressly designed; any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. The installation of the USB Charger will be made in accordance with the indications of the manufacturer. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
4. Before use, check the integrity of the USB Charger. DO NOT operate the USB Charger when it is damaged. In case you are not sure, contact a qualified person. If the USB Charger is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
5. Before powering the USB Charger make sure the rating (voltage and frequency) corresponding to the grid and the socket is suitable for the plug of the appliance, and that the wall socket is properly grounded.
6. Check the USB Charger's wattage rating, which is the amount of electricity it can safely transmit per second, and is provided either in watts or in amps and volts. (Multiply the amps and volts together to get the wattage rating.) The wattage rating must be greater than the appliance's power requirement. If you plan to plug multiple appliances into a USB Charger (if possible), add their wattages together to make sure the total DOES NOT exceed the USB's wattage rating.
7. DO NOT attempt to connect multiple USB Chargers, or plug a USB Charger into an Extension Socket, or vice versa. This mistake can lead to fires, equipment failures and electrocution. Plugging two USB Chargers or USB Charger + Extension Socket together reduces their current capacity which will result in voltage drop and overheating.
8. The USB Charger must NOT be switched on using external timers and/or other remote control appliances which are not specified in this manual.

9. Only use original components & accessories provided by the manufacturer. Any non-original component or accessory NOT recommended by the manufacturer (including those made by other manufacturers or by the same manufacturer but for other models) may cause injuries to persons or damage to the USB Charger.
10. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.

### **Location**

11. This USB Charger is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the USB Charger, and never be used to clean the USB Charger in order to avert the risk of fire or explosion.
12. The USB Charger should NOT be placed on a surface, or in the vicinity of objects which can be damaged by heat, such as carpets, curtains, textiles or plastics. DO NOT locate multiple USB Chargers close to each other. During operation, as heat is transferred away from the USB Charger, the surface that the USB Charger is placed upon as well the surface immediately above or adjacent to it may become very hot. If the USB Charger is operated on wooden furniture, use a protective pad to prevent damage to delicate finishes.
13. Avoid placing the cable(s) of appliance(s) plugged into the USB Charger on abrasive or sharp surfaces or in positions where it can be damaged easily. DO NOT damage a cable's insulation by dropping tools or materials on them, pinching them in doors and windows or under heavy furniture, dropping tools or materials on them, or letting them hang in the air while their plugs are attached to the USB Charger.
14. Avoid snagging the cable(s) of appliance(s) plugged into the USB Charger. The USB Charger might be ripped from the wall socket as a result. This may cause injuries to persons or damage to the USB Charger.
15. The USB Charger should be plugged into outlets in the same room where work is being performed. DO NOT run the cable(s) of appliance(s) plugged into the USB Charger through walls, ceilings or floors. The cable must NOT be placed under carpets, or covered with throw rugs, runners or similar. If a cable is covered, heat cannot escape, which may result in a fire hazard.
16. DO NOT use or store the USB Charger outdoors. Store and use the USB Charger only indoors, or in any case, protected from weathering such as rain, direct radiation of the sun and dust. Outdoor USB Chargers have insulation that protects against moisture, sunlight and abrasion, so using an indoor USB Charger outdoors can create a fire hazard or result in electric shock.

## **Operation**

17. If you are using the USB Charger for the first time, you should:
  - a. Clean the USB Charger with a slightly damp cloth. Ensure that the USB Charger is completely dry before use. DO NOT use metal scouring pads.
  - b. Make sure to remove any label or protective sheet which may prevent its proper functioning.DO NOT:
  - cover the USB Charger during functioning;
  - insert objects or body parts inside the protection cover of the USB Charger;
  - leave the USB Charger, with an appliance inserted into it, unsupervised during operation.
18. During operation, DO NOT touch the USB Charger with wet body parts, and it is recommended to have between you and the standing surface, an isolating element (for example, wearing shoes with rubber soles).
19. DO NOT soak the USB Charger in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the USB Charger to prevent electric shock. In case of accidental fall in water, DO NOT try to take it out, but immediately switch the wall socket off.
20. Switch the USB Charger off by switching the socket switch OFF and detaching the USB Charger from the wall socket. Thereafter detach the plugs of any appliances inserted into the USB Charger if it is NOT used for a long period, and before storing, cleaning or performing any maintenance operation.
21. Insert and detach the USB Charger from the wall socket holding it firmly with dry hands. Always detach the USB Charger to avoid overheating.
22. In case of malfunction or anomaly during the functioning such as smoke coming out of the USB Charger, switch the socket switch OFF and check the cause of the anomaly, if possible, with the support of a qualified person.
23. This USB Charger is NOT intended for commercial use but to be used in households and similar applications, such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Dormitories hotels, motels and other residential environments;
  - Bed and breakfast type environments.
24. This USB Charger can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall NOT play with the USB Charger. Cleaning and user maintenance shall NOT be made by children unless they are older than 8 and supervised. Keep the USB Charger and its cable out of reach of children less than 8 years old.
25. Save these instructions.

## **How to use**

1. Insert the plug of the USB Charger into the wall socket.
2. Insert the plugs of appliances into the USB Charger. When using multiple appliances, add their wattages together to make sure the total DOES NOT exceed the USB Charger's wattage rating.
3. Switch the socket switch ON.
4. When any appliance attached to the USB Charger is to be switched off, switch off the appliance and detach the plug of the appliance from the USB Charger. Repeat this step for any other appliance.
5. When the plugs of all appliances attached to the USB Charger have been removed, switch OFF the socket switch and remove the plug of the USB Charger from the wall socket.

## **How to clean**

1. Clean the USB Charger only when its plug is removed from the wall socket.
2. Wipe the exterior of the USB Charger using a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. DO NOT use abrasive scouring pads or powders. DO NOT attempt to clean the interior of the device.
3. Never immerse the USB Charger in water or other liquids.
4. Ensure that the USB Charger is completely dry before use or storage.

## ENVIRONMENTAL TIP

This appliance, along with all other electronic appliances, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the appliance at your local recycling centre.

**DISPOSAL:** Do not dispose this appliance as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



## SPECIFICATION

MODEL	PP7983
NUMBER OF 3-PIN SOCKETS	1
NUMBER OF USB SOCKETS	2 (1 USB A + 1 USB C)
LED LIGHT	Yes
VOLTAGE / CURRENT	100 – 240 V ~ / 0.8 A
FREQUENCY	50 – 60 Hz
USB-C (DC)	5V 3A / 9V 3A / 12V 2.5A / 15V 2A / 20V 1.5A
USB-A (DC)	3.6 – 6V 3A / 6 – 9V 2A / 9 – 12V 1.5A
USB-C + USB-A (DC)	5V 3.4A (max)
POWER	30 W
DIMENSIONS	8.2 x 4.8 x 4.7 cm
SAFETY MARK	220836-12

## WARRANTY

### Warranty Conditions

1. This warranty provides against defective materials and manufacturing faults throughout for two years from the date of purchase of the appliance covering the Motor only, subject to correct usage of the appliance. The warranty on the Compressor is 10 years; fluorescent light tubes of Mosquito Insect Repellents is 6 months; rechargeable batteries are also 6 months; all are subject to the same conditions as above.
2. This warranty also does not cover normal wear and tear, replacement of consumable materials and accessories, and the cost of maintenance of the appliance.
3. This warranty does not cover the repair or replacement of part/s damaged by misuse, accidents, negligence, alterations, or modifications in any way, or repairs done by any repair organisation without the prior consent of PowerPac Electrical Pte Ltd.
4. Repair and service are to be performed at: 5 Changi South Lane #03-01 Singapore 486045. A transport fee will be charged for personal doorstep service.
5. The original purchaser of the appliance must furnish proof of purchase to our Service Centre with the email or number as registered during submission of warranty when this appliance is sent for repair/service. Failure to do so may delay the receipt of said repair/service by the customer.
6. Under no circumstances whatsoever shall the serial number be erased, defaced or altered by the customer and/or his representatives, or the dealer and/or his agents. Failure to ensure this shall invalidate the warranty.
7. This warranty is deemed to be void if the defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generators.
8. This warranty is valid in Singapore only.
9. This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer.
10. Please refer to the attached picture for the location of one of our appliance's serial number, as an example.





Please complete the on-line registration warranty form available on our website. There is no further requirement to send us any hard copy as part of our efforts to save the environment.

In accordance with the terms and conditions of this limited warranty as stated above, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.

PowerPac Electrical Pte Ltd



[sales@powerpac.com.sg](mailto:sales@powerpac.com.sg)



PowerPacSG



[www.powerpac.com.sg](http://www.powerpac.com.sg)



@powerpacsg

\* Disclaimer: While we strive to make the information in the table as timely and accurate as possible, all information gathered was based on data from publicly available sources and if the type of plug corresponded to the power outlet/s used in that country, some of which might only be used in certain areas or in the process of being phased out. We make no claims, promises, or guarantees about the accuracy, completeness, or adequacy of such contents, and expressly disclaim liability for errors and omissions of such contents. PowerPac assumes no responsibility for any injury or damage caused due to using any type of USB Charger with any other electrical device or appliance in any location.