



BLENDER

Model: PPBL906



PowerPac Electrical Pte Ltd

✉ sales@powerpac.com.sg

f PowerPacSG

🌐 www.powerpac.com.sg

🎵 @powerpacsg



WE ARE OFFERING A
15% OFF STOREWIDE FOR
YOUR NEXT PURCHASE AT
WWW.POWERPAC.COM.SG

CODE
THANKYOU15

PARTS & DESCRIPTION



WARNINGS

ATTENTION :

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance. Important instructions to be kept for future reference.
The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the appliance.

The Appliance

2. This appliance must be used only for the purpose it was expressly designed; any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. The installation/assembly of the appliance will be made in accordance with the indications of the manufacturer. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
4. Before use, check the integrity of the appliance and power cable. DO NOT operate the appliance at all when the Motor unit is damaged. If the Motor unit is not damaged, but an accessory (Blender Jug, Grinder Cup, Chopper Cup, Blender Blade assembly, Grinder Blade assembly or Chopper Blade assembly) is damaged, DO NOT operate the Motor unit in conjunction with that accessory. In case you are not sure, contact a qualified person. If the power cable is damaged, it must be replaced by the manufacturer / service agent or a qualified technician in order to avoid a shock hazard.
5. Before powering the appliance make sure the rating (voltage and frequency) corresponding to the grid and the socket is suitable for the plug of the appliance, and that the wall socket is properly grounded. This appliance is fitted with an earth wire for extra safety.

6. DO NOT power the appliance using multiple sockets. If possible, avoid the use of adapters and/or extension cables; if their use is absolutely necessary, use only materials in compliance with the current safety regulations and whose marked electrical rating should be at least as high as the electrical rating of the appliance. To prevent overloading and blown fuses, ensure that no other high powered appliance is plugged into the same socket.
7. The appliance must NOT be switched on using external timers and/or other remote control appliances which are not specified in this manual.
8. Only use original components & accessories provided by the manufacturer. Any non-original components & accessories made by other manufacturers or by the same manufacturer but for other models of the same capacity or otherwise, may cause injuries to persons or damage to the appliance. Doing so will void the warranty and may cause serious injury.
9. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.

Location

10. This appliance is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the appliance, and never be used to clean the appliance to avert the risk of fire or explosion.
11. The appliance should NOT be placed on a surface, or in the vicinity of objects, which can be damaged by heat, such as carpets, curtains, textiles or plastics. DO NOT use the appliance when placed in a closed cabinet. During operation, as heat is transferred away from the appliance, the surface that the appliance is placed upon as well the surface immediately above or adjacent to it may become very hot. There should be at least 10 cm of free space from the back, left & right sides and at least 20 cm from the top of the appliance to allow adequate air circulation. Never put things on top of the Lid or Cup. DO NOT locate multiple portable socket outlets or power supplies at the bottom or rear of the appliance. If the appliance is operated on wooden furniture, use a protective pad to prevent damage to delicate finishes.
12. Avoid placing the power cable (and extension cable, if used) on abrasive or sharp surfaces or in positions where it can be damaged easily. Avoid placing heavy objects on the cable. The cable must NOT be placed under carpets, or covered with throw rugs, runners or similar. Arrange the cable away from high traffic areas, and where it will NOT be tripped over. DO NOT pull or carry the appliance by the cable.
13. DO NOT use or store the appliance outdoors. Store and use the appliance only indoors, or in any case, protected from weathering such as rain, direct radiation of the sun and dust.

Operation

14. If you are using the appliance for the first time, you should:
 - a. Clean the exterior of the Motor unit with a damp cloth. Use a little detergent, if necessary, and wipe dry. The Motor unit may NOT be immersed in water. Wash the Cap, Lid, Blender Jug & Blender Blade assembly, Grinder Cup, Grinder Cup Cover & Grinder Blade assembly, Chopper Cup, Chopper Cup Cover & Chopper Blade assembly and utensils you wish to use with water & detergent with a non-abrasive sponge. DO NOT use metal scouring pads nor use solvents like paint thinners or acetone. Dry the accessories thoroughly.
 - Notice:** you should NOT use a dishwasher to clean the appliance.
 - b. Place the Motor unit on a flat, dry surface. Assemble the Blender Jug & the Blender Blade assembly, Grinder Cup & Grinder Blade assembly or Chopper Cup & Chopper Blade assembly to the Motor unit according to the instructions listed in the section ("How to Use") below. Check that these accessories are locked into the Motor unit before you start using the appliance.
 - c. Make sure the blades are in place and are running smoothly.

The Blender

- d. Lock the Blender Jug (with Blender Blade assembly attached) onto the Motor unit and screw clockwise. Place food/liquids into the Blender Jug. Screw the Lid to the Blender Jug by turning clockwise. Insert the Cap into the Lid and press downwards. Plug in the power cable, switch it on, rotate the Speed Knob to '1', '2' or '3' and blend.

Blend for NOT more than 1 minute without interruption, resting for 2 minutes with a maximum of 3 cycles before resting for 15 minutes.

On completion of blending, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable. Wait for the blades to stop turning and unscrew the Blender Jug with the Blender Blade assembly anti-clockwise from the Motor unit and detach.

The Grinder (functions as a Mincer as well)

- e. Place ingredients (except Nutmeg) into the Grinder Cup and lock the Grinder Cup Cover into place on the Grinder Cup. Lock the Grinder Cup (with Grinder Blade assembly attached) onto the Motor unit and screw clockwise. Plug in the power cable, switch it on, rotate the Speed Knob to '1', '2' or '3' and grind.

Grind for NOT more than 30 seconds without interruption, resting for 2 minutes with a maximum of 3 cycles before resting for 15 minutes.

On completion of grinding, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable. Wait for the blades to stop turning. Unscrew the Grinder Cup with the Grinder Blade assembly anti-clockwise from the Motor unit and detach.

The Chopper

- f. Place ingredients into the Chopper Cup and lock the Chopper Cup Cover into place on the Chopper Cup. Lock the Chopper Cup (with Chopper Blade assembly attached) onto the Motor unit and screw clockwise. Plug in the power cable, switch it on, rotate the Speed Knob to '1', '2' or '3' and grind.

Chop for NOT more than 30 seconds without interruption, resting for 2 minutes with a maximum of 3 cycles before resting for 15 minutes

On completion of chopping, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable. Wait for the blades to stop turning. Unscrew the Chopper Cup with the Chopper Blade assembly anti-clockwise from the Motor unit and detach.

- g. Make sure to remove any label or protective sheet which may prevent its proper functioning.

DO NOT:

- cover the appliance during functioning;
 - use while you are tired or sleepy;
 - insert objects or body parts inside the protection cover of the appliance;
 - overload the Blender Jug, Grinder Cup or Chopper Cup by overfilling it. This is generally below $\frac{3}{4}$ of the total volume of the container as especially during blending, liquids will churn and may spill out of the container. The jug should contain cut fruits and vegetables NO larger than 1 inch (2.5 cm) in length and thickness and must NOT contain dry food (food with insufficient amount of water, very hard ingredients (such as coffee beans, soybeans, rice, ice cubes or frozen foods), or foods or liquids with a temperature greater than 80°C;
 - allow hands, hair, clothing, curtains, spatulas and any other objects to come into contact with the appliance's motor and accessories to avoid personal injury or damage to the machine when the appliance is in operation;
 - place the appliance (or any part of the appliance) in the oven, microwave oven or freezer for heating or cooling, so as to avoid breaking or damaging it;
 - touch the blades as they are VERY SHARP! Hold the base of the Blender Blade assembly, Grinder Blade assembly or Chopper Blade assembly while installing, removing or cleaning;
 - **operate the appliance for more than 1 minute for blending and 30 seconds for grinding, mincing or chopping without interruption. Let the appliance rest between processing cycles for 2 minutes. After 3 processing cycles, allow an interval of 15 minutes to let the appliance cool down before the next use so as to prolong its service life. DO NOT allow the appliance to idle while in operation;**
 - rotate the Speed Knob or press the Ice Button too forcefully so as to avoid any damage;
 - detach the Blender Jug, Grinder Cup or Chopper Cup while the appliance is in operation;
 - leave the appliance unsupervised during operation.
15. During operation, DO NOT touch the appliance with wet body parts, and it is recommended to have between you and the standing surface, an isolating element (for example, wearing shoes with rubber soles).
16. DO NOT soak the Motor unit in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the appliance to prevent electric shock. In case of accidental fall in water, DO NOT try to take it out, but first of all switch the appliance off.

17. Switch the appliance OFF before unplugging the appliance. Plug and unplug the power cable firmly holding it with dry hands. Always unplug the power cable before changing accessories; to avoid overheating; if it is NOT used for a long period and before storing, cleaning or performing any maintenance operation. Remember that the blades may still be moving after the power cable is unplugged! Prior to the latter, leave to cool for at least 10 minutes.
18. Wash the Cap, Lid, Blender Jug & Blender Blade assembly, Grinder Cup, Grinder Cup Cover & Grinder Blade assembly, Chopper Cup, Chopper Cup Cover & Chopper Blade assembly and utensils immediately after usage to avoid build-up of bacteria. (Warning: Blades are sharp!).
19. In the event the mixing of the food items produce bubbles, stop the operation immediately and wait until the production of bubbles ceases before resuming blending.
20. In case of malfunction or anomaly during the functioning such as smoke coming out of the appliance, switch the wall switch OFF and unplug the power cable from the wall socket. Check the cause of the anomaly, if possible, with the support of a qualified person.
21. This appliance is NOT intended for commercial use but to be used in households and similar applications, such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - By clients in dormitories hotels, motels and other residential environments;
 - Bed and breakfast type environments.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall NOT play with the appliance. Cleaning and user maintenance shall NOT be made by children unless they are older than 8 and supervised. Keep the appliance and its cable out of reach of children less than 8 years old.
23. Save these instructions.

Safety Protection

If the appliance overheats, the thermal switch will be activated, leading to the motor being shut off. Press the '0' (OFF) Speed Button, switch the wall switch off and unplug the power cable from the wall socket. Allow the appliance to cool for at least 30 minutes (or until the appliance has returned to room temperature) before using the appliance.

If either the Blender Jug, Grinder Cup or Chopper Cup is NOT locked in place, the built-in switch ensures that the appliance will not work.

HOW TO USE

Clean the Motor unit and accessories before using. Refer to the section "How to clean and maintain" immediately following this section.

Place the Base of the Motor unit on a flat, dry and heat-resistant surface.

The Blender

1. Place the Sealing Ring on the inner edge of the Blender Blade assembly (if not attached).
2. Attach the Blender Blade assembly to the Blender Jug by turning it clockwise until it is securely (but NOT overly) tightened to the Blender Jug.
This is to prevent the thread lining the bottom of the Blender Jug from being stripped away. If that happens, the Blender Jug and Blender Blade assembly would not have a watertight fit.
3. Wash the fruit/s and/or vegetables, then peel and cut into no larger than 1 inch (2.5 cm) cubes. Add liquids such as water or milk, then place the cut fruits or vegetables into the Blender Jug with the, topped off with yoghurt or ice cream if desired. Place small portions into the Jug bit by bit instead of blending all at once. You can pause blending, remove the Cap, add fresh ingredients, replace the Cap and continue blending. The total volume should NOT exceed the MAX mark.
Note: For optimal performance, place the ingredients in the Blender Jug according to the following sequence: Liquids, fresh ingredients, frozen fruits, yoghurt, ice cream
4. Attach the Lid to the Blender Jug and turn it clockwise until it is locked in place. Insert the Cap into the Lid by firmly pressing it downwards.

5. Place the filled Blender Jug (with the Blender Blade assembly) on top of the Motor unit. Screw the Blender Jug clockwise. Ensure that the Blender Blade assembly has locked tightly in place.
6. Set the Speed Knob to '0' (OFF). Plug the power cable into the wall socket and switch ON. Rotate the Speed Knob to '1', '2' or '3' and blend until the desired consistency is achieved.

No matter whether at Speeds '1', '2' or '3', rotating and holding the Speed Knob at 'P' (Pulse) will produce a short burst at maximum speed. When the Speed Knob at 'P' (Pulse) is released, it will return to the original speed.

For blending solid or very thick liquid ingredients, use the Blender in 'P' (Pulse) mode to prevent the blades from becoming stuck.

Place one hand on top of the Lid when blending to stabilise the appliance. DO NOT operate the appliance for more than 1 minute without interruption. Let the appliance rest for 2 minutes between processing cycles. After 3 processing cycles, allow an interval of 15 minutes to let the appliance cool down before the next use, so as to prolong its service life. DO NOT allow the appliance to idle while in operation.

7. When blending has completed, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable.
8. Wait for the blades to stop turning. Turn the Blender Jug (with the Blender Blade assembly) anti-clockwise to unlock until it detaches from the Motor unit. Lift the Blender Jug out of the Motor unit.
9. Detach the Lid from the Blender Jug by turning it anti-clockwise and the contents may be poured out.

Crushing Ice

10. Before using the Blender to crush ice, make sure it is clean and rinse it out thoroughly.
11. Repeat steps 1 and 2.
12. Replace the fruit/s and/or vegetables in step 3 with ice. Ice cubes come in many shapes and sizes. Insert a maximum of 12 ice cubes and add 60 ml of cold water. DO NOT be tempted to increase the number of ice cubes and blend for longer – this will not work. Too much ice will never give you satisfactory results.
13. Repeat steps 4 and 5.
14. Set the Speed Knob to '0' (OFF). Plug the power cable into the wall socket and switch ON.
15. Press the Ice Button and blend until the desired consistency is achieved. Note that too much blending will reduce the ice to liquid, too little will merely chip the edges/corners off the ice. DO NOT try to crush ice without adding water into the jug. Place one hand on top of the Lid when blending to stabilise the appliance. DO NOT operate the appliance for more than 1 minute without interruption. Let the appliance rest for 2 minutes between processing cycles. After 3 processing cycles, allow an interval of 15 minutes to let the appliance cool down before the next use, so as to prolong its service life. DO NOT allow the appliance to idle while in operation.
16. When blending has completed, depress the Ice Button, switch off the wall switch and unplug the power cable.
17. Repeat steps 8 and 9

only if a Jam occurs: DO NOT continue blending if the blade is jammed.
--

Set the Speed Knob to '0' (OFF). Switch off the wall switch and unplug the power cable.

Wait for the blades to stop turning.

Detach the Lid from the Blender Jug by turning it anti-clockwise. Clear the jam. (Occasionally, the blockage may require that the Blender Jug be detached from the Motor unit before clearing. Unscrew the Blender Jug with the Blender Blade assembly anti-clockwise from the Motor unit and detach).
--

Once the Jam is cleared, (re-attach the Blender Jug with the Blender Blade assembly to the Motor unit by screwing the Blender Jug clockwise), re-attach the Lid to the Blender Jug and turn it clockwise until it is locked in place.

Perform steps 5 – 9 again.

The Grinder (Mincer) and the Chopper

(used for grinding or chopping dry and hard foodstuffs: spices, coffee beans, seeds, almonds, etc. and mincing meat, garlic, ginger, onions, chillies, etc.)

1. Separate the Grinder / Chopper Blade assembly from the Grinder / Chopper Cup.
2 ways to separate the Grinder / Chopper Blade assembly from the Grinder / Chopper Cup
 - Holding the Grinder / Chopper Cup, turn the Grinder / Chopper Blade assembly clockwise
 - Holding the Grinder / Chopper Cup, turn the Grinder / Chopper Blade assembly anti-clockwise
2. Place the Sealing Ring on the inner edge of the Grinder / Chopper Blade assembly (if not attached) securely.
3. Attach the Grinder / Chopper Blade assembly to the Grinder / Chopper Cup by holding the Grinder / Chopper Cup and turning the Grinder / Chopper Blade assembly clockwise until it is securely (but NOT overly) tightened to the Grinder / Chopper Cup.
4. With the mouth of the Grinder / Chopper Cup facing upwards, place food ingredients into the Grinder / Chopper Cup. Lock the Grinder / Chopper Cup Cover into place on the Grinder / Chopper Cup and ensure that it is secure.
5. Place the Grinder / Chopper Cup (with the Grinder / Chopper Blade assembly) containing food ingredients on top of the Motor unit.
Screw the Grinder / Chopper Cup clockwise. Ensure that the Grinder / Chopper Blade assembly has locked tightly in place.
6. Set the Speed Knob to '0' (OFF).
Plug the power cable into the wall socket and switch ON.
Rotate the Speed Knob to '1', '2' or '3' and grind / mince / chop until the desired consistency is achieved.

No matter whether at Speeds '1', '2' or '3', rotating and holding the Speed Knob at 'P' (Pulse) will produce a short burst at maximum speed. When the Speed Knob at 'P' (Pulse) is released, it will return to the original speed.

For grinding, mincing or chopping very hard ingredients, use the Grinder / Chopper in 'P' (Pulse) mode to prevent the blades from becoming stuck.

Place one hand on top of the Grinder / Chopper Cup when grinding, mincing or chopping to stabilise the appliance. DO NOT operate the appliance for more than 30 seconds without interruption. Let the appliance rest for 2 minutes between processing cycles. After 3 processing cycles, allow an interval of 15 minutes to let the appliance cool down before the next use, so as to prolong its service life. DO NOT allow the appliance to idle while in operation.

7. When grinding, mincing or chopping has completed, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable, press the '0' (OFF) Speed Button. Switch off the wall switch and unplug the power cable.
8. Wait for the blades to stop turning.
 - Turn the Grinder / Chopper Cup (with the Grinder / Chopper Blade assembly) anti-clockwise until it detaches from the Motor unit.
 - Lift the Grinder / Chopper Cup out of the Motor unit.
9. Detach the Grinder / Chopper Cup Cover from the Grinder / Chopper Cup and the contents may be poured out.

only if a Jam occurs: DO NOT continue grinding, mincing or chopping if the blade is jammed.

Set the Speed Knob to '0' (OFF). Switch off the wall switch and unplug the power cable.

Wait for the blades to stop turning.

Detach the Grinder / Chopper Cup Cover from the Grinder / Chopper Cup. Clear the jam.

(Occasionally, the blockage may require that the Grinder / Chopper Cup be detached from the Motor unit before clearing. Unscrew the Grinder / Chopper Cup with the Grinder / Chopper Blade assembly anti-clockwise from the Motor unit and detach).

Once the Jam is cleared, (re-attach the Grinder / Chopper Cup with the Grinder / Chopper Cup Blade assembly to the Motor unit by screwing the Grinder / Chopper Cup clockwise). Lock the Grinder / Chopper Cup Cover into place on the Grinder / Chopper Cup.

Perform steps 6 – 9 again.

HOW TO CLEAN AND MAINTAIN

1. On the completion of blending, grinding, mincing or chopping, rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable.
2. Wait for the blades to stop turning. Clean the Motor unit with a damp cloth. DO NOT immerse the Motor unit in water or other liquids, and avoid spraying water, in order to avoid damage or leakage.
3. Wash the Cap, Lid, Blender Jug & the Blender Blade assembly, Grinder Cup & Grinder Blade assembly, Chopper Cup, Chopper Cup Cover & Chopper Blade assembly and utensils before and after use with water & detergent with a non-abrasive sponge to avoid build-up of bacteria. Blades are sharp!
DO NOT use a steel wire sponge, abrasive cleaners or corrosive liquids such as gasoline or acetone to clean the appliance & accessories.
Never attempt to sterilise any part of this appliance with hot water or steam by utilising a steamer, frying pan, oven, microwave oven, kettle, etc.
4. Dry the components with a soft, dry cloth. Attach the Blender Blade assembly to the Blender Jug, attach the Lid to the Blender Jug, insert the Cap into the Lid and then place the Blender Jug in the Motor unit. Attach the Grinder / Chopper Blade assembly to the Grinder / Chopper Cup and lock the Grinder / Chopper Cup Cover into place on the Grinder / Chopper Cup.
5. Place the appliance & accessories in dry and well-ventilated storage. Avoid direct sunlight.

Auto Clean

6. Empty the Blender Jug (with the Blender Blade assembly) and rinse it with water. Fill the Blender Jug with warm water.
7. Attach the Lid to the Blender Jug and turn it clockwise until it is locked in place. Insert the Cap into the Lid by firmly pressing it downwards.
8. Place the filled Blender Jug (with the Blender Blade assembly) on top of the Motor unit. Screw the Blender Jug clockwise. Ensure that the Blender Blade assembly has locked tightly in place.
9. Set the Speed Knob to '0' (OFF). Plug the power cable into the wall socket and switch ON. Rotate and hold the Speed Knob at 'P' (Pulse) for a few seconds to clean the Blender Jug and Blender Blade assembly very quickly and safely. Place one hand on top of the Lid when blending to stabilise the appliance.
10. Rotate the Speed Knob to '0' (OFF), switch off the wall switch and unplug the power cable.
11. Wait for the blades to stop turning. Turn the Blender Jug (with the Blender Blade assembly) anti-clockwise to unlock until it detaches from the Motor unit. Lift the Blender Jug out of the Motor unit.
12. Detach the Lid from the Blender Jug by turning it anti-clockwise.
13. Wash the Cap, Lid, Blender Jug & the Blender Blade assembly.

PROBLEM SOLVING

Fault symptom	Cause analysis	Troubleshooting
After the Blender Jug or Grinder Cup is installed, the appliance does not work after pressing the switch	Safety lock is not connected	Reconnect the Motor unit and the Blender Jug or Grinder / Chopper Cup
	The motor is damaged or stuck	Switch off the wall switch and unplug the power cable. Turn the motor shaft (not with your fingers – use a wooden chopstick). Plug the power cable into the wall socket and switch ON. If it still does not work, please send to the nearest service centre for inspection.
	Check if the power cable is loose.	If the appliance still does not work, replace with a new power cable.
When using the appliance for the first few times, the motor gives off an unpleasant smell	This is the leftover oil or grease burning off.	It is a normal phenomenon when a new motor is initially used. The smell will disappear with use.
The blades get stuck	The blades are entangled or stuck by ingredients	Remove the Blender Jug or Grinder / Chopper Cup, take out the ingredients, and cut the ingredients into smaller pieces or put less ingredients. Refer to “only if a Jam occurs” in “How to Use” section for step-by-step instructions.
The appliance stops working after a few processing cycles	The motor was not given enough time to cool down between processing cycles / the motor was allowed to idle while in operation	Wait half an hour before using the appliance. If it still does not work, please send to the nearest service centre for inspection. This is NOT covered by Warranty

SPECIFICATION

MODEL	PPBL906
VOLTAGE	220-240V~
FREQUENCY	50-60Hz
POWER	600W

ENVIRONMENTAL TIP

This appliance, along with all other electronic appliances, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the appliance at your local recycling centre.

DISPOSAL: Do not dispose this appliance as unsorted municipal waste.

Collection of such waste separately for special treatment is necessary.

Risk of child or animal entrapment

Before you discard this appliance, please remove all doors and leave the shelves inside so that children or animals may not easily get trapped inside.

WARRANTY

Warranty Conditions

1. This warranty provides against defective materials and manufacturing faults throughout for two years from the date of purchase of the appliance covering the Motor only, subject to correct usage of the appliance. The warranty on the Compressor is 10 years; fluorescent light tubes of Mosquito Insect Repellents is 6 months; rechargeable batteries are also 6 months; all are subject to the same conditions as above.
2. This warranty also does not cover normal wear and tear, replacement of consumable materials and accessories, and the cost of maintenance of the appliance.
3. This warranty does not cover the repair or replacement of part/s damaged by misuse, accidents, negligence, alterations, or modifications in any way, or repairs done by any repair organisation without the prior consent of PowerPac Electrical Pte Ltd.
4. Repair and service are to be performed at: 5 Changi South Lane #03-01 Singapore 486045. A transport fee will be charged for personal doorstep service.
5. The original purchaser of the appliance must furnish proof of purchase to our Service Centre with the email or number as registered during submission of warranty when this appliance is sent for repair/service. Failure to do so may delay the receipt of said repair/service by the customer.
6. Under no circumstances whatsoever shall the serial number be erased, defaced or altered by the customer and/or his representatives, or the dealer and/or his agents. Failure to ensure this shall invalidate the warranty.
7. This warranty is deemed to be void if the defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generators.
8. This warranty is valid in Singapore only.
9. This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer.
10. Please refer to the attached picture for the location of one of our appliance's serial number, as an example.

Please complete the on-line registration warranty form available on our website. There is no further requirement to send us any hard copy as part of our efforts to save the environment. In accordance with the terms and conditions of this limited warranty as stated above, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.



E-Register scan



E Warranty Registration

Please complete the on-line registration warranty form below.
There is no further requirement to send us any hard copy as part of our efforts to save the environment.

In accordance with the terms and conditions of this limited warranty as stated below, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.

This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer

E-Register scan



Product Serial No



Refer rating label at
bottom of product



PowerPacSG 



@powerpacsg 



Tanah Merah Stn Exit B »» Bus No. 2/9/48(Stop ID: 85091)
»» 5 min (4 stops) »» Bef Changi Fire Stn (Stop ID: 85071)
»» Walk About 6 min, 500m



Simei MRT »» Bus No. 9 (Stop ID: 85079) »» 6 min (3 stops)
»» Flextronic (Stop ID: 96161) »» Walk About 6 min, 500m

OFFICE / SERVICE CENTER

PowerPac Electrical Pte Ltd

Tel: 6214 9555

Address: 5 Changi South Lane, #03-01 S(486045)



*Thank
you!*
*for your
purchase*

CODE
THANKYOU15

WE ARE OFFERING A
**15% OFF STOREWIDE FOR
YOUR NEXT PURCHASE AT
WWW.POWERPAC.COM.SG**



TERMS AND CONDITIONS

One time usage with minimum spend of \$30

This promo code is valid within 3 months for purchases made through powerpac.com.sg
This promo code cannot be applied with any promotions, offers and privileges, unless otherwise stated.*

*We reserve the right to modify, cancel and limit any promotion or offer.

In case of any dispute, our company reserves the rights of final and conclusive decision.

THIS IS HOME TRULY