



HIGH COUNTRY 80"
IS PICTURED

FREESPIRIT
RECREATION

HIGH COUNTRY PREMIUM

**HIGH COUNTRY
PREMIUM SERIES
55"/63"/80"
INSTRUCTION MANUAL**

DEAR FREESPIRIT FAMILY,

As a family owned and operated business, it is our hope that as you get out there and use the Freespirit products, you feel like a part of our extended family and also feel like we are all out there exploring this great planet *together.*

Our goal at Freespirit Recreation has always been to re-invent the roof top tent from the ground up. We work hard to create the best designs using the best products that allow for a fast and easy set-up. We want you spending more time *exploring and enjoying life.*

You have asked us to be innovative, to provide the best quality, to provide great customer service, and to keep creating products that *Elevate Your Adventure* so stay in touch with us!

**Follow us on social media and on our website, www.gofsr.com.
Have questions for us?
Reach out, we are here to help!
sales@gofsr.com**

**Oh, and because we have to put this in here...
PLEASE REVIEW THIS INSTRUCTION MANUAL BEFORE USING
YOUR ROOF TOP TENT.**

From the Freespirit family to you, *THANK YOU*** for your purchase.
We hope that it really will *Elevate Your Adventure!***

**Renee Tewes: President and Team Leader, Customer Service
Tanner Tewes, Team Leader: Sales and Product Innovation
Kristine Sewell, Team Leader: Marketing
Ben Tewes, Team Leader: Sales and Product Innovation**

TABLE OF CONTENTS:

PRODUCT OVERVIEW (PAGE 4)

PRODUCT SPECIFICATIONS (PAGE 4-6)

PRODUCT FRAME (PAGE 6)

INSTALLING YOUR ROOFTOP TENT (PAGE 7-9)

SETTING UP YOUR ROOFTOP TENT (PAGE 9-10)

TAKING DOWN YOUR ROOFTOP TENT (PAGE 11)

**GENERAL MAINTENANCE, IMPORTANT NOTES, TROUBLESHOOTING
(PAGE 12)**

INCLUDED TOOLS (PAGE 13)

PRODUCT OVERVIEW:

The High Country Premium Series Rooftop Tents are designed to maximize space for people and gear when opened but also have a minimal footprint when closed and stored. It is known as our “fold out” rooftop tent because using the built-in telescopic ladder you can set it up in seconds by folding it out from the closed position. The High Country Series Rooftop Tents can easily be installed and set-up with 2 people.

It is available currently in three sizes: 55”, 63”, and 80”. The 55” size is roughly the size of a full size mattress. The 63” is roughly the size of a queen size mattress. And the 80” is roughly the size of a king size mattress. The 80” is also the ONLY High Country Series Rooftop tent that uses stabilizer poles to the ground for extra support.

PRODUCT SPECIFICATIONS:

- 1. The entire frame uses aluminum alloy and the joints are made of strong nylon.**
- 2. There is a double layer of silver coating treatment for the outer tent material to offer better heat insulation and to make it water resistant.**
- 3. 3" foam mattress provides comfortable sleep experience.**
- 4. Telescopic aluminum alloy ladder is removable and supports weight up to 350 lb.**

HIGH COUNTRY 55" PREMIUM PRODUCT SPECIFICATIONS:

55" Premium Dimensions	55"L X 98"W X 47"H
Exterior Closed Dimensions	60"L X 52"W X 14"H
Weight	154 lbs
Sleeping Capacity	2-3 people
Weight Capacity	750 lbs
Tri-Layer Body	3 Layers of 150D Poly-Oxford with 60g/M2 Poly-fil
Rainfly	210D Rip-Stop Poly-Oxford with Silver Coating and 3,000mm Polyurethane Coating
Mattress	1.5" High Density Foam
Flooring	2" EPE foam
Frame	Extruded Aluminum Alloy


HIGH COUNTRY 63" PREMIUM PRODUCT SPECIFICATIONS:

63" Premium Dimensions	63"L X 98"W X 47"H
Exterior Closed Dimensions	68"L X 52"W X 14"H
Weight	162 lbs
Sleeping Capacity	3-4 people
Weight Capacity	750 lbs
Tri-Layer Body	3 Layers of 150D Poly-Oxford with 60g/M2 Poly-fil
Rainfly	210D Rip-Stop Poly-Oxford with Silver Coating and 3,000mm Polyurethane Coating
Mattress	1.5" High Density Foam
Flooring	2" EPE foam
Frame	Extruded Aluminum Alloy

HIGH COUNTRY 80" PREMIUM PRODUCT SPECIFICATIONS:

80" Premium Dimensions	80"L X 98"W X 50"H
Exterior Closed Dimensions	85"L X 52"W X 14"H
Weight	182 lbs
Sleeping Capacity	3-5 people
Weight Capacity	750 lbs
Tri-Layer Body	3 Layers of 150D Poly-Oxford with 60g/M2 Poly-fil
Rainfly	210D Rip-Stop Poly-Oxford with Silver Coating and 3,000mm Polyurethane Coating
Mattress	1.5" High Density Foam
Flooring	2" EPE foam
Frame	Extruded Aluminum Alloy

PRODUCT FRAME:

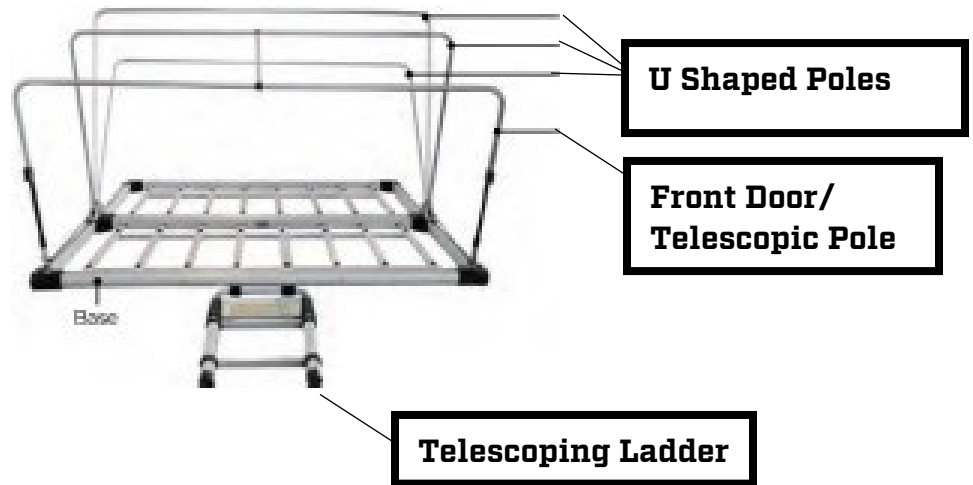

INSTALLING YOUR HIGH COUNTRY PREMIUM SERIES ROOF TOP TENT ON YOUR ROOF RACK:

IMPORTANT NOTE:

We recommend that any of the High Country Premium Series Rooftop Tents be installed on a separate roof rack on top of your vehicle, one that can handle over 200lbs of dynamic load. We do offer some roof racks on our website or you can purchase them from several companies including Rhino Rack, Yakima, Thule, Dee-Zee, etc. If you have any questions on which roof rack will work for your specific vehicle, please reach out to the roof rack company directly.

The distance between the High Country Premium Series Rooftop Tents and the roof rack should not exceed more than 1.5”.

INSTALLATION STEPS:


1. Please make sure that your roof rack is correctly fitted and installed to your vehicle before installing the rooftop tent.
2. Lift the rooftop tent onto the roof rack on top of the vehicle.
3. Adjust the rooftop tent so that it is centered on the roof of the vehicle. If the vehicle has a rear door ensure it can be opened and closed.
4. Slide the M8x50 bolt into the rails from both sides ensuring you have positioned 8 in total (see picture 1), then replace the plastic end caps of your roof racks (see picture 2).



Picture #1



Picture #2

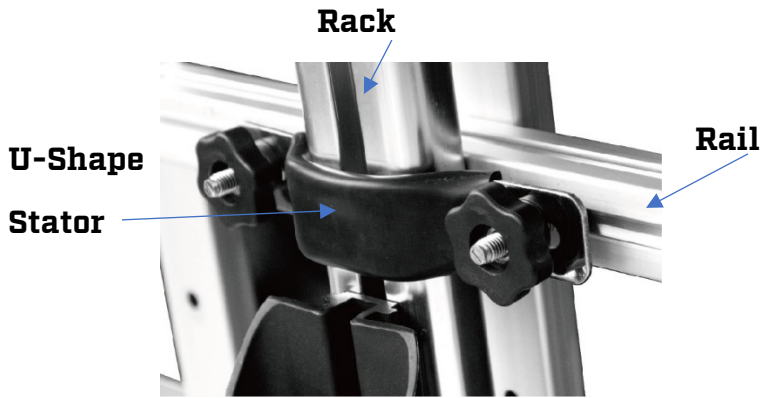

U-Shape Stator:




Plastic Nut (8 Total):




M8x50 Bolts (8 total):



M8 Flat Washer & M8 Arc Washer:

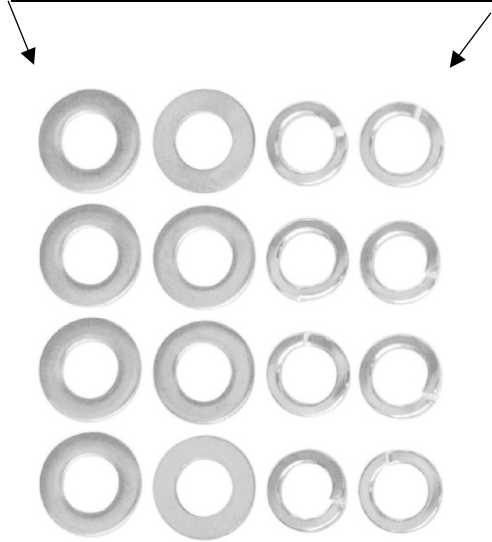


Plastic End Cap or Cover for Rail on Roof Rack:

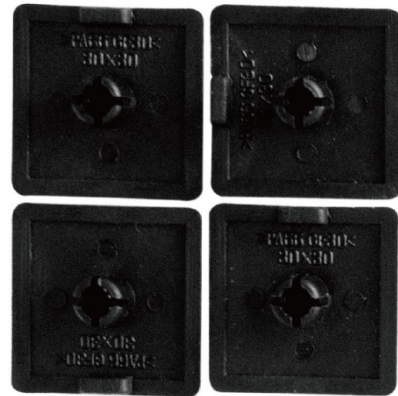

SETTING UP YOUR HIGH COUNTRY PREMIUM SERIES ROOFTOP TENT:

1. From the top of the rooftop tent, pull the telescoping ladder out completely.
2. Use the ladder as a lever to press down and fold out the rooftop tent so that it is open.

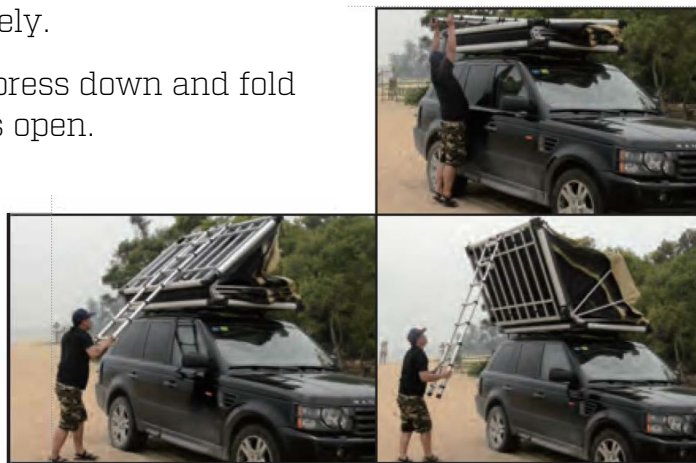

3. Put the ladder to the ground and adjust the ladder length



4. Take out the adjustable support poles (for use with the High Country 80" ONLY) and insert the pin into the plastic clip

5. Adjust the pole length to the floor and rotate the two parts of poles up and down to lock the pole.



6. Stand on the ladder, pull out the telescopic pole of the rainfly and lock the pole in place on the sides with the button pins.



**You High Country Premium Series Rooftop Tent is set-up and ready....
it's time to *Elevate Your Adventure!***

TAKING DOWN THE HIGH COUNTRY PREMIUM SERIES ROOFTOP TENT:

1. If using the High Country 80", remove support poles.
2. Press down two telescopic pole of the rainfly and lift the ladder to fold the roof top tent closed.



3. Press the ladder's unlocking device to shorten the ladder and store it on top of the rooftop tent.



4. You can use the red rubber strip to tie the rear side of roof tent. Cover the tent with the PVC cover on top of the tent and buckle the straps down before driving.



GENERAL MAINTENANCE:

- 1. Before you pack up the tent, please make sure the fabric is dry.**
- 2. Keep the rail of the base clean and dry.**
- 3. Leave windows partially open when opening and closing.**
- 4. Please make sure you don't leave your tent on top of your car for long periods of time in extreme weather conditions, prolonged rain or extreme sun/heat.**

IMPORTANT NOTES:

- 1. When packing away the tent, ensure there is no other objects in the tent (like sleeping bag, pillow).**
- 2. Don't put heavy objects on the tent when the tent is closed to avoid damaging the frame.**
- 3. Clean and wipe the tent with wet rag instead of machine washing or hand washing (cover of the mattress is washable).**
- 4. Check the connecting points of the tent to the car rack; ensure all points are properly locked.**
- 5. Please don't jump when inside the tent because the uneven force could damage the tent.**
- 6. Always keep the tent closed when you are driving.**
- 7. In extremely windy weather conditions, please do not open the tent.**
- 8. If there is abnormal noise when setting up or folding down the tent, please check the rail and all connection joints right away.**


TROUBLESHOOTING TIPS (IF NEEDED):

If the tent stops working, check the following:

- 1. Check if the screw of Aluminum pole is loose**
- 2. Check if the fabric is dragged into the stretcher pole**
- 3. Check if the rail of base is broken**

INCLUDED TOOLS:

The tool bag is found **INSIDE** the rooftop tent. It can either be found in the shoe bag or sitting on the mattress when you open the tent.

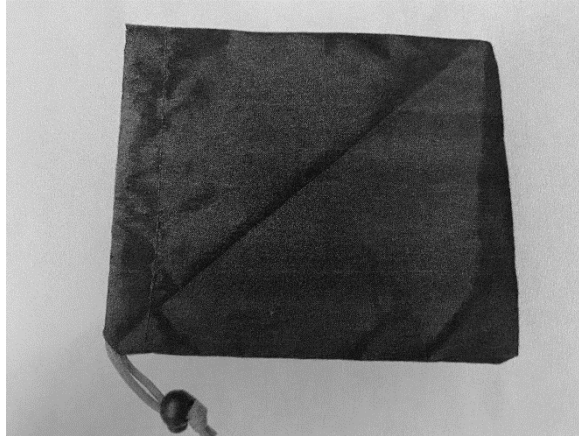

FREESPIRIT
RECREATION

**Freespirit Denver
120 Capital Drive
Golden, CO 80410**

**Freespirit Bend
2453 NE 4th Street Suite 110
Bend, OR 97701**

WWW.GOFSR.COM

Have Questions? Please reach out to sales@gofsr.com.

#gofsr