

Raising and lowering Liberty Telescopic Flagpole

Your pole is shipped in a lock position.

TO RAISE POLE:

- Starting with the smallest diameter pole section, turn pole section clockwise (right) to completely unlock. (Remember pole is shipped locked)
- *Place one hand on the smallest diameter pole and your other hand on the next size larger pole.*
- Extend the pole section fully until it stops (cannot extend further).
- Turn pole section clockwise (right) until button extends into round hole (located on section below).
- Once button is locked in, turn pole counter clockwise (left) to engage and lock pole.
 - *Arrows can be used as guide to line up button hole.*
 - Repeat for each additional section until pole is fully raised.

TWIST CLOCKWISE (RIGHT) TO UN-LOCK



TWIST COUNTER CLOCK- WISE (LEFT) TO LOCK



TO LOWER POLE:


- Starting with largest diameter pole (base section), twist upper pole section clockwise (right) to unlock.
- Once unlocked, carefully disengage button by pushing in and twisting pole section right to clear from hole. Lower pole section completely until it stops.
- Repeat for each additional pole section until flagpole is fully lowered.

Your Liberty EZPOLE Flagpole No Drop Posi Lock system is a dual Cam and button lock system locking your pole in place. The pole is designed to lock at any height within each section with a simple **twist** of the Cam lock and designed to **lock without the button**. The **button is designed as a backup lock** in case the CAM lock unlocks into neutral position.



**PINCH
POINT**

Assembly Instructions Liberty Telescopic Flagpole

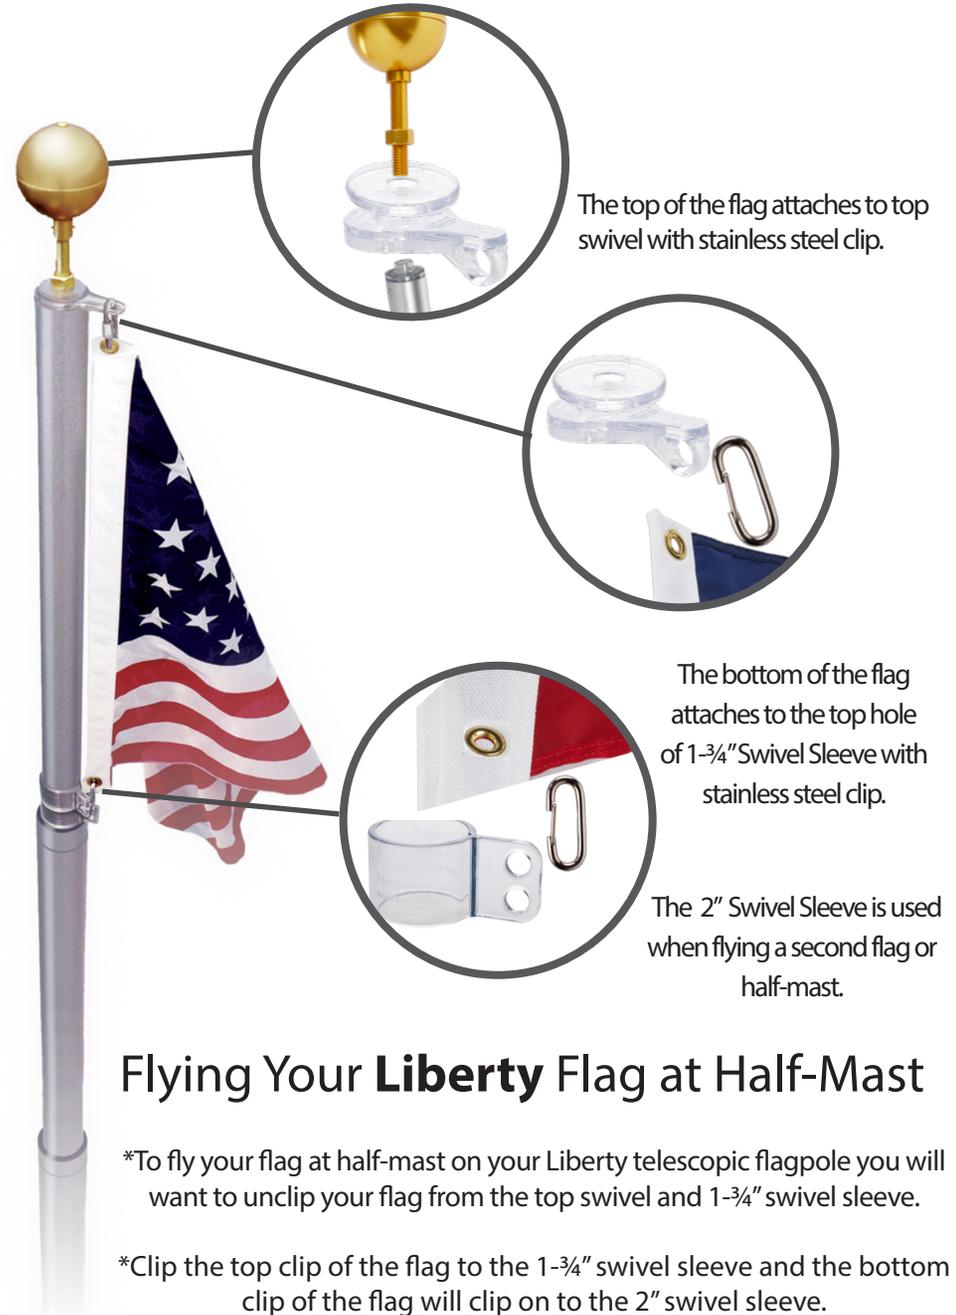

Flying Your Liberty Flag at Half-Mast

*To fly your flag at half-mast on your Liberty telescopic flagpole you will want to unclip your flag from the top swivel and 1-3/4" swivel sleeve.

*Clip the top clip of the flag to the 1-3/4" swivel sleeve and the bottom clip of the flag will clip on to the 2" swivel sleeve.