



## To Raise and Lower Pole

1. Extend top section completely (pull up smallest diameter pole first) to reveal arrows, then extend the next section below it so the button hole is exposed (approximately 6 inches).
2. To engage No Drop Posi-Loc<sup>®</sup> on each section, hold the lower section still while turning upper pole clockwise (left) until arrows line up with button hole on the section below it.
3. Once button snaps into position, turn upper section back counterclockwise (right) to lock. Repeat for the following two sections.

To lower pole, disengage button and turn upper pole clockwise (left).

To prolong the life of the pole, be sure to use both locking systems.