


510535 MAIN WIRE HARNESS - BRIGGS & STRATTON 61G877 EFI ENGINES


510535G

(If internal schematic of the switch is not shown, the image of the switch represents the back view of the connector as it is connected to the switch.)

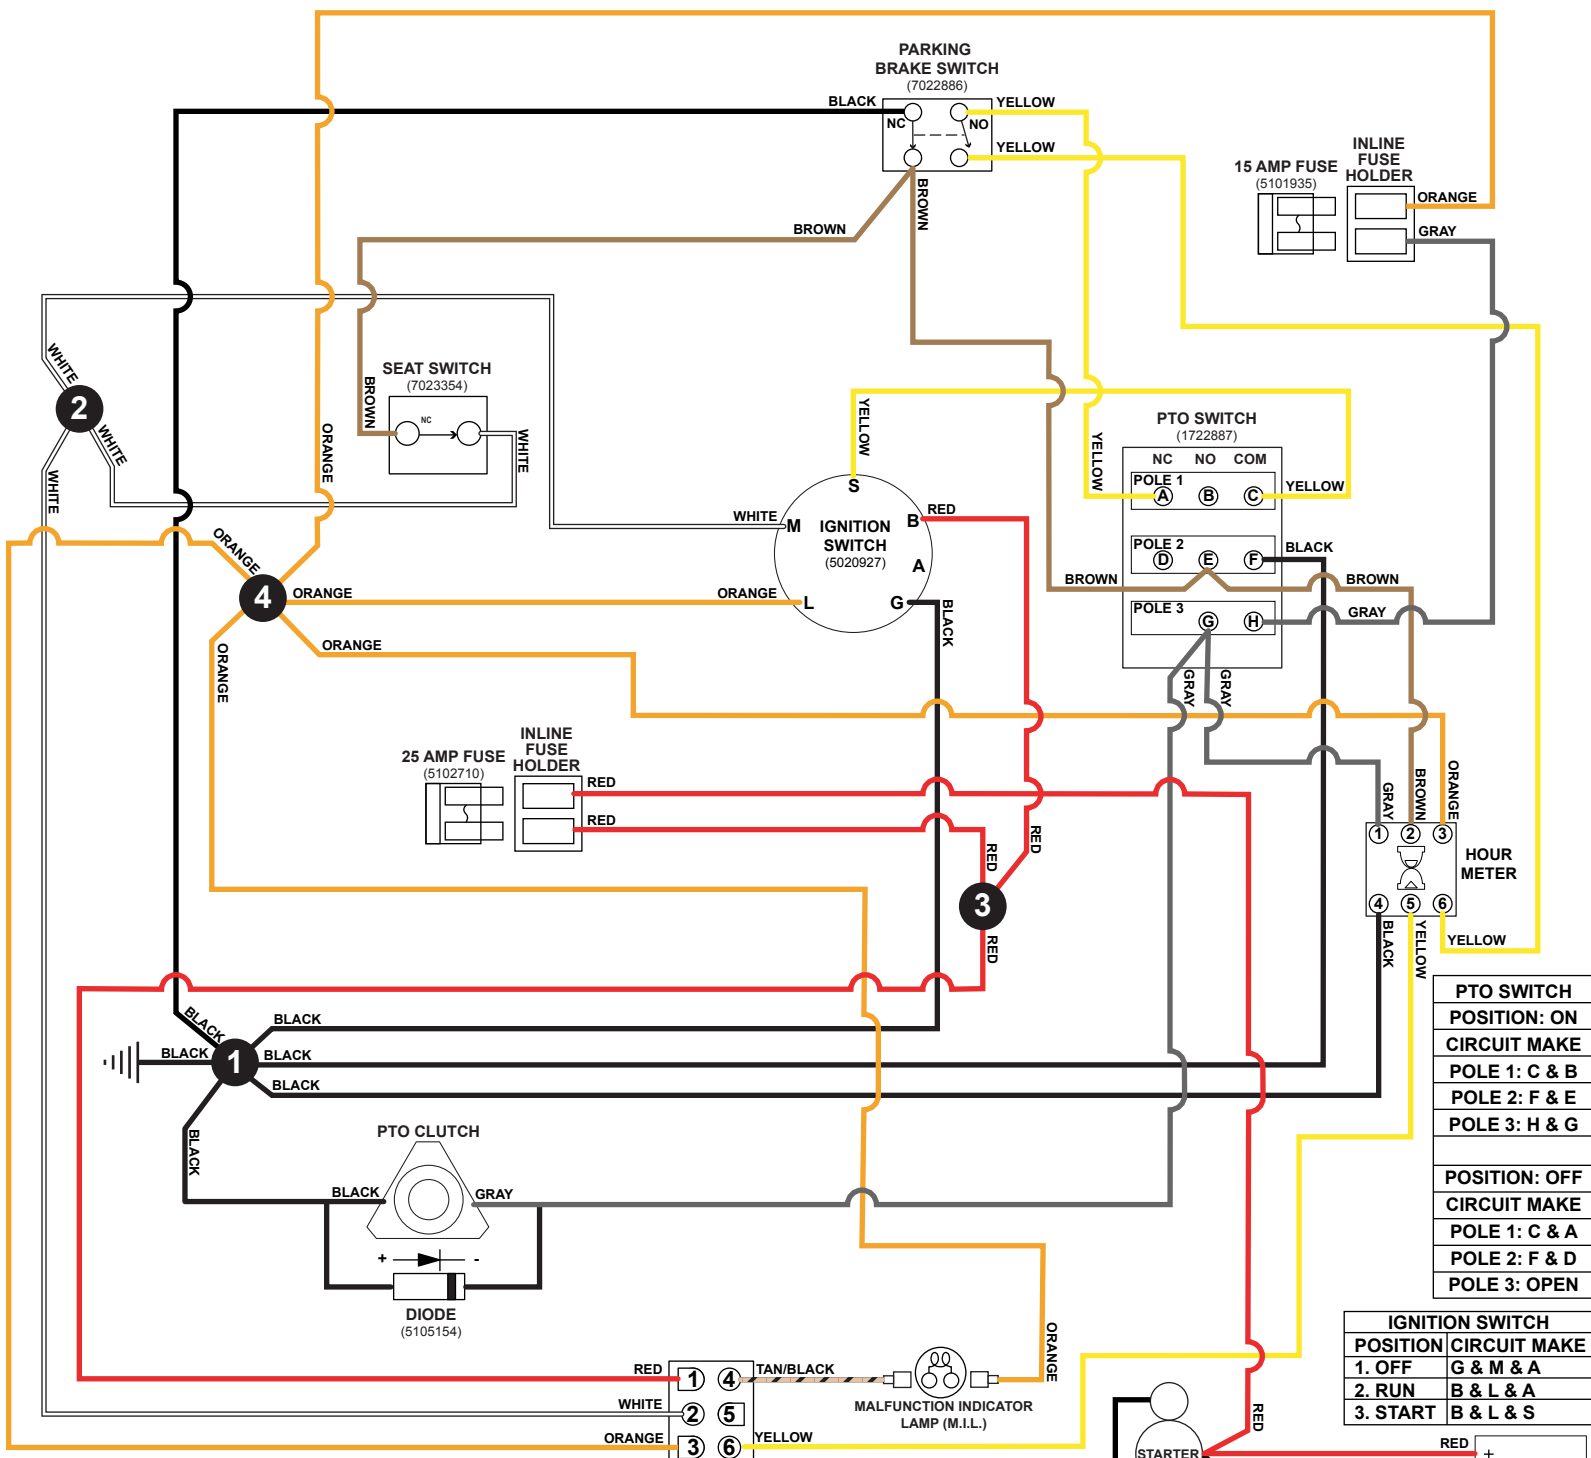


| PTO SWITCH | |
|------------|---------------|
| POSITION | CIRCUIT MAKE |
| ON | POLE 1: C & B |
| OFF | POLE 1: C & A |
| ON | POLE 2: F & E |
| OFF | POLE 2: F & D |
| ON | POLE 3: H & G |
| OFF | POLE 3: OPEN |

| IGNITION SWITCH | |
|-----------------|--------------|
| POSITION | CIRCUIT MAKE |
| 1. OFF | G & M & A |
| 2. RUN | B & L & A |
| 3. START | B & L & S |

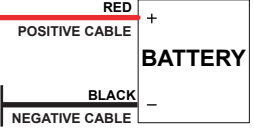

5108058 / JUMPER HARNESS

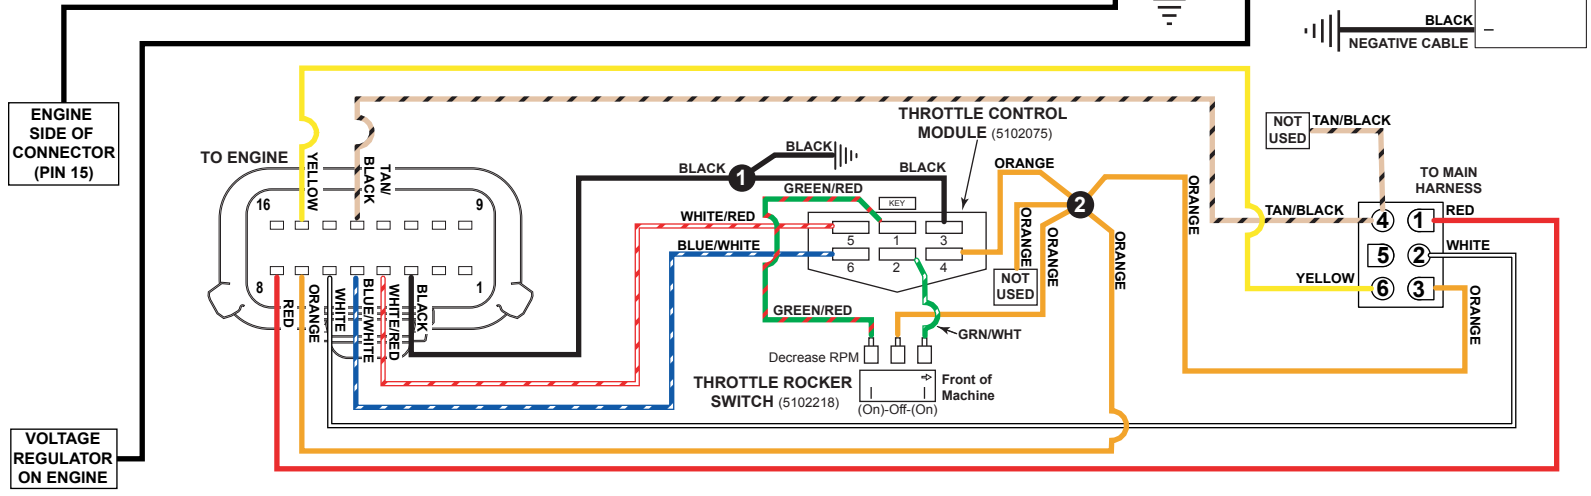

VOLTAGE REGULATOR ON ENGINE