


(If internal schematic of the switch is not shown, the image of the switch represents the back view of the connector as it is connected to the switch.)

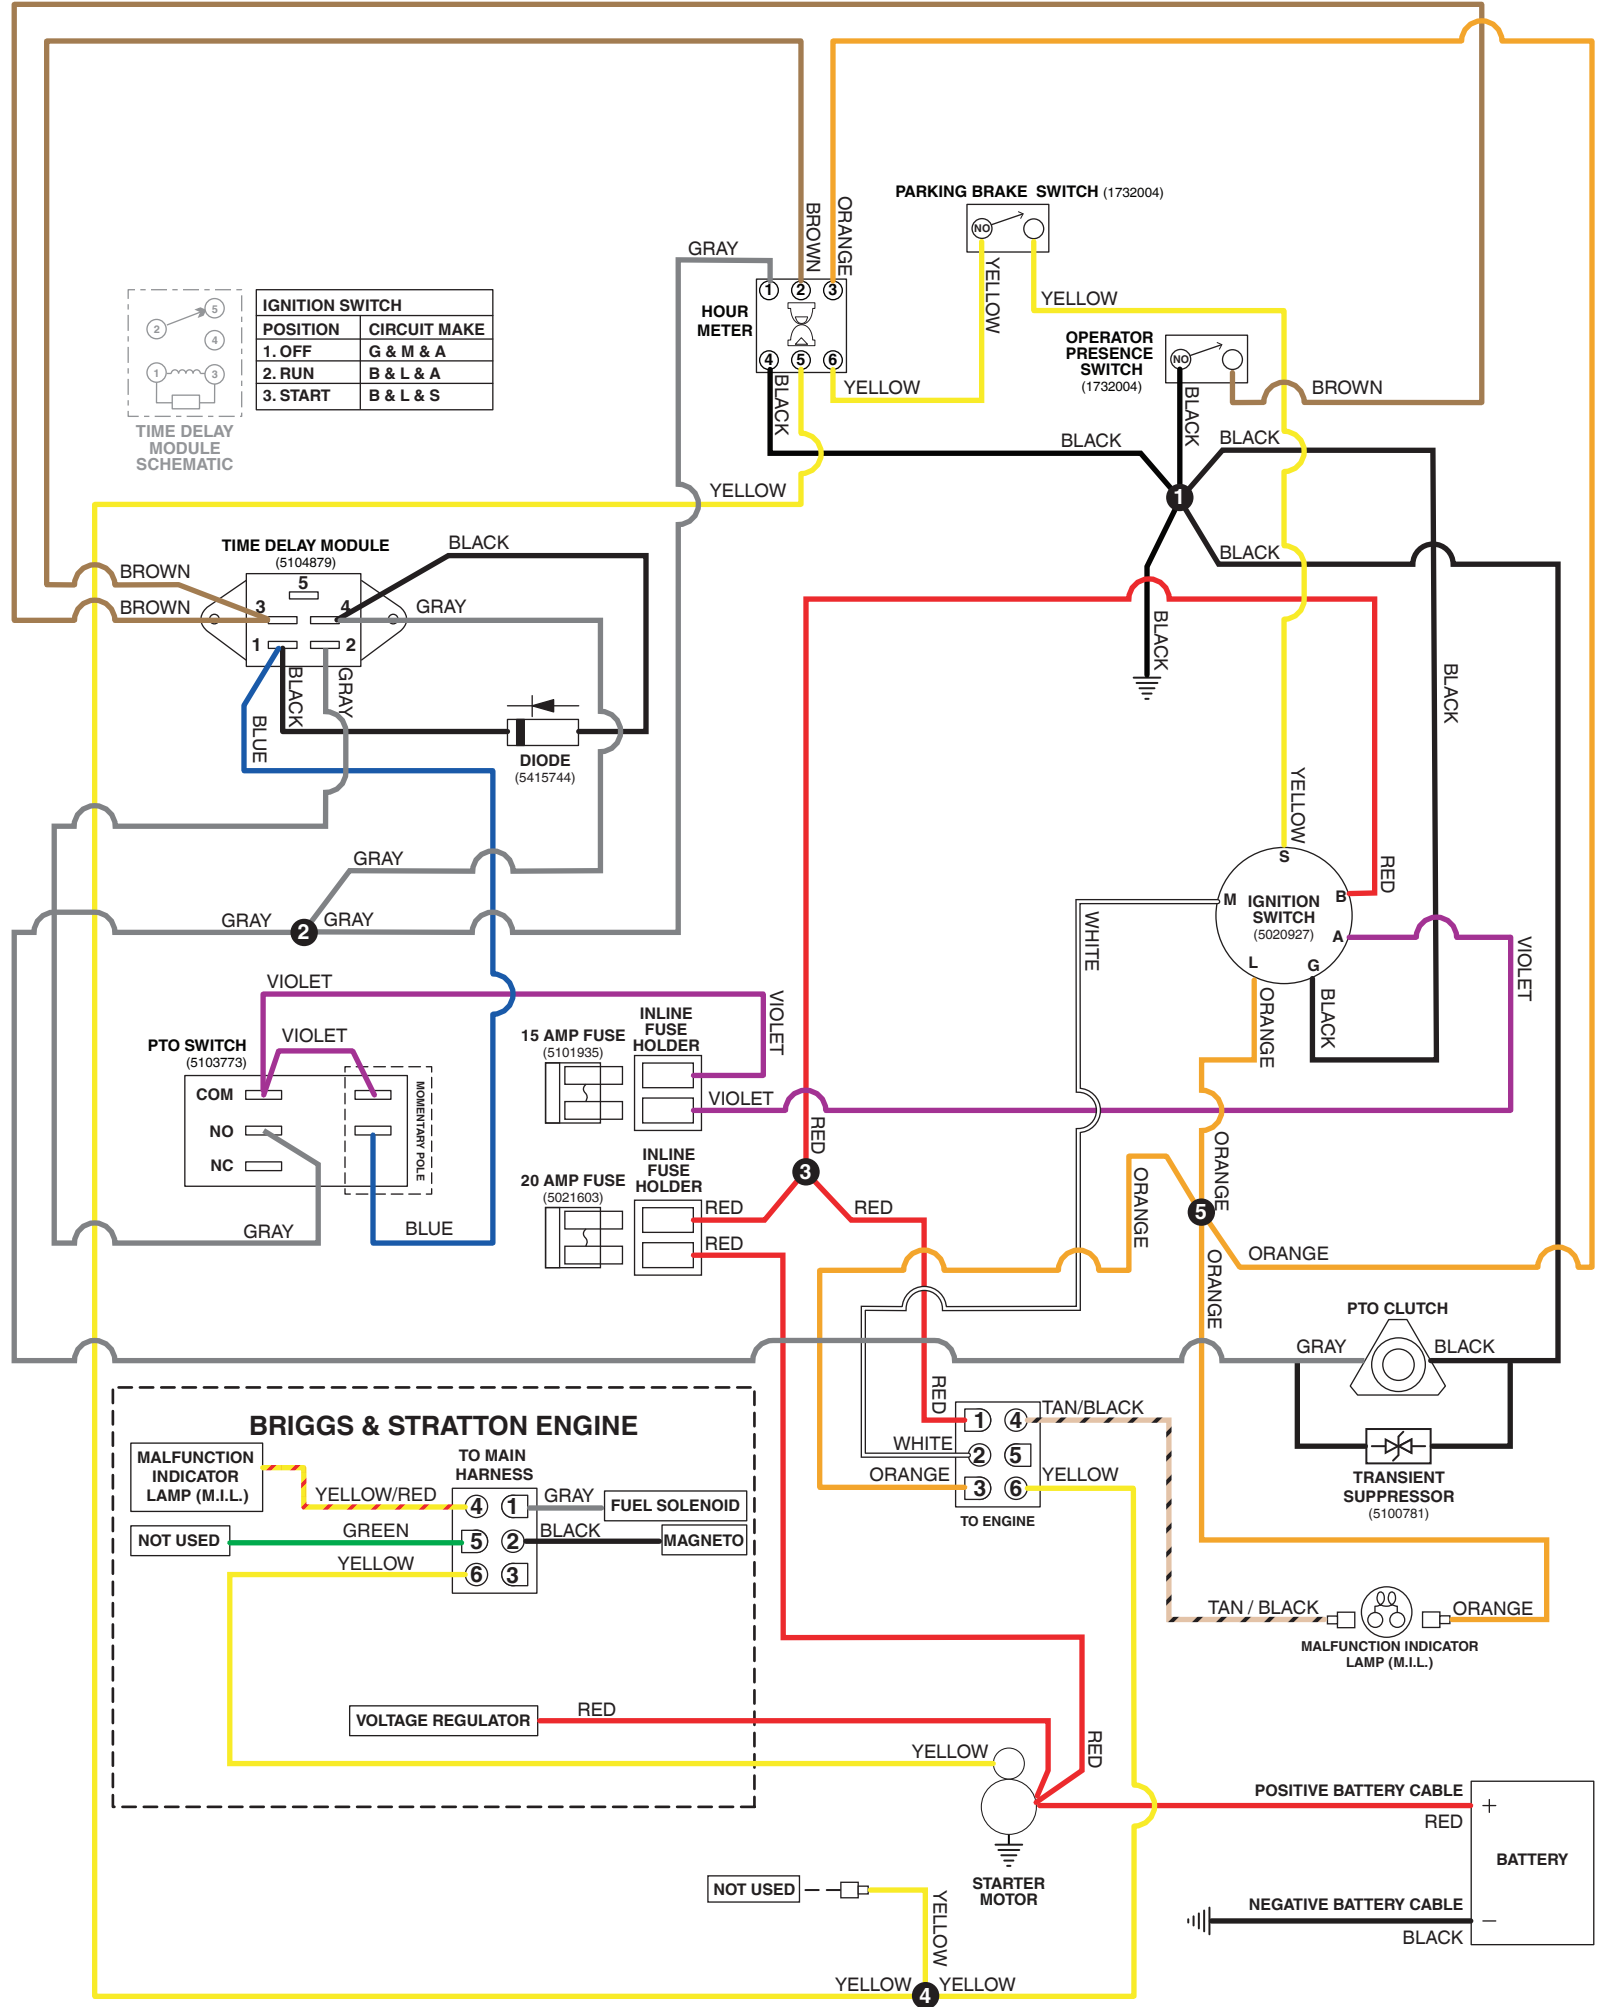

IGNITION SWITCH

POSITION	CIRCUIT MAKE
1. OFF	G & M & A
2. RUN	B & L & A
3. START	B & L & S



PTO SWITCH (5103773)

COM	MOMENTARY POLE
NO	
NC	

BRIGGS & STRATTON ENGINE

