

## SUBLI-LIGHT (NO-CUT) GLITTER

FOR WHITE & LIGHT COLORED COTTON, POLYESTER & MORE

# 1-PAPER-SYSTEM



### PRINT SETTINGS

- **Image Mode:** mirrored
- **Print Mode:** Use the Virtuoso Print Manager and the FOREVER Profile for printing with SAWGRASS SG400/800 and SG 500/1000.  
All other sublimation printers should be used with the standard settings and standard driver. To install the Virtuoso Print Manager or Sawgrass Print Manager, download the instruction on [www.forever-ots.com](http://www.forever-ots.com):  
Support /Downloads / Printing Instructions / Sublimation Printers / Sawgrass Print Manager Installation or Support /Downloads / Printing Instructions / Sublimation Printers / Virtuoso Print Manager Installation.
- **Print Quality:** Priority Quality **Paper Setting:** Ink-Jet Normal Paper **ICC Color Profile:** OFF
- **Image Style:** Only for full-tone vector graphics. Not suitable for photographs and light colors
- **Color Chart:** As sublimation systems can vary from each other, we do recommend to first print a color-chart to test which color range works best with your system (printer / ink / press). We do recommend to press it on a white textile, to avoid any deviation of colors. If you don't know how to create a color-chart, feel free to use ours at [www.forever-ots.com](http://www.forever-ots.com) / Support / Downloads / Test Files / Subli-Light (No-Cut) & Subli-Dark (No-Cut) Glitter Color Chart.



### TRANSFER PROCESS

- Preheat your heat press. Make sure that the metal plate underneath the rubber mat is also hot.
- Place the textile on your lower plate and pre-press it for 15-30 seconds.
- Place the transfer paper onto the textile. The print-out has to be transferred immediately, as long as it is still wet!
- Press for 20-30 seconds.
- Remove the transfer paper after 2 seconds.  
(Never take the T-Shirt off the press before the transfer paper has been peeled off.)
- For a better washability put a sheet of Matt Finish Economy or Glossy Finish with the glossy side faced down onto your design and press again for 30 seconds with high pressure.
- Stretch the t-shirt after removing the silicone paper as long as the shirt is hot. This leads to a softer touch.



### SETTINGS HEAT PRESS

	AUTOMATIC HEAT PRESS	MANUAL HEAT PRESS
PRESSURE	2-3 bar / 29-44 PSI	medium
TEMPERATURE	170-190°C / 338-374°F	170-190°C / 338-374°F
TIME	20-30 seconds	20-30 seconds
FIXING	30 seconds (high pressure)	30 seconds (maximum pressure)



### WASHING

- Up to 40°C (cold wash cycle). Inside out. Do not use fabric softener or liquid detergent.



### DRYING

- Do not tumble dry! Hang dry or line dry recommended



### IRONING

- When ironing cover the print with baking paper



### ATTENTION

- You cannot print all colors. Please make sure that you are creating and selecting your designs with an high ink amount.
- You must transfer immediately after printing (the longer the time in between printing and pressing, the less would transfer)
- Do not use composite black. It might can change into a brown after few weeks or washes.

Before starting a mass production, we recommend to make transfer and washing test with all materials. Important advice for double-sided printing on textiles: T-Shirts for a double-sided print (front side & backside), has to be put over the lower heat plate. In this case only one side will be treated with heat and you avoid that the applied design from the other side will be pressed out again. If your T-Shirt is yellowing, lay a piece of fleece onto it during the transfer process.