

Blue light flashes. 5 continuous flashes indi continuous flashes indi factory default setting SPEED light on Push elevator stick once to add a value, and pull elevator stick once to decrease a value. A set of continuous flashes indicates the value of a level. Values range from 1 to 9. RUDD Rudder SPEED FLEV Elevator GYRO SPEED GYRO 蓝灯常亮 CH1 for aileron Servo central CH2 for elevator -14-DIAGRAM OF FLIGHT CONTROL SETTINGS PITCH Use elevator stick Pitch setting to set value

15