




Change the way you think about time

ADJUS


INSTRUCTION MANUAL

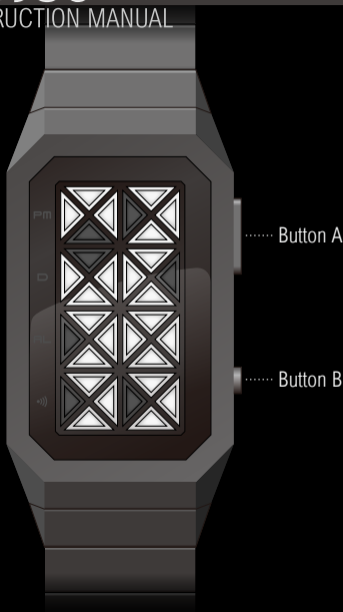

1. How to read the time

- Press button A to display the time.
- The LEDs will light up and the time will be shown.
- The time is displayed digitally with hours in the upper half of the screen and minutes in the lower half of the screen.
- The time display will turn off after 10 seconds.

Examples

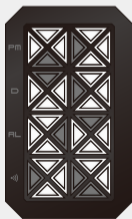

03:54




12:08

2. How to read the date


- Press button B to display the date.
- The date icon indicates that you are in date mode.
- The LEDs will light up and the date will be shown.
- The date is displayed digitally with the month in the upper half of the screen and the date in the lower half of the screen.
- The date display will turn off after 10 seconds.

Examples

Date icon

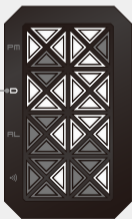

June 17th

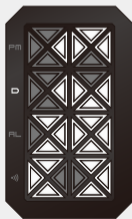


October 29th

3. How to check the alarm time

- Press button B twice to display the alarm time.
- The alarm mode icon indicates that you are in alarm mode.
- The PM icon indicates that the alarm time is set in PM.
- The alarm on icon indicates that the alarm is on.
- The alarm time display will turn off after 10 seconds.

Examples


alarm mode icon

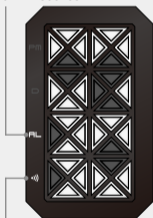

07:30 AM alarm on

alarm on icon

12:00 PM alarm on

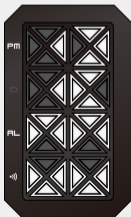

4. How to set the time

- When the time is displayed, press and hold button A for 3 seconds to enter setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

I. Setting the time display mode

- The time can be displayed vertically or horizontally.
- Press button B to change the display mode as required.
- Press button A to confirm and move to 12/24 hour mode.



10:36



10:36

II. Setting 12/24 Hour Mode

- The time can be displayed in 12 or 24 hour mode.
- Press button B to change the time mode as required.
- Press button A to confirm and move to the hour.



12 hour mode



24 hour mode

III. Setting the hour

- The hour LEDs will flash when you are in hour setting mode.
- The PM icon in setting mode indicates that you are setting the time in PM. This icon only appears in 12 Hour mode.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

IV. Setting the minutes

- The minute LEDs will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

V. Setting the animation

This watch has a light-up animation feature. When set, the LEDs will animate on 00 , 15, 30 and 45 minutes past the hour between 6pm and midnight.

- In setting mode, when the animation feature is on, the LEDs will animate.
- In setting mode, when the animation feature is off, all LEDs will flash.
- Press button B to turn the animation on or off.
- Press button A to confirm and exit setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

5. How to set the date

- When the date is displayed, press and hold button A for 3 seconds to enter date setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

I. Setting the year

- The date mode icon will be displayed and the year LEDs will flash when you are in year setting mode.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

II. Setting the month

- The date mode icon will be displayed and the month LEDs will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

III. Setting the date

- The date mode icon will be displayed and the date LEDs will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Press button A to confirm and exit date mode.

*Note after 10 seconds of inactivity setting mode will deactivate

6. How to set the alarm

- When the alarm time is displayed, press and hold button A for 3 seconds to enter alarm setting mode.


*Note after 10 seconds of inactivity setting mode will deactivate

- The alarm mode icon indicates that you are in alarm setting mode.
- Press button B to turn the alarm ON or OFF. The alarm on icon will light up when the alarm is on.
- Press button A to confirm and move to the alarm hour.
- Press button B to increase the alarm hour as required.
- The PM icon in alarm setting mode indicates that you are setting the time in PM. This icon only appears in 12 Hour mode.
- Press button A to confirm and move to the alarm minutes.
- Press button B to increase the alarm minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

09:45 AM alarm on

alarm mode icon

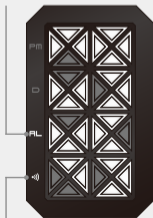


alarm on icon

7. How to change the LED color

- Press and hold button A for 3 seconds to enter setting mode.
*Note after 10 seconds of inactivity setting mode will deactivate
- You can choose from 7 different LED display colors.
- Press button B to change the LED color.

8. Number samples

- This watch displays the time digitally using a combination of LED triangles. It looks cryptic but is as easy to read as a regular digital watch. The numbers used are shown below.

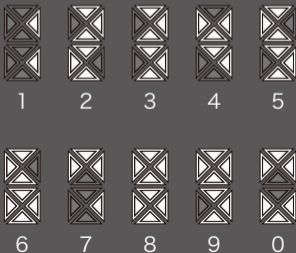

9. How to recharge the battery

- This watch has a USB rechargeable battery.
- When the lights become dim or do not light up, you should recharge the battery.
- To recharge the battery, unscrew the USB cap using the screw driver provided and connect the USB charging cable to the USB charging jack.
- Connect the charging cable to a power source, e.g. your computer.
- When charging, the LED charging indicator will blink.
- When the charging indicator stops blinking, the battery is 90% charged.


It is advised that you continue to charge the battery for a full 3.5 hours to ensure the battery is 100% charged.



- It is advised that you use the screw driver provided when opening the USB cap so as not to damage the head of the screw.

10. Items included in the box

- Watch
- USB cable
- Spare USB cap
- Screwdriver
- Instruction Manual

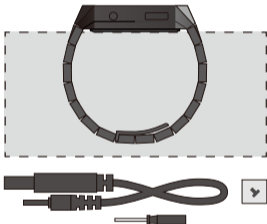

11. User information

I. Battery

- This watch uses an PL301517 rechargeable battery only.
- Battery lifetime will vary depending on use, but is estimated at approximately 300 charges.
- To maximise battery life you should limit the use of the animation.
- The plug standard input voltage for the PL301517 battery is DC3.7V. You should use only the cable provided with the watch when recharging.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Material	Stainless Steel
Strap Material	Stainless Steel
Case Dimensions	30 mm x 53 mm x 11.5 mm
Finish	Sand Blasted
Maximum Fit Wrist Size	210mm (approx.)
Weight	150g
Display	Digital Tube LED
Battery	PL301517 USB rechargeable
Water Resistance	3ATM

