





1. How to read the time

- . The time is read like an analog watch.
- Hours are shown in the normal way by the Katana blade, minutes are also shown by the blades position between the hours.

A single 'Hour & Minute' hand HI KISA 4111 10.30

Hand is halfway between 10 & 11

2. How to set the time

- . The time can be set like an analog watch.
- Pull the crown out and turn it clockwise or counter clockwise to set the time.

When the time is set, push the crown back to its original position.



3. User information

I. Battery

- · This watch uses a SR616SW replaceable watch battery.
- . The battery is estimated to last for at least one year.

II. Warranty

 This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

 This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS	
----------------	--

Case Materials	Stainless Steel
Strap Materials	Stainless Steel
Case Dimensions	38 x 44 x 7 mm
Finish	Polished
Maximum Fit Wrist Size	210mm (approx.)
Weight	115g
Display	Analogue
Batteries	SR616SW
Water Resistance	3ATM