



Change the way you think about time



INSTRUCTION MANUAL



Button A

Button B

1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The time is displayed digitally in negative space with hours in the upper half of the screen and minutes in the lower half of the screen.
- Press button B to display the number mode.
*Once change to this mode it will fixed before press button again.

Example

Maze mode



12:57

Number mode

 


12:57

2. How to read the date

- When show the maze mode press button B twice to display the date.
- The date icon indicates that you are in date mode.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The date is displayed digitally in negative space with the month in the upper half of the screen and date in the lower half of the screen.
- The display will change back to maze mode after a short time.

Example

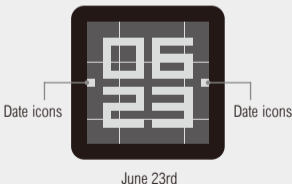


3. How to check the alarm

- When show the maze mode Press button B three times to display the alarm time.
- The alarm mode indicators(four corner of display) indicates that you are in alarm mode.

*Note after 5 seconds of inactivity setting mode will deactivate

Example

 AM indicator

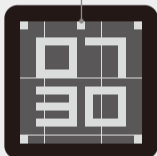

07:30 AM alarm on

10:25 PM alarm on



PM indicator



Alarm off

alarm mode icons:
a dot in each corner
of the display.

4. How to set the time

- When showing the time, press and hold button A for 3 seconds to enter setting mode.

*Note after 5 seconds of inactivity setting mode will deactivate

I. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The AM or PM indicator in setting mode indicates that you are setting the time in AM or PM.
(AM indicator: top of center dot. PM indicator: bottom of center dot)
- Press button A to increase the hour as required.
- Press button B to confirm and move to the minutes.

II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- Press button A to increase the minutes as required.
- Press button B to confirm and move to the animation.

III. Setting the animation

- The minute digits will flash when you are in minute setting mode.
- Press button A to increase the minutes as required.
- Press button B to confirm and exit setting mode.

5. How to set the date

- When showing the date, Press and hold button A for 3 seconds to enter setting mode.

*Note after 5 seconds of inactivity setting mode will deactivate

I. Setting the year

- The year digits will flash when you are in year setting mode.
- The date indicator indicates that you are in date setting mode.
- Press button A to increase the year as required.
- Press button B to confirm and move to the month.

II. Setting the month

- The month digits will flash when you are in month setting mode.
- Press button A to increase the month as required.
- Press button B to confirm and move to the date.

III. Setting the date

- The date digits will flash when you are in date setting mode.
- Press button A to increase the date as required.
- Press button B to confirm and exit setting mode.

6. How to set the alarm

- When showing the alarm, press button B twice to display the alarm time and then

hold button B for 3 seconds to enter alarm setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

 
- The alarm mode indicator will be displayed.
- Press button B to turn the alarm ON or OFF.
- Press button A to confirm and move to the hours.
- Press button B to increase the hour as required.

The AM or PM indicator in setting mode indicates that you are setting the time in AM or PM.

(AM indicator: top of center dot. PM indicator: bottom of center dot)

- Press button A to confirm and move to the minutes.
- Press button B to increase the minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

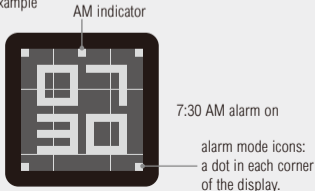

7. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

| | |
|---------------------------|-------------------------|
| Case Materials | Wood |
| Strap Materials | Leather |
| Case Dimensions | 40 mm x 47 mm x 10.5 mm |
| Finish | Clear coating |
| Maximum Fit Wrist Size | 210mm (approx.) |
| Weight | 40g |
| Display | LCD with EL backlight |
| Battery | CR2025 |