

MORSE²

TOKYOFASH JAPAN[®]

CHANGE THE WAY YOU THINK ABOUT TIME

www.tokyoflash.com




1. HOW TO READ THE TIME, DATE, ALARM & CUSTOM MESSAGE

- This watch uses an "always on" LCD display.
- The time, date, alarm time and custom message are shown at the top of the display.
- The time, date, alarm time and custom message are shown in the center of the display in Morse code.
- The current mode is shown centrally at the bottom of the display.
- Press button C to cycle through the time > date > alarm time > custom message > time...

2. THE TIME, DATE, ALARM & CUSTOM MESSAGE IN MORSE CODE

- Press button A to see the LED backlight flash to show the time, date, alarm time or custom message in Morse code.
- Press button B to hear the time, date, alarm time or custom message in Morse code beeps.
- The time, date, alarm time and custom message in Morse code beeps are distinguished by a starting letter. For example: Time: 10:26 = T1026. Date: 12.09 = D1209. Alarm Time: 06:00 = A0600. Custom Message: HAVE A NICE DAY = M HAVE A NICE DAY.

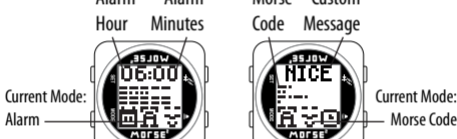

3. HOW TO SET THE TIME

- In time mode, press and hold button D for 4 seconds to enter time setting mode.
- Press button C to change the hour as required.
- Press button D to confirm and move to minutes setting.
- Press button C to change the minutes as required.
- Press button D to confirm and move to 12/24 hour mode setting.
- Press button C to select 12 or 24 hour mode as required.
- Press button D to confirm and exit time setting mode.

4. HOW TO SET DATE

- In date mode, press and hold button D for 4 seconds to enter date setting mode.
- Press button C to change the month as required.
- Press button D to confirm and move to date setting.
- Press button C to change the date as required.
- Press button D to confirm and exit date setting mode.

5. HOW TO SET ALARM

- In alarm time mode, press and hold button D for 4 seconds to enter alarm time setting mode.
- Press button C to change the alarm hour as required.
- Press button D to confirm and move to alarm minutes setting.
- Press button C to change the alarm minutes as required.
- Press button D to confirm and move to alarm on/off setting.
- Press button C to select alarm on/off as required.
- Press button D to confirm and exit time setting mode.
- When the alarm sounds, press any button to turn it off or wait for 1 minute.



6. BATTERY

- This watch uses 1 x CR2032 standard replaceable watch battery.
- Battery lifetime will vary depending on use but is estimated to last for at least 1 year.
- If you notice the display brightness becoming weak, it is advised that you change the battery.

7. MORSE CODE CHART

1	F	U	...
2	G	---	V
3	...-	H	W	...-
4-	I	..	X
5	J	Y
6	K	---	Z
7	L
8	M	--	*
9	N	-	@
0	O	---	-
A	--	P	;
B	---	Q	,
C	R	---	?
D	..	S	...	!
E	.	T	-	/

8. WARRANTY

- This watch is covered by a 2 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

9. WATER RESISTANCE

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

10. SPECIFICATIONS

Display:	LCD Display with LED Backlight
Case Material:	Stainless steel
Strap Material:	Leather
Case Dimensions:	44 mm x 44 mm x 12 mm
Finish:	Brushed IP black or silver
Wrist Size:	Approx. 150mm - 210mm (adjustable)
Weight:	150 grams
Battery:	1 x CR2032 standard replaceable watch battery
Water Resistance:	3ATM

Tokyoflash Japan

Change the way you think about time

watches@tokyoflash.com