



Change the way you think about time

ON AIR

INSTRUCTION MANUAL




touch sensitive screen

1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- Minutes are displayed by numbers on the face of the watch. Hours are indicated by position of the numbers which point to the current hour like the hand on a clock.

Example 1:

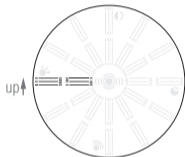

09:35

Example 2:



12:28

Example 3:



01:47

Example 4:




up ↓ 06:13

2. Operating the basic functions

I. Unlocking the display

- You can operate the LED backlight and stop the alarm from sounding when the display is locked but for all other functions you need to unlock the display.
- To unlock the display slide your finger from button D to button B. (The 4 indicators will appear.)
- The display will automatically lock after 15 seconds.

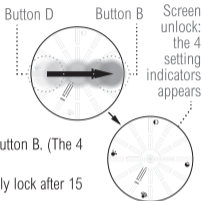

II. Turning on the backlight

- To turn the backlight on, touch button D.
- The backlight will illuminate the display for 7 seconds.

Note: In setting mode you cannot operate the LED backlight.

touch Button D



III. Turning the display sound on or off


- Unlock the screen.
- To turn the display sound on or off, hold button D for 3 seconds.


Note: Turning the display sound off doesn't affect the alarm sound.

hold Button D




3. How to read the date


- Unlock the screen (see “operating the basic functions”).
- Touch button A  once (the date indicator will appear on the screen).

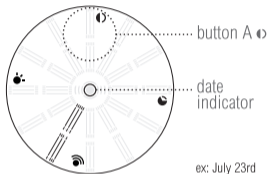

- The month is displayed in the same position as the hour and the date is displayed by numbers in the same position as the minutes.

4. How to check the alarm time

- Unlock the screen (see “operating the basic functions”).
- Touch button C  to display the alarm time (the alarm indicator will appear on the screen).

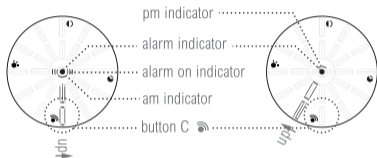

ex 1: alarm time 6:30 am alarm on

ex 2: alarm time 7:20 pm alarm off


- The alarm time is displayed in the same way as the time.
- The alarm on indicator will be displayed when the alarm is on and will not be displayed when the alarm is off.
- The AM or PM indicator shows that the alarm time is set to AM or PM.
- When the alarm sounds, you can turn it off by touching any button.


5. How to set the time and animation

- To make time setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button B for 3 seconds to enter setting mode.
Note: after 7 seconds of inactivity, setting mode will deactivate.

I. Setting the hour

- The time setting indicator will start flashing.
- Move your finger around the screen in a clock wise direction to increase the hour or in a counter clock wise direction to decrease the hour as required.

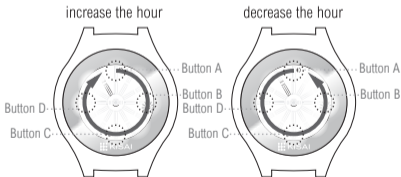


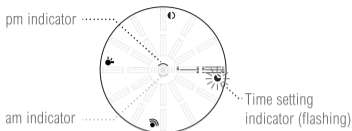

- The AM or PM indicator will be displayed to indicate that you are setting the time in AM or PM.
- Hold button B for 3 seconds to confirm and move to minutes setting.

II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.

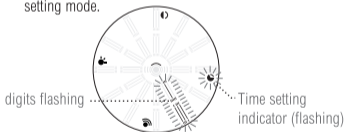

- Move your finger around the screen in a clock wise direction to increase the minutes or in a counter clock wise direction to decrease the minutes as required.
- Hold button B for 3 seconds to confirm and move to the animation setting mode.

III. Turning the animation on/off

- In setting mode, when the animation feature is on, the display will animate. When the animation is off, the display will flash.
- Slide your finger from A to D to turn the animation on or off.



Display Animating: Animation On



Display Flashing: Animation Off

- Hold button B for 3 seconds to confirm and exit setting mode.

6. How to set the date

- To make date setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button A for 3 seconds to enter date setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate
- The date indicator will be lit and the date setting indicator will blink when you are in date setting mode.

I. Setting the month

 
- The month is displayed in the same position as the hour.
- Move your finger around the screen in a clock wise direction to increase the month or in a counter clock wise direction to decrease the month as required.
- Hold button A for 3 seconds to confirm and move to the date.

II. Setting the date

- The date is displayed in the same position as minutes.
- Move your finger around the screen in a clock wise direction to increase the date or in a counter clock wise direction to decrease the date as required.
- Hold button A for 3 seconds to confirm and exit setting mode.

date setting
indicator (flashing)

date indicator

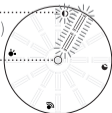


ex: setting the minutes
January 25th

7. How to set the alarm

- To make alarm setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Touch button C to display the alarm time (the alarm indicator will appear on the screen).
- Hold button C for 3 seconds to enter alarm setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate.
- The alarm indicator will be lit and the alarm setting indicator will blink when you are in alarm setting mode.

I. Turning the alarm on/off

- Touch button B to turn the alarm on or off.
- When the alarm is on, the “alarm on” indicator will be displayed.

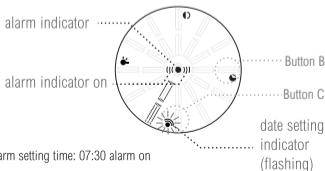

ex: alarm setting time: 07:30 alarm on

II. Setting the alarm hour

- The alarm time is displayed in the same way as the time.
- Move your finger around the screen in a clock wise direction to increase the alarm hour or in a counter clock wise direction to decrease the alarm hour as required.
- The AM or PM indicator shows that the alarm time is set to AM or PM.
- Hold button B for 3 seconds to confirm and move to alarm minutes setting mode.

III. Setting the alarm minutes

- The minutes will blink when you are in alarm minute setting mode.
- Move your finger around the screen in a clock wise direction to increase the alarm minutes or in a counter clock wise direction to decrease the alarm minutes as required.
- Hold button C for 3 seconds to confirm and leave the alarm setting mode.

8. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the LED backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Acetate
Strap Materials	Acetate / Stainless Steel
Case Dimensions	45 x 54 x 12.7 mm
Finish	brushed
Maximum Fit Wrist Size	210mm (approx.)
Weight	60g
Display	LCD with LED backlight
Battery	CR2025
Water Resistance	3ATM

