



Change the way you think about time



INSTRUCTION MANUAL

USB Port
.....

Sensor
.....



..... Button A

..... Button B

..... Button C

1. How to read the time

- This watch uses an LCD display to show the time.
- It uses a Sound Sensor which causes the display to react to music, or other sounds around you, similar to a graphic equalizer found on audio equipment.


Example 1:
Time Only
09:16:23




Example 2:
Time + Equalizer Mode
Time 05:13:21



- The time display shows Hours, Minutes and Seconds.

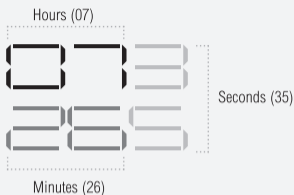

- The watch uses a 12hr clock cycle (am/pm, not 24hr)
- The default time display shows the time only.
Press **Button A** to cycle through the display modes.

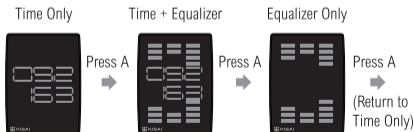

2. Operating the basic functions

I. Turning on the LED lights

- You can illuminate the display for a short time with the LED lights by pressing **Button B**.

II. How to read the date

- Press **Button C** to display the date. The date icon indicates that you are in date mode.
- The date is displayed in the same way as the time, with the month in the upper half of the screen and the date in the lower half of the screen and the year on the right.

Example: April 25th 2013



Date Icon



- Press **Button C** again to return to Time Mode.

Note: The watch will return to Time Mode automatically after 10 seconds.

3. How to set the time and date

- In normal Time Display Mode, press and hold **Button C** for 3 seconds to enter Time Setting Mode.
Note: after 10 seconds of inactivity setting mode will deactivate.
- The Setting Icon will appear & the hours will begin flashing.



(Quick Tip: For each stage in the settings, press **A** to change the option & **C** to confirm.)

I. Setting the hour

- While the Hours are flashing, press **Button A** to increase the hour.
 - The AM/PM icon indicates that you are setting the time in AM or PM.
 - Hold **button A** to increase the hours quickly.
- Press **Button C** to confirm the hours & move to the minutes setting.

II. Setting the minutes

- While the Minutes are flashing, press **Button A** to increase the minutes.
 - Hold **button A** to increase the minutes quickly.
- Press **Button C** to confirm the minutes & move to the Date setting.

III. Setting the date

- The Date icon will appear and the display will show the current date (month, day & year) The year will be flashing.



- While the Year is flashing, press **Button A** to increase the year.
 - The year range goes from 00-49 (2000-2049)
 - Hold **button A** to increase the year quickly.
- Press **Button C** to confirm the year & move to the month setting.

- While the Month is flashing, press **Button A** to increase the month. (1-12)
 - Hold **button A** to increase the month quickly.
 - Press **Button C** to confirm the month & move to the date setting.
 - While the Date is flashing, press **Button A** to increase the date.
 - Hold **button A** to increase the date quickly.
 - Press **Button C** to confirm the date.
- Setting Mode will now return to the beginning & the Hour will be flashing again. Change the time/date again if required, or wait 10 seconds for Setting Mode to finish.

4. How to use the Equalizer

- The Sound Sensor on the side of the watch can be sealed to retain Water Resistance integrity. Turn the dial on the sensor to Open / Close the aperture.



Sensor Open



Sensor Sealed

- Sensitivity of the Sensor is increased with the Sensor in the open position.
- Depending on the loudness of your environment, you can open/close the sensor as required.

I. Equalizer preferences

- You can set the Equalizer to work in automatic mode between 11pm & 3am (Club Mode)
- To alter the Equalizer preferences: In normal time mode press **Button A** twice to move to Equalizer Only mode.
- The time display will disappear.
- Press & hold **Button C** to enter Equalizer Preferences. The display will show the setting icon & the EQ icon will be flashing.

 
Setting Icon



Club Mode Icon

EQ Icon (flashing)

- Press **Button A** to turn Club Mode on/off.
The Club Mode Icon will be shown.
- Press **Button C** to confirm your preference.
- The EQ Icon will stop flashing, press **Button A** to change between Time ON & Time OFF displays.

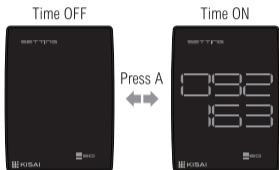

- By selecting Time ON: When the auto-equalizer activates, the time will also be displayed.
By selecting Time OFF: When the auto-equalizer activates, only the equalizer will be shown.
- Press **Button C** to confirm your preference.

- Equalizer Preference Mode will now return to the beginning & the EQ Icon will be flashing again. Wait 10 seconds for Preference Mode to exit.

 
Note: Automatic Club mode causes the watch to change from 'Time Only Mode' to 'Equalizer Mode' at 11pm daily. Setting other Equalizer modes just before or just after 11pm will override the automatic mode.

5. How to set the alarm time


- In normal Time Display Mode, press and hold **Button B** for 3 seconds to enter Alarm Setting Mode.

Note: after 10 seconds of inactivity setting mode will deactivate.

- The Setting Icon will appear & the Alarm Mode Icon will begin flashing. **AL**

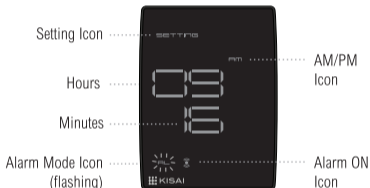

I. Turning the alarm on or off

- The Alarm Mode Icon will be flashing.
- Press **Button A** to turn the alarm on or off. The Alarm ON Icon indicates that the alarm is on. 
- Press **Button B** to confirm your choice.

II. Setting the alarm hour

- While the Hours are flashing, press **Button A** to increase the hour.
 - The AM/PM icon indicates that you are setting the alarm in AM or PM.
 - Hold **button A** to increase the hours quickly.
- Press **Button B** to confirm the hours & move to the minutes setting.

III. Setting the alarm minutes

- While the Minutes are flashing, press **Button A** to increase the minutes.
 - Hold **button A** to increase the minutes quickly.
- Press **Button B** to confirm the minutes.

- Alarm Setting Mode will now return to the beginning & the Alarm Mode Icon will be flashing again. Wait 10 seconds for Setting Mode to exit.

6. User information

I. Battery

- This watch uses a PL402525 rechargeable watch battery.
- The battery is estimated to last about one month on a single charge based on light use of the EQ functions.
- With heavy continuous use of the EQ functions (on all the time) a single charge will last at least 7 hours.
- Battery lifetime will vary depending on use, but is estimated at approximately 300 charges.
- To maximize battery charge you should limit use of the LED lights.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.
- Only use the cable provided to recharge this watch.

SPECIFICATIONS

Case Materials	Aluminium
Strap Materials	Aluminium
Case Dimensions	57 x 39 x 16 mm
Finish	Anodized black matte
Maximum Fit Wrist Size	237mm (approx.)
Weight	120g
Display	LCD with LED backlight
Battery	PL402525 Rechargeable
Water Resistance	3ATM

