



Change the way you think about time

ROGUE TOUCH

INSTRUCTION MANUAL



touch sensitive screen

1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- Hours are displayed in the same position as hours on a clock.
- The outer ring of large blocks represents hours.
- The position of the gap in the ring shows the current hour.

Hours and AM/PM

(time 1)



PM indicator
(time 1)

AM indicator
(time 1)

Minutes

(time 1)



- Minutes are displayed in the same position as minutes on a clock.
- The inner ring of small dots represents minutes.
- Minutes are grouped in blocks of five to make reading the time easier.
- The three groups of small blocks in the outer ring show seconds.

Seconds



Example 1: Hours and Minutes



09:31

- This watch has a second time zone (time 2).
- Hours are displayed in the same position as hours on a clock.
- The inner ring of large blocks represents hours.
- The position of the gap in the ring shows the current hour.

Hours and AM/PM

(time 2)



AM indicator
(time 2)

PM indicator
(time 2)

Minutes

(time 2)



- Minutes are displayed in the same position as minutes on a clock.
- The inner ring of small blocks represents minutes.

Other indicators



Alarm on

Setting

Alarm

Date

Screen Locked

Time 2 Setting

Time 1 Setting

Example 2:



02:52:00 PM (time 2: 08:21 PM)

Example 3:



05:07:51 PM (time 2: 05:07:51 PM)


2. Operating the basic functions

I. Unlocking the display

- You can operate the LED backlight and turn the alarm on or off when the display is locked but for all other functions you need to unlock the display.

- To unlock the display slide your finger from button D to button B. (The screen lock indicator will disappear.)

- The display will automatically lock after 60 seconds.

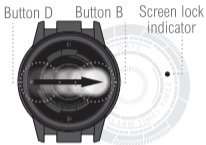

II. Turning on the backlight

- To turn the backlight on, touch button D. 📱
- The backlight will illuminate the display for 7 seconds.

Note: In setting mode you cannot operate the LED backlight.

touch Button D



III. Turning the display sound on or off

- Unlock the screen.
- To turn the display sound on or off, hold button D for 3 seconds. 📱

Note: Turning the display sound off doesn't affect the alarm sound.

hold Button D




3. How to read the date 🕒

- Unlock the screen (see “operating the basic functions”).
- Touch button A 🕒 once (the date indicator will appear on the screen).




- The year is displayed in the same position as the seconds.
- When no segments are on it shows the year 2000. Each segment indicates one year.
- The month is displayed in the same position as hours (time 1).
- The position of the gap in the ring shows the current month.

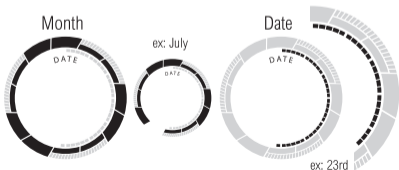

- The date is displayed in the same position as minutes (time 1).
- Days are grouped in blocks of five to make reading the date easier.

4. How to check the alarm time

- Unlock the screen (see “operating the basic functions”).
- Touch button C  to display the alarm time (the alarm indicator will appear on the screen).



Alarm on indicator

Alarm indicator

Button C 

Alarm on




ex: Alarm Time 6:30 AM Alarm On

- The alarm time is displayed in the same way as time 1.
- The alarm on indicator will be displayed when the alarm is on and will not be displayed when the alarm is off.
- AM/PM indicators are the same as time 1.
- When the alarm sounds, you can turn it off by touching any button.

Hours



Minutes

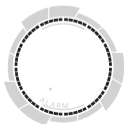

Example:



Alarm On 07:30 AM

5. How to set the time and animation


- To make time setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button B for 3 seconds to enter setting mode.

Note: after 7 seconds of inactivity, setting mode will deactivate.

1. Setting the hour for time 1

- The hour block will flash when you are in hour setting mode.
- Move your finger around the screen in a clock wise direction to increase the hour or in a counter clock wise direction to decrease the hour as required.


Increase the Hour

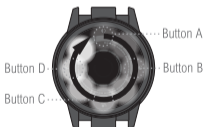

Decrease the Hour




- If the display sound is on, there will be a beep each time you increase or decrease the time by an hour.

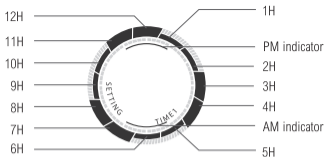

- The AM or PM indicator will be displayed to indicate that you are setting the time in AM or PM.
- Hold button B for 3 seconds to confirm and move to minutes for time 1.


II. Setting the minutes for time 1

- The minute blocks will flash when you are in minute setting mode.

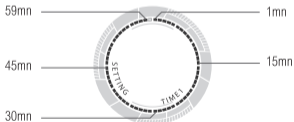

- Move your finger around the screen in a clock wise direction to increase the minutes or in a counter clock wise direction to decrease the minutes as required.
- Hold button B for 3 seconds to confirm and move to the hour for time 2.

III. Setting the hour for time 2

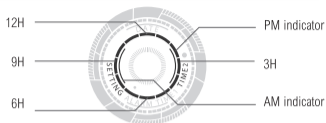

- The hour blocks will flash when you are in hour setting mode.
- Move your finger around the screen in a clock wise direction to increase the hour or in a counter clock wise direction to decrease the hour as required.
- The AM or PM indicator will be displayed to indicate that you are setting the time in AM or PM.
- Hold button B for 3 seconds to confirm and move to the minutes for time 2.

IV. Setting the minutes for time 2

- The minute blocks will flash when you are in minute setting mode.



- Move your finger around the screen in a clock wise direction to increase the minutes or in a counter clock wise direction to decrease the minutes as required.
- Hold button B for 3 seconds to confirm and move to the animation.

V. Turning the animation on/off

- In setting mode, when the animation feature is on, the display will animate. When the animation is off, the display will flash.
- Touch button A to turn the animation on or off.



Display Animating: Animation On

Display Flashing: Animation Off

- Hold button B for 3 seconds to confirm and exit setting mode.

6. How to set the date


- To make date setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button A for 3 seconds to enter date setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate
- The setting and date indicators will be displayed when you are in date setting mode.

I. Setting the year

- The years blocks will flash when you are in year setting mode.
- The year is displayed in the same position as seconds.
- When no segments are on it shows the year 2000. Each segment indicates one year.
- Move your finger around the screen in a clock wise direction to increase the year or in a counter clock wise direction to decrease the year as required.
- Hold button A for 3 seconds to confirm and move to the month.



Years

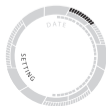

ex: 2011

II. Setting the month

- The month block will flash when you are in month setting mode.
- The month is displayed in the same position as hours (time 1).
- The position of the gap in the ring shows the current month.
- Move your finger around the screen in a clock wise direction to increase the month or in a counter clock wise direction to decrease the month as required.
- Hold button A for 3 seconds to confirm and move to the date.

III. Setting the date

- The date blocks will flash when you are in date setting mode.
- The date is displayed in the same position as minutes (time 1).
- Move your finger around the screen in a clock wise direction to increase the date or in a counter clock wise direction to decrease the date as required.
- Hold button A for 3 seconds to confirm and exit setting mode.

7. How to set the alarm

- To make alarm setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button C for 3 seconds to enter alarm setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate.
- The setting and alarm indicators will be displayed when you are in alarm setting mode.

I. Turning the alarm on/off



- Touch button B to turn the alarm on or off.
- When the alarm is on, the “alarm on” indicator will be displayed.
- Hold button C for 3 seconds to confirm and move to alarm hour setting mode.

II. Setting the alarm hour

- The hour block will flash when you are in alarm hour setting mode.
- The alarm hours are displayed in the same position as hours (time 1).
- The position of the gap in the ring shows the current alarm hour.
- Move your finger around the screen in a clock wise direction to increase the alarm hour or in a counter clock wise direction to decrease the alarm hour as required.
- Hold button C for 3 seconds to confirm and move to alarm minutes setting mode.

III. Setting the alarm minutes

- The minutes blocks will flash when you are in alarm minute setting mode.
- The alarm minutes are displayed in the same position as minutes (time 1).
- Move your finger around the screen in a clock wise direction to increase the alarm minutes or in a counter clock wise direction to decrease the alarm minutes as required.
- Hold button C for 3 seconds to confirm and leave the alarm setting mode.

8. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the LED backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Stainless Steel
Strap Materials	Stainless Steel
Case Dimensions	44 x 53.3 x 15 mm
Finish	Polished
Maximum Fit Wrist Size	210mm (approx.)
Weight	120g
Display	LCD with LED backlight
Battery	CR2025
Water Resistance	3ATM

