


Change the way you think about time




# 1. How to read the time

- This watch uses an LCD "always on" display to show the time.
- At night time, you can illuminate the display for a short time with the LED backlight by pressing button A.
- . The time is displayed using four hexagonal shaped digits.
- Progressing from the outside, hours are shown in the outer two rings and minutes are shown on the inner two rings.

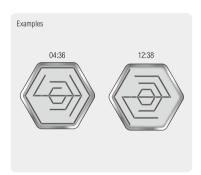

# 2. How to read the date

- Press button B to display the date.
- The date icon indicates that you are in date mode.
  At night time, you can illuminate the display for a short
- time with the LED backlight by pressing button A.
- The date is displayed using four hexagonal shaped digits.
- Progressing from the outside, months are shown in the outer two rings and days are shown on the inner two rings.
- The display will change back to time mode after a short time.

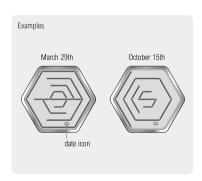

# 3. How to set the time

 When the time is displayed, press and hold button B for 3 seconds to enter setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

#### I. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The PM icon in setting mode indicates that you are setting the time in PM.
- . The PM icon only appears in 12 hour time setting mode.
- · Press button A to increase the hour as required.
- · Press button B to confirm and move to the minutes.

## II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- · Press button A to increase the minutes as required.
- Press button B to confirm and move to 12/24 hour setting.

### III. Setting 12/24 Hour Mode

- . The time can be displayed in 12 or 24 hour mode.
- Press button A to change the time mode as required.
- Press button R to confirm and move to the animation.







24 hour mode

## IV. Setting the animation

- The display will either animate or flash when you are in animation setting mode.
- When the animation is off, the display will flash.
   When the animation is on, the display will animate.
- Press button A to turn the animation on or off.
  The animation will appear on 00, 15, 30 and 45 minutes past each hour.
- · Press button B to confirm and exit setting mode.

<sup>\*</sup>Note after 10 seconds of inactivity setting mode will deactivate

## 4. How to set the date

 When the date is displayed, press and hold button B for 3 seconds to enter date setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

#### Setting the year

- The date mode icon will be displayed
- The year digits will flash when you are in year setting mode.
- · Press button A to increase the year as required.
- . Press button B to confirm and move to the month.



## II. Setting the month

- The month digits will flash when you are in month setting mode.
- · Press button A to increase the month as required.
- . Press button B to confirm and move to the date.

## III. Setting the date

- The date digits will flash when you are in date setting mode.
- · Press button A to increase the date as required.
- Press button B to confirm and exit setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

# 5. User information

#### I. Battery

- This watch uses two SR626SW replaceable watch batteries.
- Battery lifetime will vary depending on use, but is estimated to last for at least 10 months.
- To maximize battery life you should limit use of the LED backlight.

## II. Warranty

 This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

#### III. Caution

 This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS	
Case Material	Acetate / Stainless Steel
Strap Material	Silicone
Case Dimensions	42 mm x 55 mm x 13 mm
Finish	Polished
Maximum Fit	230mm (approx.)

80g

SR626SW

3ATM

LCD with LED backlight

Wrist Size Weight

Display

Battery

Water Resistance