




Change the way you think about time

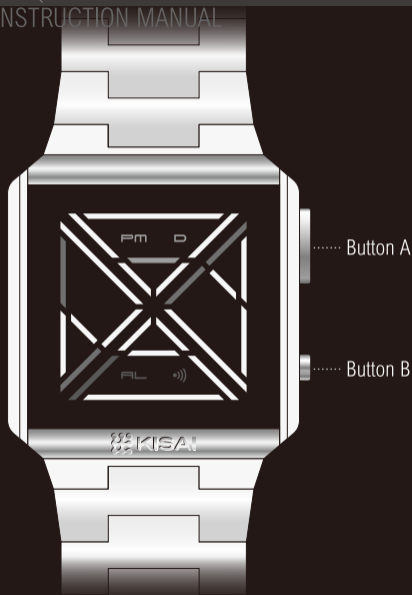

# INSTRUCTION MANUAL



# 1. How to read the time

- Press button A to display the time.
- The LEDs will light up and the time will be shown.
- The time is displayed digitally, the hour can be read from top to bottom and minutes from left to right.
- The time display will turn off after 10 seconds.

Example



06:57



10:49

Number samples



0



1



2



3



4

## 2. How to read the date

- Press button B to display the date.
- The date icon indicates that you are in date mode.
- The LEDs will light up and the date will be shown.
- The date is displayed digitally, the month can be read from top and bottom and date from left to right.
- The date display will turn off after 10 seconds.

Example



Date icon

December 4th



5



6



7



8



9

## 3. How to set the time

- When the time is displayed, press and hold button B for 3 seconds to enter setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

### I. Setting 12/24 Hour Mode

- The time can be displayed in 12 or 24 hour mode.
- Press button B to change the time mode as required.
- Press button A to confirm and move to the hour.

### II. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The PM indicator in setting mode indicates that you are setting the time in PM.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

### III. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

### IV. Setting the animation

- The display will either flash or animate when you are in animation setting mode.
- Press button B to turn the animation on or off. When the animation is off, the display will flash, when the animation is on, the display will animate.
- Press button A to confirm and exit setting mode.

## 4. How to set the date

- When the date is displayed, press and hold button B for 3 seconds to enter date setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

### I. Setting the year

- The year digits will flash when you are in year setting mode.
- The date icons indicate that you are in date setting mode.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

### II. Setting the month

- The month digits will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

### III. Setting the date

- The date digits will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Press button A to confirm and exit setting mode.

## 5. Checking and setting the alarm

### I. Checking the alarm

- Press button B twice to display the alarm time.
- The alarm mode icon indicates that you are in alarm mode. The alarm on icon indicates that the alarm is on.

### II. Setting the alarm

- When the alarm time is displayed, press and hold button B for 3 seconds to enter alarm setting mode.

\*Note after 10 seconds of inactivity setting mode will deactivate

- The alarm mode icon will be flashing.
- Press button B to turn the alarm on or off. The alarm on icon indicates that the alarm is on.
- Press button A to confirm and move to the hour.
- Press button B to increase the hour as required.
- The PM icon in alarm setting mode indicates that you are setting the alarm time in PM.
- Press button A to confirm and move to the minutes.
- Press button B to increase the minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example



## 6. How to recharge the battery

- This watch has a USB rechargeable battery.
- When the lights become dim or do not light up, you should recharge the battery.
- To recharge the battery, unscrew the USB cap using the screw driver provided and connect the USB charging cable to the USB charging jack.
- Connect the charging cable to a power source, e.g. your computer.
- When charging, the LED charging indicator will blink.
- When the charging indicator stops blinking, the battery is 90% charged.

It is advised that you continue to charge the battery for a full 3.5 hours to ensure the battery is 100% charged.



charging indicator

- It is advised that you use the screw driver provided when opening the USB cap so as not to damage the head of the screw.
- Items included in the box:
  - Watch
  - USB cable
  - Spare USB cap
  - Screwdriver
  - Instruction Manual



## 7. User information

### I. Battery

- This watch uses an PL301517 rechargeable battery only.
- Battery lifetime will vary depending on use, but is estimated at approximately 300 charges.
- To maximise battery life you should limit the use of the animation.
- The plug standard input voltage for the PL301517 battery is DC3.7V. You should use only the cable provided with the watch when recharging.

### II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

### III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

## SPECIFICATIONS

Case Material	Acetate / Stainless Steel
Strap Material	Acetate
Case Dimensions	38 mm x 40 mm x 11 mm
Finish	Polished
Maximum Fit Wrist Size	210mm (approx.)
Weight	75g
Display	Digital Tube LED
Battery	PL301517 USB rechargeable
Water Resistance	3ATM

