 
 


PF40 Coarse Dust Pre-Filter

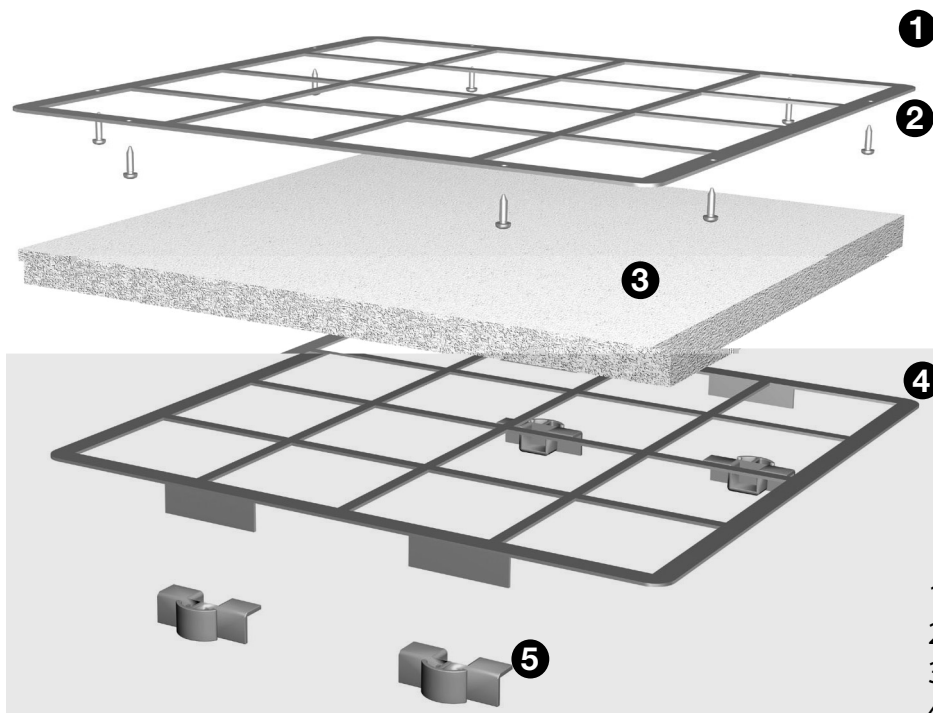

- 1. Filter grille
- 2. Eight Torx-screws
- 3. Coarse dust filter pad
- 4. Second filter grille
- 5. Four plastic clips

Fitting PF40

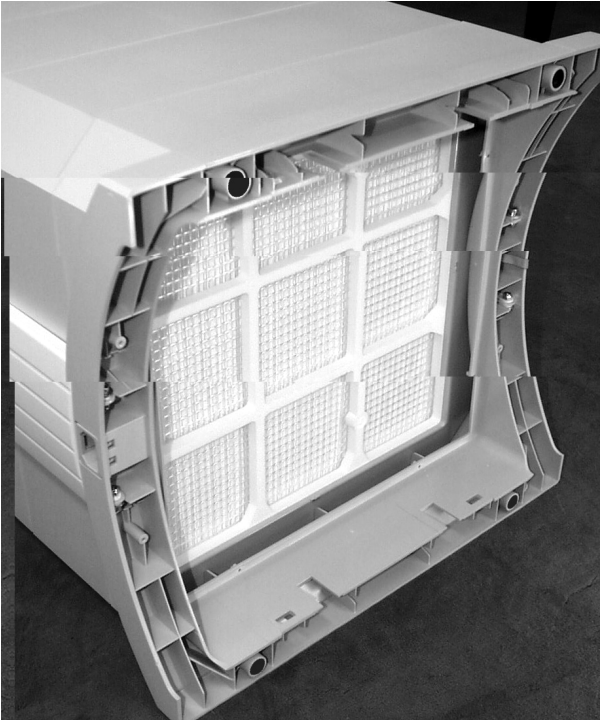

 
1 To gain access to the base of the IQAir device, carefully lay the IQAir system on the floor. Do not place the device onto its side arms. To avoid scratching the IQAir housing, place the device on a soft surface, such as a towel.



2 Insert the filter grille with the holes along the edge into the base of the IQAir system.




3 Secure the filter grille with the eight Torx-screws and screw driver supplied with the installation kit. Ensure that all screws are tight, but be careful not to over-tighten the screws.

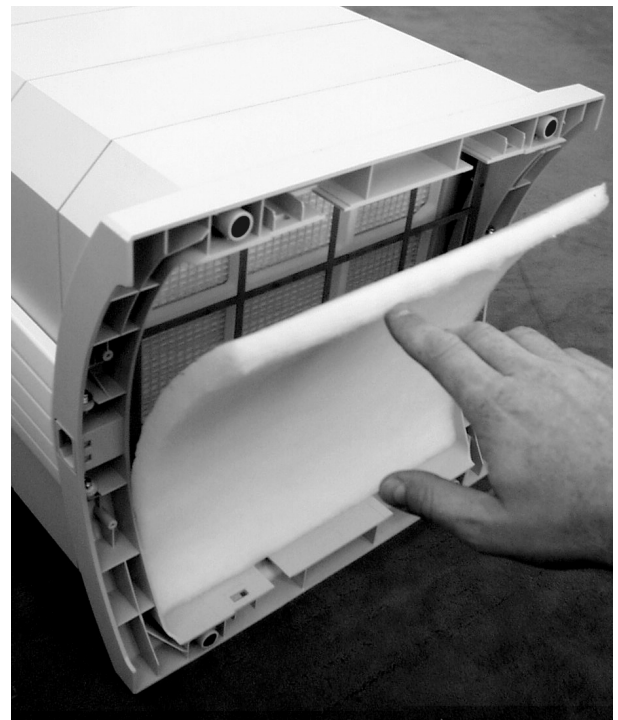


4 The PF40 coarse dust filter pad has a rough, cottony side and a smooth side. Place the filter on top of the filter grille with the rough, cottony side facing outward. When properly installed the rough, cottony side will be facing the floor when the system is in its upright position.

 
Fitting PF40

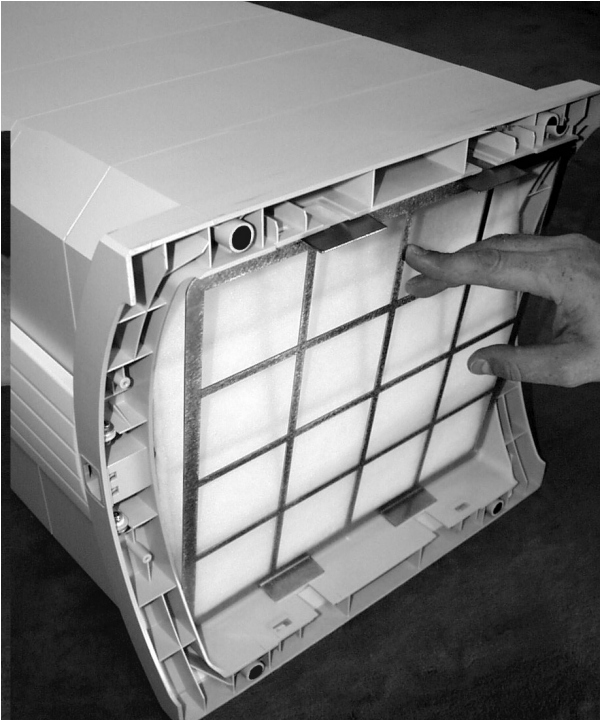

 - 5** To hold the filter pad securely in position, place the second filter grille over the filter. The metal tabs have to face outward.

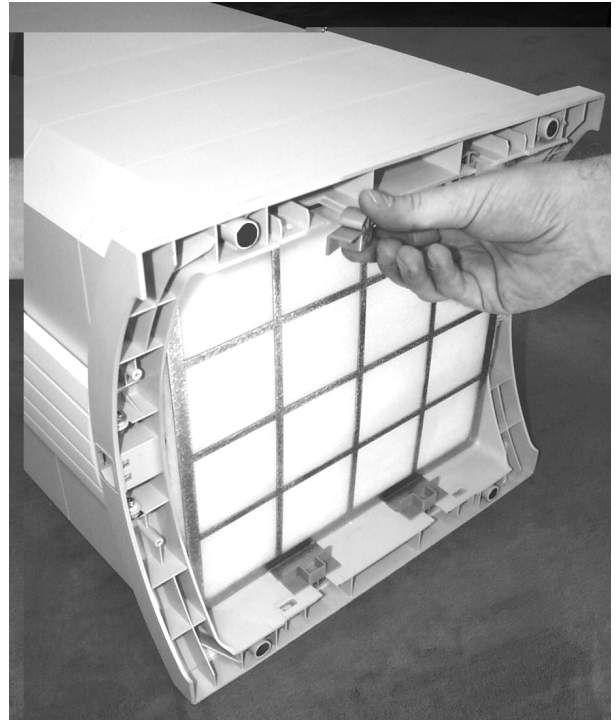

 - 6** Secure the filter grille by sliding the supplied plastic clips into the pre-cut slots in the base of the IQAir system.

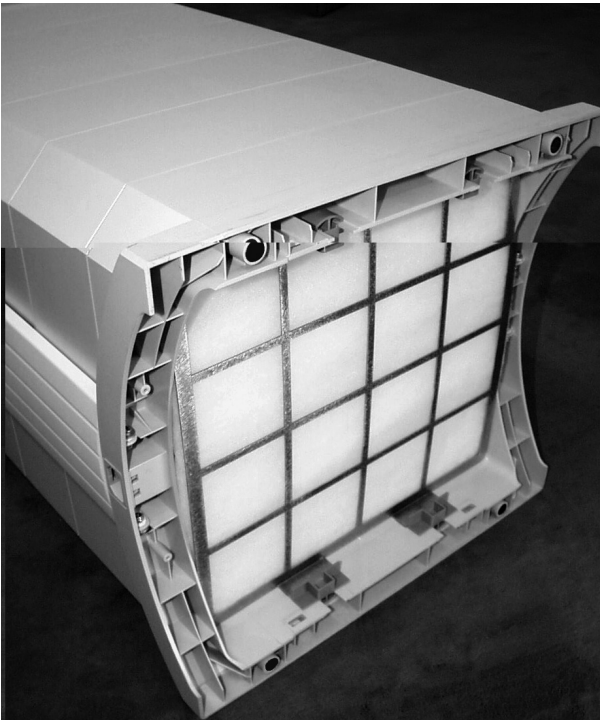

- 7** When all four clips have been fitted, carefully lift the IQAir device into its upright position again. To replace the coarse dust filter, simply remove the plastic clips and the second filter grille to gain access to the filter pad.

Washing the PF40 filter pad

The filter pad may be washed several times before it needs to be replaced.

To wash the PF40 filter pad simply take the filter pad out of the PF40 frame and rinse the pad under cold water and wipe it gently. Do not use soap or any other cleaners. Let the pad air dry completely before putting it back onto your IQAir system.