

Setting the lock on the Fiddlerman FC300 & FC310 Case

1. Open the lock by pushing the button lever.
2. While pushing the lever, turn the dial to adjust the numbers to your desired passcode.
3. Once the code is entered, release the button and close the lock. Try this a couple times to make sure the case opens with the code you entered.
4. Now, close the clock and change the numbers to lock the case.