 


# RAM X-Grip® ASSEMBLY INSTRUCTIONS (SIDE A)

 
## PARTS INDEX:

- A. RAM X-Grip® SUB ASSEMBLY (QTY. 1)
- B. RAM CRADLE SLIDE SUPPORTS (QTY. 2)
- C. ROUND RUBBER CAPS (QTY. 8)
- D. THIN RUBBER CAPS (QTY. 2)
- E. #8-32 X 1/2" MACHINE SCREW (QTY. 2)
- F. #8-32 NYLOCK NUT (QTY. 2)
- G. #8 X 1/2" SHEET METAL SCREW (QTY. 4)
- H. #8 X 5/8" SHEET METAL SCREW (QTY. 2)

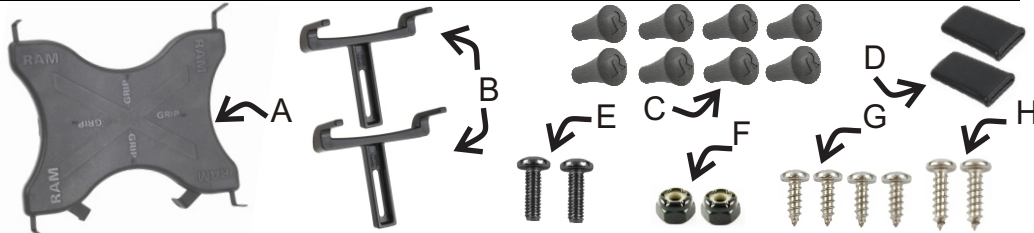


## RUBBER CAPS

- ATTACH (C) ROUND CAPS TO EACH PRONG THAT MAKES CONTACT WITH YOUR TABLET.
- ATTACH (D) THIN CAPS TO HANDLE PRONGS LOCATED BEHIND RAM X-GRIP®.

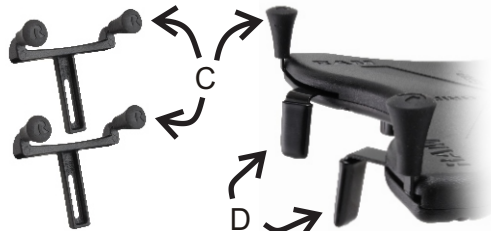


## ATTACHING RAM X-Grip® TO RAM MOUNT

 FOR ATTACHING TO METAL OR ROUND BALL ADAPTERS, USE (G) 1/2" SCREWS ALONG ANY OF THE HOLE PATTERNS.

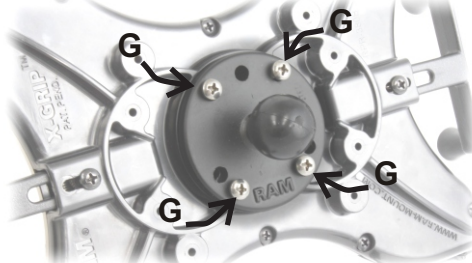


 FOR ATTACHING TO COMPOSITE DIAMOND BALL ADAPTER (RAP-B-238U), USE (H) 5/8" SCREWS ALONG ANY OF THE HOLE PATTERNS.

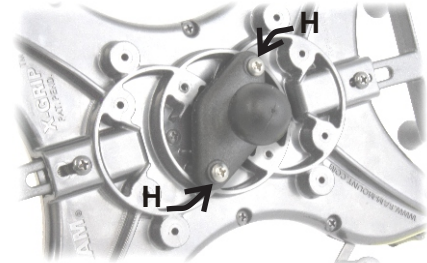


## ATTACHING SLIDE SUPPORTS (NOT REQUIRED)

 1. POSITION (F) NUT AT BOTTOM OF SLOTTED HOLE ON (B) SLIDE SUPPORT.

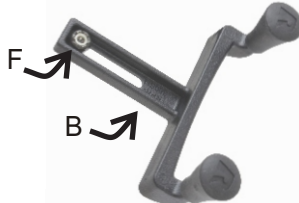

2. POSITION SLIDE AT AN ANGLE (AS SHOWN) INTO BOTTOM HOLE OF (A) X-Grip™ ASSEMBLY. PRESS SLIGHTLY AGAINST INTERNAL SPRING, AND ANGLE (B) SLIDE SUPPORT BACK TO PINCH (F) NUT AGAINST EDGE OF HOLDER.

 DURING THIS STEP, USE CAUTION TO PREVENT NUT FROM FALLING INSIDE OF X-Grip® ASSEMBLY.

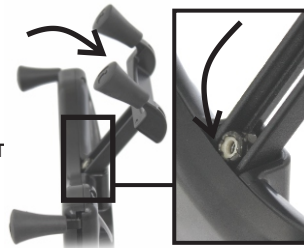

RAM Mounting Systems  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com




This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

# RAM X-Grip® ASSEMBLY INSTRUCTIONS (SIDE A)

 
## PARTS INDEX:

- A. RAM X-Grip® SUB ASSEMBLY (QTY. 1)
- B. RAM CRADLE SLIDE SUPPORTS (QTY. 2)
- C. ROUND RUBBER CAPS (QTY. 8)
- D. THIN RUBBER CAPS (QTY. 2)
- E. #8-32 X 1/2" MACHINE SCREW (QTY. 2)
- F. #8-32 NYLOCK NUT (QTY. 2)
- G. #8 X 1/2" SHEET METAL SCREW (QTY. 4)
- H. #8 X 5/8" SHEET METAL SCREW (QTY. 2)

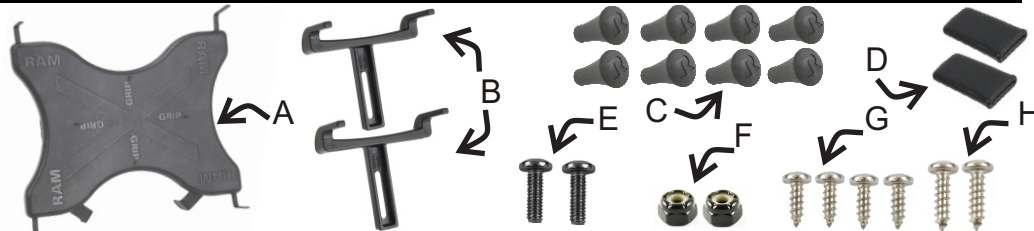


## RUBBER CAPS

 - ATTACH (C) ROUND CAPS TO EACH PRONG THAT MAKES CONTACT WITH YOUR TABLET.
- ATTACH (D) THIN CAPS TO HANDLE PRONGS LOCATED BEHIND RAM X-GRIP®.

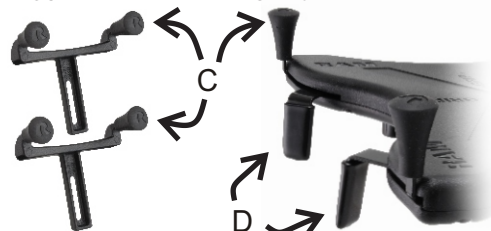


## ATTACHING RAM X-Grip® TO RAM MOUNT

 FOR ATTACHING TO METAL OR ROUND BALL ADAPTERS, USE (G) 1/2" SCREWS ALONG ANY OF THE HOLE PATTERNS.

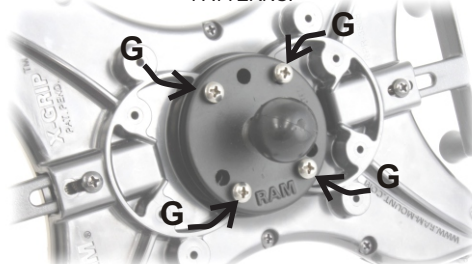


 FOR ATTACHING TO COMPOSITE DIAMOND BALL ADAPTER (RAP-B-238U), USE (H) 5/8" SCREWS ALONG ANY OF THE HOLE PATTERNS.

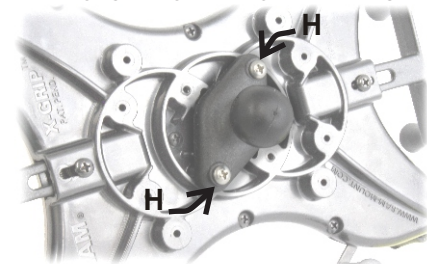


## ATTACHING SLIDE SUPPORTS (NOT REQUIRED)

 1. POSITION (F) NUT AT BOTTOM OF SLOTTED HOLE ON (B) SLIDE SUPPORT.

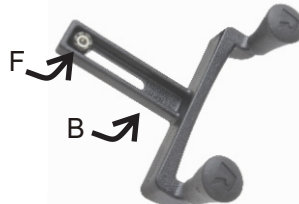

2. POSITION SLIDE AT AN ANGLE (AS SHOWN) INTO BOTTOM HOLE OF (A) X-Grip™ ASSEMBLY. PRESS SLIGHTLY AGAINST INTERNAL SPRING, AND ANGLE (B) SLIDE SUPPORT BACK TO PINCH (F) NUT AGAINST EDGE OF HOLDER.

 DURING THIS STEP, USE CAUTION TO PREVENT NUT FROM FALLING INSIDE OF X-Grip® ASSEMBLY.

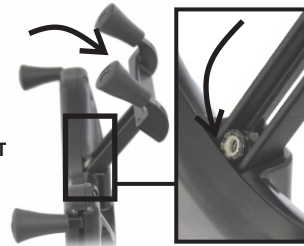


RAM Mounting Systems  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

## RAM X-Grip® ASSEMBLY INSTRUCTIONS (SIDE B)

 3. WHILE HOLDING (B) SLIDE IN PLACE FROM **STEP 2**, INSERT (E) SCREW AT AN ANGLE TO LINE UP WITH (F) NUT. THREAD BY HAND UNTIL THE SCREW LOCKS IN WITH THE THREADS.

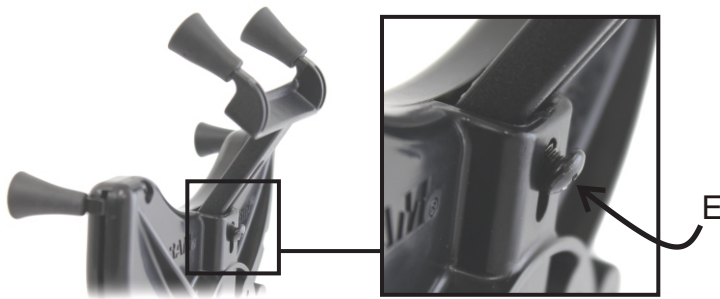

4. ONCE (E) SCREW IS THREADED BY HAND INTO (F) NUT, STRAIGHTEN (B) SUPPORT SLIDE AND FULLY TIGHTEN USING SCREWDRIVER.



5. REPEAT **STEPS 1 - 4** FOR SECOND SUPPORT SLIDE. POSITION TABLET IN HOLDER AND ADJUST SLIDES AS NEEDED. WHEN ADJUSTING SUPPORT SLIDES, DO NOT LOOSEN (E) SCREW BY MORE THAN THREE TURNS.

### LIFETIME WARRANTY ON ALL MOUNTING COMPONENTS

The exclusive NPI Lifetime Warranty states that all RAM mounting components and parts are warranted against defect in materials and workmanship for the life of the product or part. NPI's Lifetime Warranty covers the mount or its components only. The mounted device is not covered under the Lifetime Warranty and will not be replaced if damaged as a result of mount failure. This warranty is expressly limited to the persons in the United States, and all foreign countries who purchase RAM for resale or use in the ordinary course of the buyer's business. This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended, or used in a manner inconsistent with any unstructions regarding its use.

**RAM Mounting Systems**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com

 


**RAM MOUNTS**  
RMR-INS-UN9

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

## RAM X-Grip® ASSEMBLY INSTRUCTIONS (SIDE B)

3. WHILE HOLDING (B) SLIDE IN PLACE FROM **STEP 2**, INSERT (E) SCREW AT AN ANGLE TO LINE UP WITH (F) NUT. THREAD BY HAND UNTIL THE SCREW LOCKS IN WITH THE THREADS.

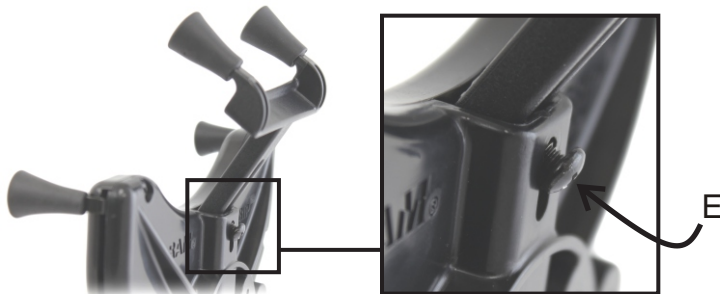

4. ONCE (E) SCREW IS THREADED BY HAND INTO (F) NUT, STRAIGHTEN (B) SUPPORT SLIDE AND FULLY TIGHTEN USING SCREWDRIVER.



5. REPEAT **STEPS 1 - 4** FOR SECOND SUPPORT SLIDE. POSITION TABLET IN HOLDER AND ADJUST SLIDES AS NEEDED. WHEN ADJUSTING SUPPORT SLIDES, DO NOT LOOSEN (E) SCREW BY MORE THAN THREE TURNS.

### LIFETIME WARRANTY ON ALL MOUNTING COMPONENTS

The exclusive NPI Lifetime Warranty states that all RAM mounting components and parts are warranted against defect in materials and workmanship for the life of the product or part. NPI's Lifetime Warranty covers the mount or its components only. The mounted device is not covered under the Lifetime Warranty and will not be replaced if damaged as a result of mount failure. This warranty is expressly limited to the persons in the United States, and all foreign countries who purchase RAM for resale or use in the ordinary course of the buyer's business. This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended, or used in a manner inconsistent with any unstructions regarding its use.

**RAM Mounting Systems**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com



**RAM MOUNTS**  
RMR-INS-UN9

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.