 
 
Phone: 206.763.8361 1.800.497.7479 www.rammount.com support@rammount.com

## Stubby™ User Guide


Cup range

2.57" 3.5"






If the Stubby<sup>TM</sup> is too tight, you can trim any of the rubber fins using scissors.

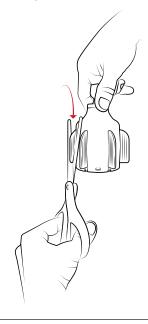

If the Stubby™ becomes loose over time, you can reverse the direction of the twist.

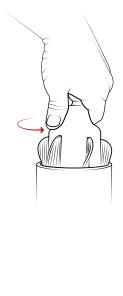

RPR-INS-299-4

To see more mounting options, visit rammount.com


This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.




Phone: 206.763.8361 1.800.497.7479 www.rammount.com support@rammount.com

## Stubby™ User Guide


Cup range

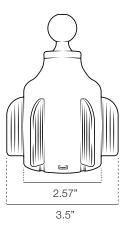


Insert and twist the Stubby™ into your cup holder to create proper friction.

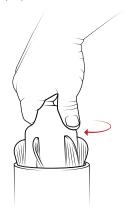

If the Stubby™ is too tight, you can trim any of the rubber fins using scissors.

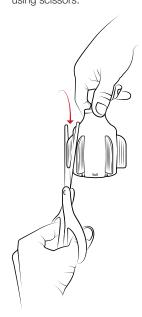


 If the Stubby™ becomes loose over time, you can reverse the direction of the twist.



RPR-INS-299-4

## Stubby™ User Guide

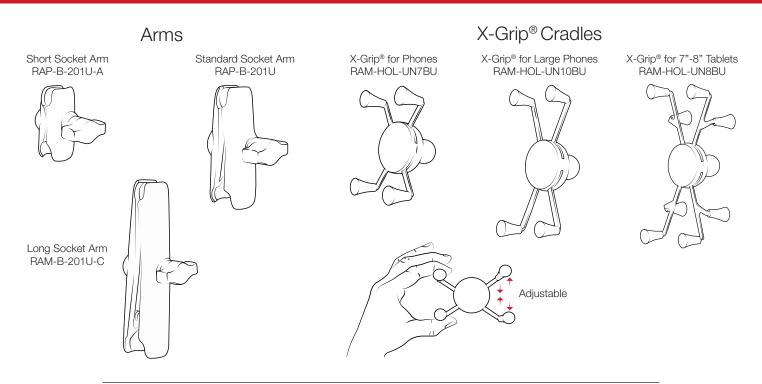

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.



Phone: 206.763.8361 1.800.497.7479 www.rammount.com support@rammount.com

## Stubby™ User Guide

