

OUT FRONT BIKE MOUNT INSTRUCTIONS



more info

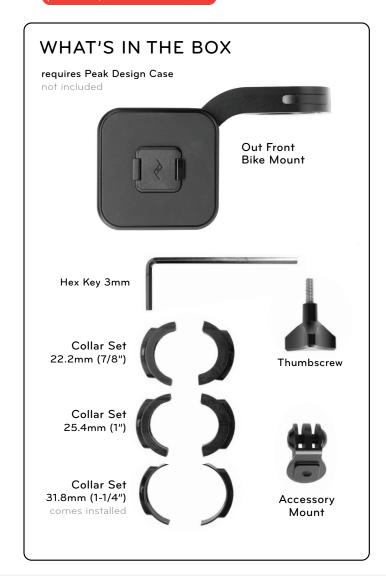

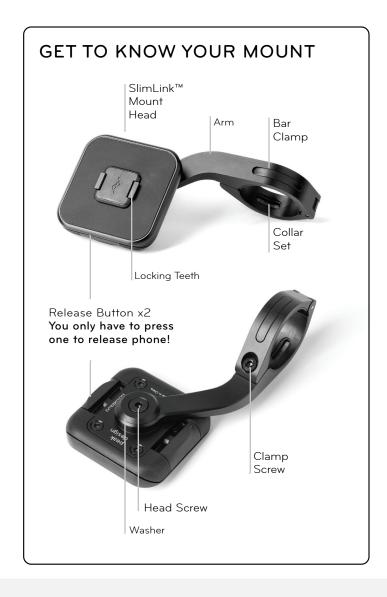

MOUNT INSTALLATION



1. Use Hex Key to loosen the Clamp Screw. Tip: Remove hex screw and replace with thumb screw for "flip-to-film" mode.



2. Select preferred location to install Out Front Bike Mount

(see mounting options).



3. If needed, replace Collar Set to match your bike's handlebar diameter. Push until you hear a "click". The 31.8mm (1-1/4") collar comes installed and fits most road bike handlebars.





4. Partially tighten Clamp Screw, rotate Out Front Bike Mount to desired angle, tighten to secure. Max torque: 2 N·m.

ACCESSORY MOUNT INSTALLATION

Use Accessory Mount to install GoPro compatible bike light or action camera.



1. Remove Head Screw and Washer behind Mount Head.



2. Install Accessory Mount. The Washer is not used in this configuration.



3. Install Out Front Bike Mount.



4. Attach light or action camera.

MOUNT USE



Attach/Detach Phone Requires Peak Design Case (sold separately). Place phone on mount and listen for the "click" to ensure your phone is locked. To remove, push just one of the Release Buttons and pull phone.



Flip-to-Film
The optional Thumbscrew allows you to
quickly adjust the mount
angle for filming or
time-lapses. Tip: use the
ultra-wide setting on
your phone.

MOUNTING OPTIONS

Mount your phone to fit your riding style.



Out-Front | Portrait



Out-Front | Landscape



Flush | Landscape



Reverse | Portrait

FLUSH MOUNTING

How to Flip the SlimLink™ Mount Head



1. Remove the **Head Screw** and **Washer**.



Remove the SlimLink™
 Mount Head and reinstall
 on the underside of the
 Arm.



3. Mount to your handlebars (per installation instructions).



Pro Tip: andscape Mode

If you find yourself consistently using your phone in landscape mode, consider reinstalling the SlimLink™ Mount Head at 90° for easy access to the Release Buttons.

Stay safe. Do not interact with or remove phone from the mount while in motion.