

## Assembly Instructions for Camera Ball Head

Loosen the gooseneck set screw. Thread the Camera Ball Head into the gooseneck. GENTLY tighten the set screw. To remove the Camera Ball Head, use the 2mm Allen wrench to loosen the set screw first. Then unscrew the Camera Ball Head (counter clockwise) from the gooseneck.

TOOLS REQUIRED: 2 mm Allen wrench (included)



Camera Ball Head



Set screw

Gooseneck

SnakeClamp Products LLC

[www.SnakeClamp.com](http://www.SnakeClamp.com) [support@snakeclamp.com](mailto:support@snakeclamp.com)

