

Assembly Instructions for Camera Mount Adapter

Loosen the gooseneck set screw. Thread the Camera Mount Adapter into the gooseneck. GENTLY tighten the set screw. To remove the Camera Mount Adapter, use the 2mm Allen wrench to loosen the set screw first. Then unscrew the Camera Mount Adapter (counter clockwise) from the gooseneck.

NOTE: 2mm Allen wrench is included for assembly/disassembly. Keep this in a safe place.

TOOLS REQUIRED: 2 mm Allen wrench (included)



Camera Mount Adapter



← Set screw

Gooseneck

SnakeClamp Products LLC

www.SnakeClamp.com support@snakeclamp.com

