


Assembly Instructions for Double Clamp SnakeClamp

Your Double Clamp SnakeClamp is pre-assembled. However if you wish to tighten your spring clamp or replace it with another of our many attachments or mounting bases, follow these steps:

First loosen the set screw at the end of the gooseneck. Then you can remove or tighten the 3/8" screw as desired. After reassembly gently tighten the set screw.

TOOLS REQUIRED: 7/32 and 2 mm Allen wrench (included)

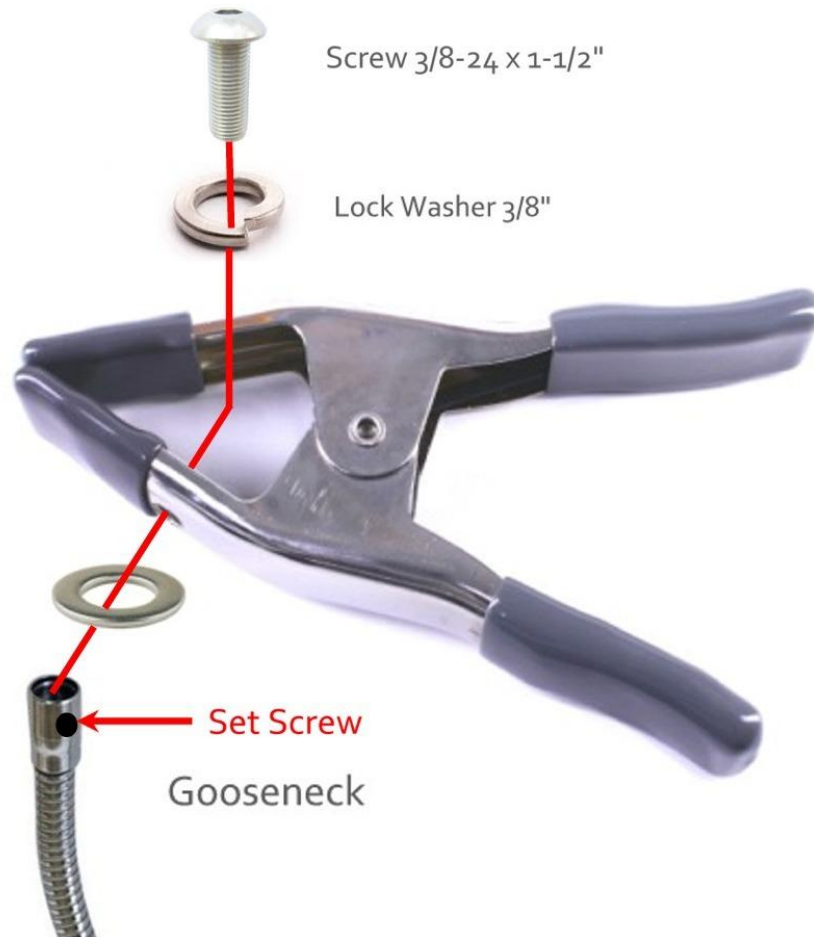

SnakeClamp Products LLC

www.SnakeClamp.com

support@snakeclamp.com

 **snakeclamp**