


How To Disassemble Your SnakeClamp

Prior to removing the large 3/8" screw securing your base or attachment, you must first loosen the 4mm set screw. Both large and small Allen wrenches are included with your SnakeClamp.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

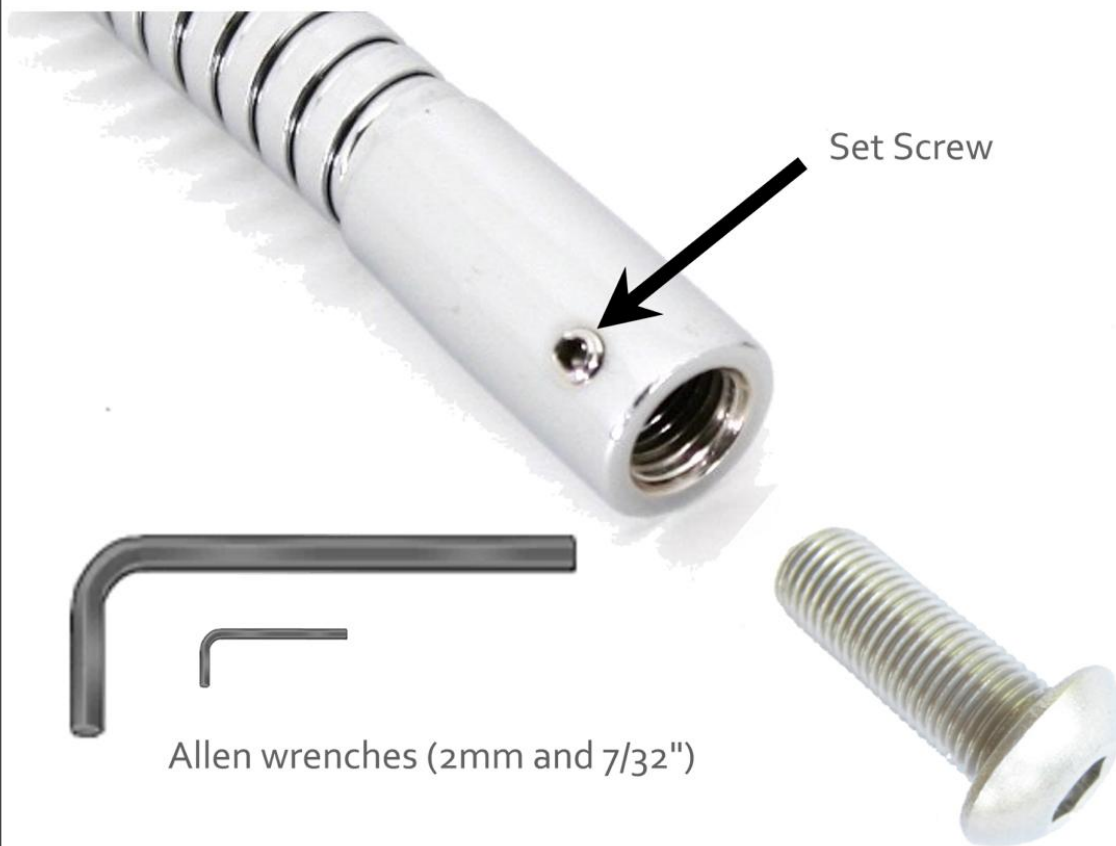

- SnakeClamp Products -

www.SnakeClamp.com

support@snakeclamp.com

snakeclamp