

COASTER[®]
Fine Furniture

102068

COUNTER HEIGHT SQUARE TABLE

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.please check to see that all hardware and parts are present prior to start of assembly.
- 3.please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








Warning !






- 1.Don't attempt to repair or modify parts that are broken or defective. please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

Z

HARDWARE PACKAGE:


- A . TABLE TOP  1 PC
- B . PEDESTAL TOP BOARD  1 PC
- C . SIDE PANEL A  2 PCS
- D . SIDE PANEL B  2 PCS
- E . BASE  1 PC

NO	DESCRIPTION	FIGURE	QTY
1	BOLT		32 PCS
2	LOCK WASHER		32 PCS
3	FLAT WASHER		32 PCS
4	WOODEN DOWEL		20 PCS
5	ALLEN WRENCH		1 PC

Assembly Instruction


STEP 1

Compose the SIDE PANEL A & B as PEDESTAL. Place the WOODEN DOWEL to firm-up and use FLAT WASHER, LOCK WASHER and BOLT to fix and fasten tight by ALLEN WRENCH.

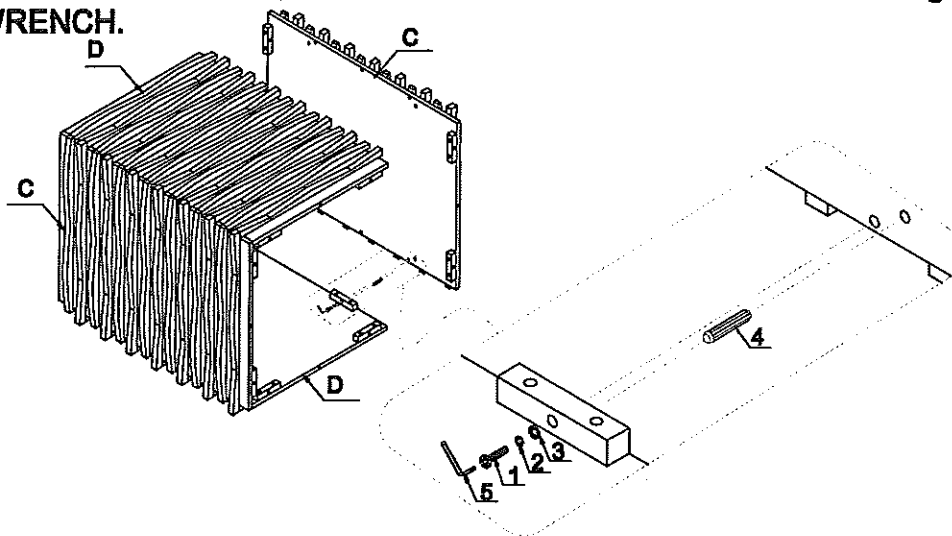

STEP 2


Put on PEDESTAL TOP BOARD and place FLAT WASHER, LOCK WASHER and BOLT to fix by ALLEN WRENCH.

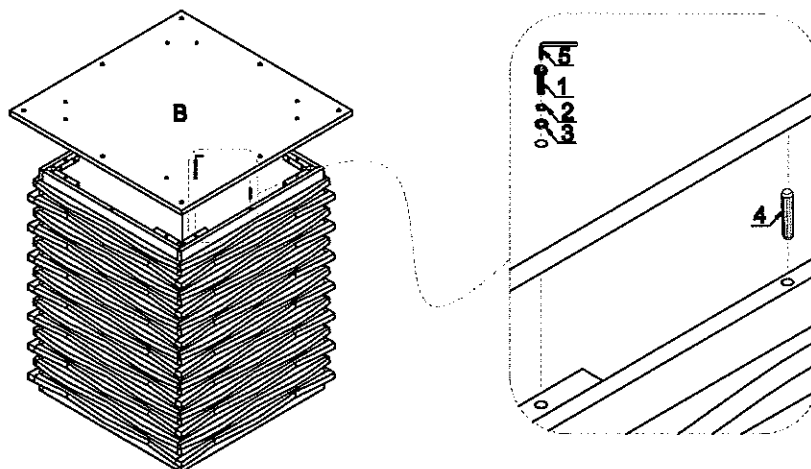

Assembly Instruction

STEP 3

Put on the TABLE TOP and BASE. use FLAT WASHER, LOCK WASHER and BOLT to fix and fasten tight by ALLEN WRENCH.

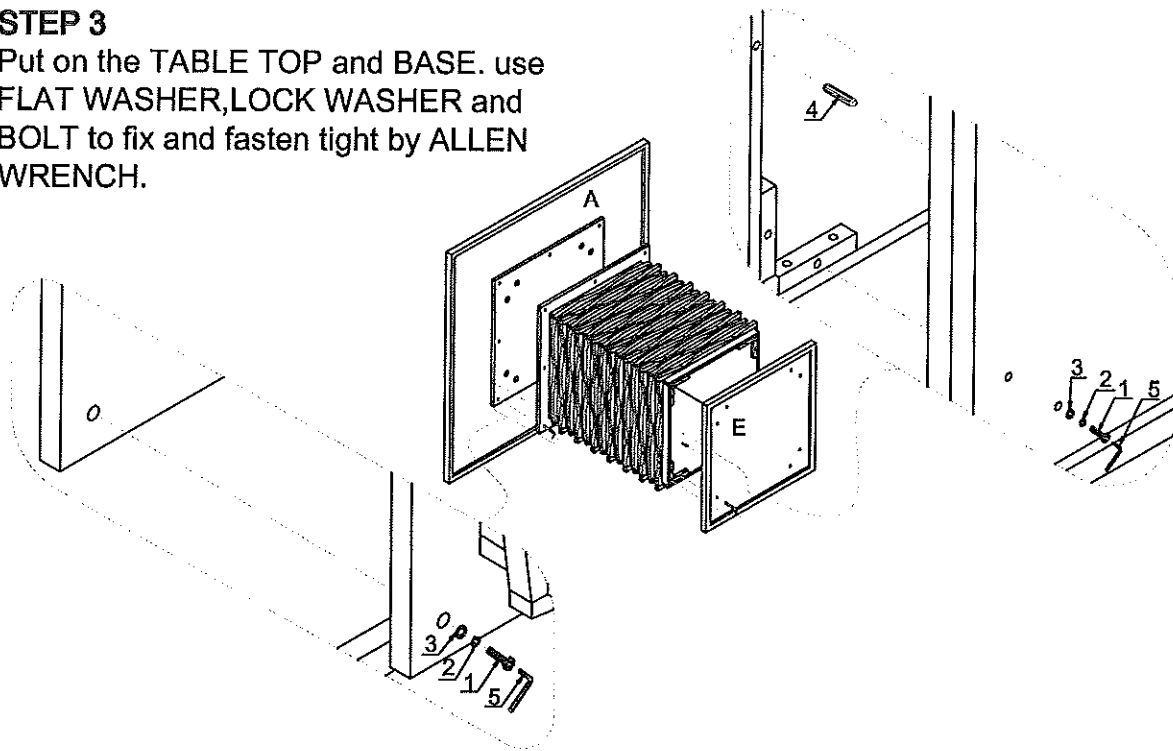

STEP 4

Assembly complete.

