

**COASTER**<sup>®</sup>  
FINE FURNITURE

**900749**

**GRANDFATHER CLOCK**

---

**ASSEMBLY INSTRUCTION**

**COASTER FINE FURNITURE**



**ITEM: 900749**


**ASSEMBLY INSTRUCTION**

Congratulations! You are now the proud owner of a fine precision timepiece. It has been carefully designed and crafted to give you years of dependable operation. Read this Instruction Manual thoroughly before assembling and operating your clock in order to become familiar with its many features, thereby assuring your proper performance and continued enjoyment. Keep the manual in a safe place for future reference.

Your clock is fitted with a Westminster Chiming movement. This has an automatic night silence function that silences the Chimes between 10.00 P.M. and 6.00 A.M. (last strike 9PM, first strike 6AM).

Please make sure you have 2 x D Alkaline batteries, as these are not included. You will also need a head screwdriver.

**IMPORTANT NOTE: ALWAYS MOVE THE HANDS IN CLOCKWISE DIRECTION.**

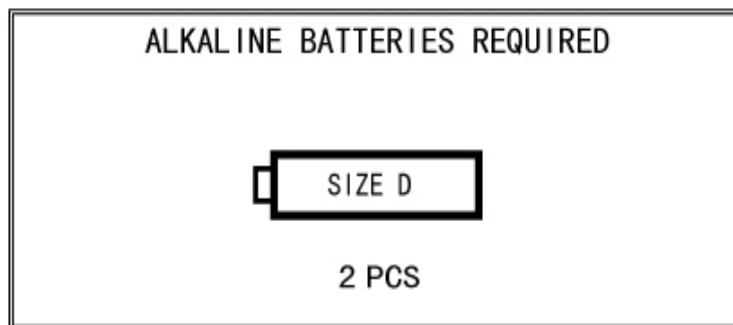

**CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!**


**BEFORE YOU ASSEMBLE**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our service department.

**IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLING TO PREVENT DAMAGE TO PARTS.** Follow instructions listed below in the proper sequence to assure fast, easy and correct assembly.

**ASSEMBLY TOOLS REQUIRED**

ASSEMBLY TOOLS REQUIRED

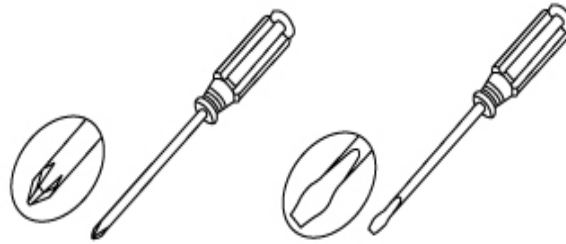

**COASTER**<sup>®</sup>  
Fine Furniture

www.coastercompany.com




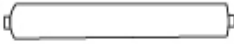 




PAGE 2 OF 8





ITEM: 900749

ASSEMBLY INSTRUCTION

**PARTS AND HARDWARE LIST**

Carefully unpack all parts and compare each item to the following list to be sure you have everything required:

| No | Description                                | Q'ty | Sketch  | No | Description  | Q'ty | Sketch  |
|----|--|------|---|----|--|------|---|
| A  | <b>Top Unit</b><br>In Polyfoam Box         | 1    |  | H  | <b>Pendulum</b><br>In Polyfoam Box                       | 1    |  |
| B  | <b>Front Door</b><br>In Polyfoam Box       | 1    |  | I  | <b>Decoration Weights</b><br>In The Hole Of Polyfoam Box | 2    |  |
| C  | <b>Left Side Panel</b><br>In Polyfoam Box  | 1    |  | J  |  |      |   |
| D  | <b>Right Side Panel</b><br>In Polyfoam Box | 1    |  | K  | <b>Machine Screws</b><br>In The Hole Of Polyfoam Box     | 8    |  |
|    | <b>Back Panel</b>                          |      |  |    | <b>Decoration Chains</b>                                 |      |   |
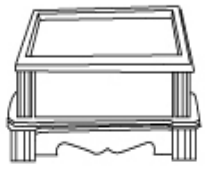
|   |                                      |   |   |   |   |   |   |
|---|--------------------------------------|---|---|---|---|---|---|
| E | <b>Back Panel</b><br>In Polyfoam Box | 1 |   | L | <b>Decoration Chains</b><br>Fixed In The Top Unit | 4 |   |
| F | <b>Base Unit</b><br>In Polyfoam Box  | 1 |  | M | <b>Fixing Bars</b><br>In The Hole Of Polyfoam Box | 2 |  |
| G |                                      |   |   |   |   |   |   |

**ITEM: 900749**


**ASSEMBLY INSTRUCTION**

**NOTES**


PLEASE MAKE SURE CLOCK IS IN LEVEL POSITION, OTHERWISE IT WILL NOT OPERATE PROPERLY.

**1. Assemble the clocks as following steps.**

- (1). Select location for assembled grandfather Clock. Place pre-assembled Base Unit (F) in this location. Note: Location selected is against a wall, place Base Unit far enough away from wall to allow for movement on all sides until assembly is completed.

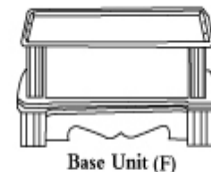

- (2). Fit Left Side Panel (C) ( side panel without pre-attached hinges ) into groove on top of Base Unit, as shown in the illustration. Attach Left Side Panel(C) to Base Unit(F) using 2 Machine Screws (K) (provided). Screws should be inserted from the inside of the Panel, as shown in the illustration. Tighten using screwdriver. Do not over-tighten.

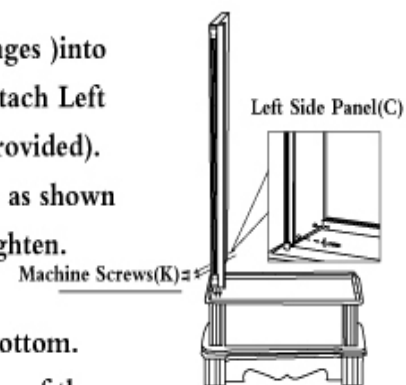


PLEASE NOTE. Each Side Panel has a groove from top to bottom. This Groove should be facing inward and should be at the rear of the

Right Side Panel(D)

This Groove should be facing inward and should be at the rear of the Base Unit(F).

- (3). Follow process described as step (2) to attach the Right Side Panel ( D ) ( Side Panel with pre-attached hinges ) to the Base Unit(F).

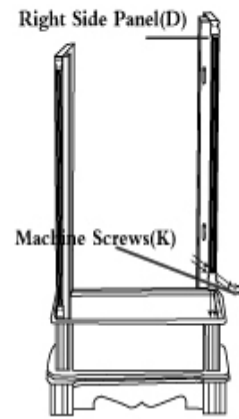

- (4). Align the Back Panel (E) with the two grooves inside the Side Panels (see illustration). Slide the Back Panel(E) into these grooves until tops of all panels are even.



**COASTER**<sup>®</sup>  
Fine Furniture

[www.coastercompany.com](http://www.coastercompany.com)

PAGE 4 OF 8

**ITEM: 900749**

**ASSEMBLY INSTRUCTION**



- (5). Press top unit (A) down until securely attached.




- (6). Carefully place the pre-assembled Top Unit (A) onto the Side and Back Panel(E) assembly, as shown in the illustration. Attach Top Unit(A) to



Panel(E) assembly, as shown in the illustration. Attach Top Unit(A) to Side and Back Panel(E) assembly using 4 Machine Screws (K) ( Provided ). Screws(K) should be inserted from the inside as shown in the illustration. Tighten screws using screwdriver until tight.

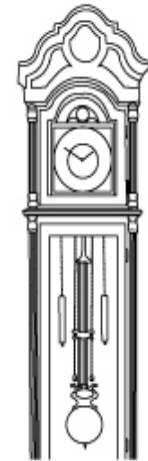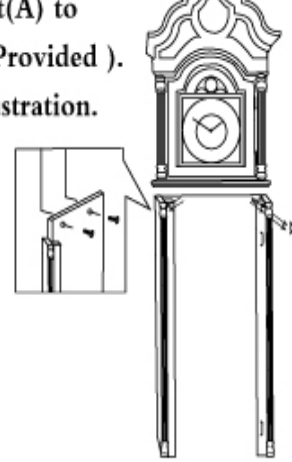

- (7). Hook the 2 Weights (I) onto the ends of the Decoration Chains (L). Note the Weights(I) are only decorative and can be placed in any location except directly in front of the Pendulum Bob – as this would interfere with the swing of the Pendulum(H).

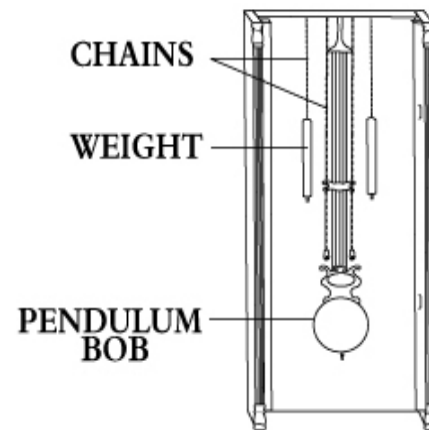

**COASTER**<sup>®</sup>  
Fine Furniture

[www.coastercompany.com](http://www.coastercompany.com)

PAGE 5 OF 8


**ITEM: 900749**

**ASSEMBLY INSTRUCTION**

- (8). Attach Front Door(B) by aligning pre-attached hinges on Door with corresponding pre-attached hinges in front of Right side Panel(D). Connect



hinges on Door with corresponding pre-attached hinges in front of Right side Panel(D). Connect hinges to secure door (see illustration).

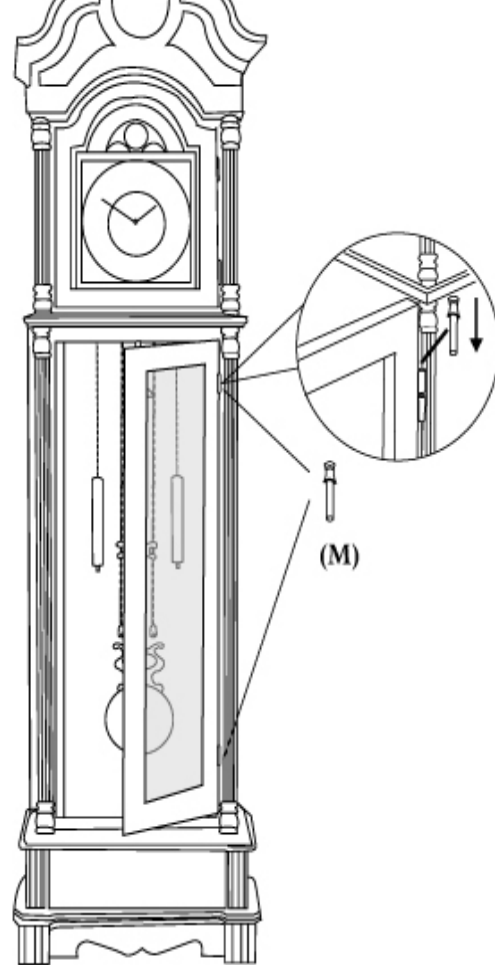


## WARNINGS


1. Be sure to keep your clock clean and away from moisture or corrosive environment.
2. Changing the working area and environment may cause a change of average day error because of the effect of the changes of longitude temperature height etc..
3. Wax and polish the wood case as frequently as you do your other fine furniture. And clean the outside of the glass on your clock periodically. Do not wipe the inside of the glass, if there are any designs on the glass. This will destroy the designs on the glass.
4. When you have finished installing your clock and have determined that it is working properly, safely dispose of all packing materials and keep them out of children's reach.
5. Do not place anything on the top of the clock as this could cause it to become unstable. This could affect the accuracy of chimes and/or create a tipping hazard.
6. To avoid tipping, be sure your clock is placed on a sturdy, flat surface. test the clock to be sure it is stable before leaving it. especially if you are placing it on carpet. Recheck its stability within an hour or so of first placing it to be sure it has not shifted.
7. Keep the manual for future reference.

**Operating the clocks with pictures as following steps.**


1. Lift the up-cover from the back of the top unit(A),you will find a battery holder and pendulum driver (Step 1)  
 Open the battery cover, insert 2 new 1.5 volt "D" alkaline batteries into the battery compartment
2. Showing to take off the protected paper label from hanger support (Step 2)
3. Put on the pendulum(H) in right holes in both of hooks gently. (Step 3)
4. Push the bob of pendulum(H) leftwards to let the clock run. (Step 4)
5. Turning rightwards the longer hand only to desired time (never turn the short hand). (Step 5)
6. Pictures to assemble the decorative parts:  
 Open the plastic bag gently in the top unit(A) and chains(L) will be spread down. (Step 6)
7. Please hang the weights(I) gently onto hook of chain one by one (short chains only) (Step 7)  
 Longer chains without any more decoration added.

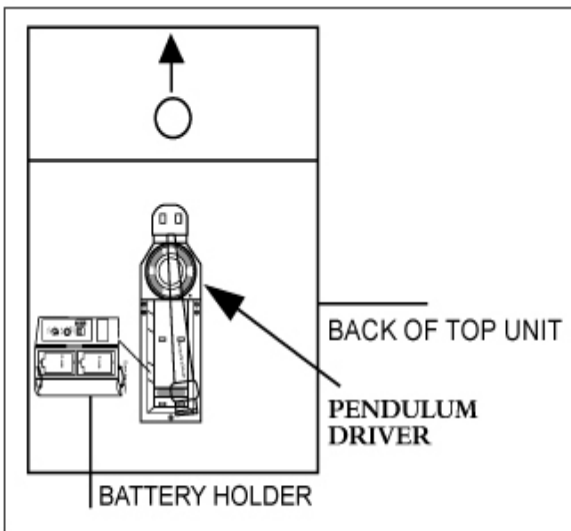


Step 1

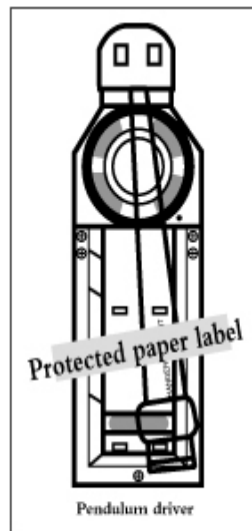


Step 2

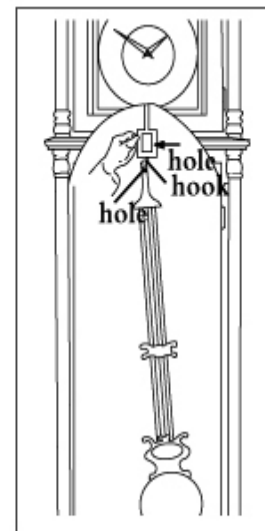


Step 3

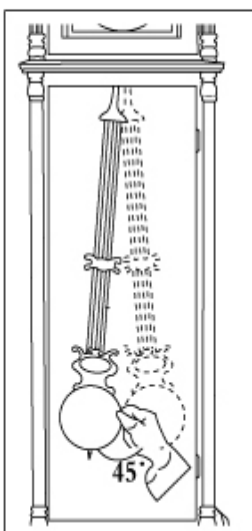


Step 4

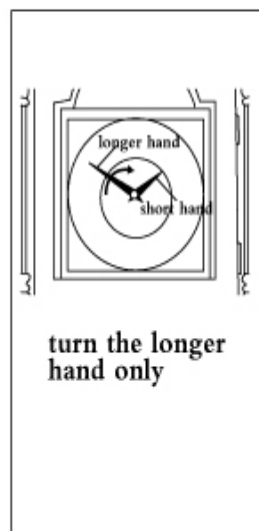

Step 5

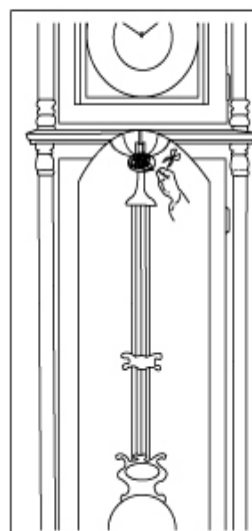

Step 6

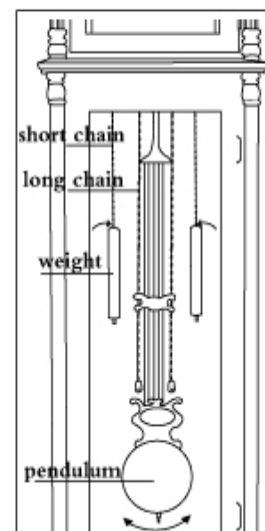

Step 7






**ITEM: 900749****ASSEMBLY INSTRUCTION****OPERATING INSTRUCTIONS****1. TO START THE CLOCK**

Lift the up-cover from the back of the top unit, you will find a battery holder (picture P2), open the battery cover, insert 2 new 1.5 volt "d" alkaline batteries into the battery compartment making sure the battery is as indicated if the battery is already in clock, please remove insulator and reinsert batteries.(step 1)

**2. TO SET TIME**

Turn the minute hand clock wise tenderly until the desired time is obtained on the dial. never strong push or turn the hands anticlockwise, it would cause damage of movement.(step 5)

**3. TO ADJUST MELODY SELECT**

The button in position(  ): striking only in hours; the button in position(  ): the speaking westminster chime in hours; the button in position(  ): striking and westminster chime in hours. the clock will keep silence from pm10:00 to 5:55 am the next day.

**4. TO ASSEMBLE THE PENDULUM(H)**

Release pendulum(H)support by gently pulling towards the rear of the clock and pushing it to the side and letting it hang free. hook the pendulum(H)on the pendulum support so that the brass face of the pendulum bob is toward the front of the clock. push the pendulum(H)sideward gently then it swings automatically.(step 3、 4)

**5. TO INSTALL WEIGHTS(I)**

In the accessory box you also find two weights(I). firstly release the chains(L) in the middel of clock and then hang the weights(I).note:before hang the weights(i), make sure the clock stands in level position to avoid the glass broken by cause of weights(I). ( step 6、 7 )

**6. TO ADJUST TIME**

Press the "time adj" button for adding the time of striking. for example, if the clock counts 2 times at 4 o' clock, please press button two times then it gives corrected strike.

**7. TO ADJUST VOLUME CONTROL**

To turn button rightward or leftward to obtain the desired sound.

## NOTE

1. Be sure to keep your clock clean and away from moisture or corrosive environment.
2. Changing the working area and environment may cause a change of average day error because of the effect of the changes of longitude temperature height etc..
3. Wax and polish the wood case as frequently as you do your other fine furniture. And clean the outside of the glass on your clock periodically,do not wipe the inside of the glass.This will destroy the designs on the glass.
4. Keep this manual for future reference.

''' ←

m

**CTION**

lly  
ial  
ny  
ial

ght  
'M,

.so

**N.**

**LE**

re-  
se  
be  
ce

IT  
re

ly.com

CTION





y.com

CTION



l

y.com

CTION

1y.com

CTION



)

it.  
ay

nd  
of  
he

rk-  
r's

ne

he  
on  
ias

**CTION**

1)

2)

3)

4)

5)

6)

7)

[ ]

[ ]



y.com

## CTION

e P2)  
ttery  
ck,

dial.  
e of

: the  
and  
the

ng it  
rt so  
the

the  
sure  
tep 6

lock  
ike.

error

clean

This

ty.com