

SLIM-POD II

Operating Instructions

Thank you very much for choosing SLIK SLIM-POD II.

The SLIK Corporation has designed your Monopod to be a sturdy, rugged, dependable product that will provide you with many years of satisfac-tory use.

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Monopod many fine features. Retain this operating instruction in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

○ Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

Folded length 500 mm

(19 3/4")

Max. operating height 1,530 mm


(60 1/6")

Weight 280 g


(10 oz)

Components


L311

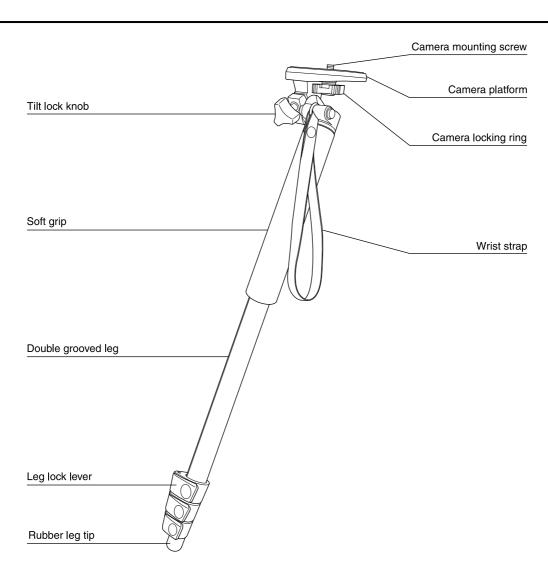

Mounting camera to camera platform

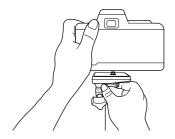

Hold the camera firmly, and turn the camera mounting screw until the camera securely tightened.

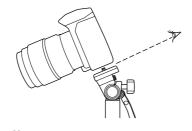

Note:
When you attach the camera to the camera platform, you can mount the camera more easily by tilting the camera platform to come in sight the threads of camera mounting screw.


How to use panhead



To tilt your camera once it is attached to the Slim-Pod $\rm I\!I$, loosen the Tilt lock knob by turning it counterclockwise.

To lock it in position, tighten the Tilt lock knob by turning it clockwise (be careful not to overtighten).

Extending the leg

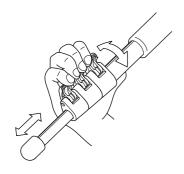


To extend the leg sections, open the Leg lock lever and extend the Slim-Pod ${\rm I\!I}$ to the approximate desired height. Close the Leg lock lever by pressing them down.




You'll be glad to know the round tube design of your monopod's leg are made for maximum strength.

This prevents fwisting and provides excellent torsional rigidity.


To take a 90° vertical photo

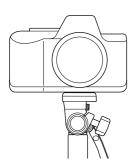

When you wish to change camera to vertical position, mount the camera as per figure above.

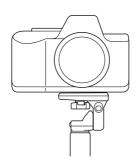


Camera mounting configuration horizontal position.

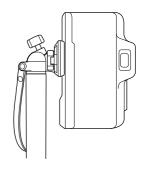

Then turn the Camera platform to tilt 90° from horizontal to vertical by using Tilt lock knob. When using vertical position, ensure the camera is securely tightened to the Camera platform.

Wrist strap



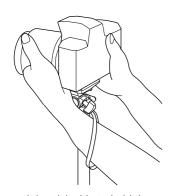

As a safety measure it is advisable to hold the camera through the Wrist strap.

Carrying the slim-pod II





To avoid any damage of camera, it is not advisable to carry the monopod with attaching camera.

It is recommended that the camera should be removed from monopod after taking photographs.

Care of the slim-pod II

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.