
Extending the tripod legs

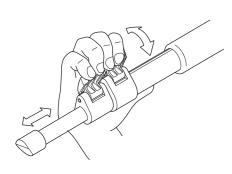


Flip up the leg lock lever to extend or shorten any of the individual leg sections to the desired length and press the leg lock lever flush against



It is easier to extend the tripod legs while you hold the tripod rubber leg tip downward


Operating the center column

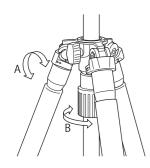

A - Screw-type

Center column stopper is used to lock or unlock center column.


Center column locking nut is used to adjust a tension of the movement. The both of A and B must be locked for fixing center column.

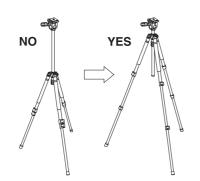


To avoid unnecessary camera vibrations, try to keep the center column height to a minimum.

Also use the larger legs first when extending the legs.

How to get low position shots

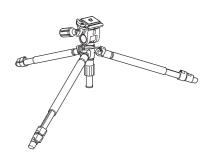

You can get lower height.

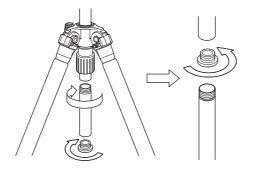

Remove the center column base stopper. Then remove the lower part of center column

Put the center column base stopper on the upper part of center column.

Care of the tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and ad vanced notice.

SLIK CORPORATION



PRO 330EZ Tripod series

Operating Instructions

Thank you very much for choosing the SLIK PRO 330EZ Tripod series. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as aresult of mishandling this product.

○Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

PRO 330EZ

Folded length 600mm (23.7in) Max. operating height 1.583mm (62.2in) Max. center column ext. 350mm

(13.7in)

1,725g

(3.9lbs)

490mm

PRO 340EZ Folded length

Weight

(19.3in) Max. operating height 1.431 mm


(56.3in) Max. center column ext. 290mm

(11.4in)

Weight 1,645g (3.7lbs)

Components

K016-2

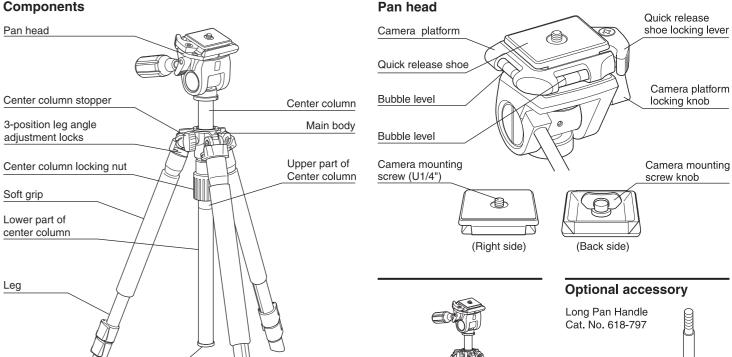

Leg lock lever

⚠ Caution

Leg lock

tripod.

Rubber leg tip

Center column base stopper

*Soft grip is consumables. Replace when it is worn out.

*Color of the soft grip can be stained. Keep out from objects.

Equipment that can be loaded on this tripod

This product has been designed to handle equipment weighing under 2 kgs (4.4 lbs). Do not overload. Some equipments weighing under 2 kgs (4.4 lbs), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger

○ Prohibition

Carrying the tripod

PRO 330EZ



Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Pan head mounting post **○** Prohibition

PRO 340EZ



Do not attach camera directly to the threaded post of the center column. This may damage both camera and tripod.

Setting up


Length 202mm(7.95in).

This accessory pan handle is 70mm

(2.75in) longer than the included


pan handle for easier movements

with spotting scopes and binoculars.

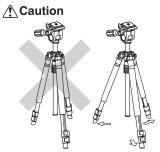


To prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened, and that all three legs are opened all the way.

Attaching a camera

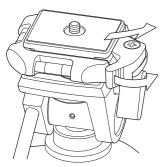


To remove the quick release shoe, turn the quick release shoe locking

In this case, please do not put the lock lever back by force as it has been stood by the stopper.

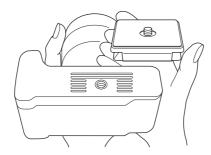


Insert the camera mounting screw on the quick release shoe in the place of the tripod attachment screw of your camera.

Turn the camera mounting screw knob and fix firmly.

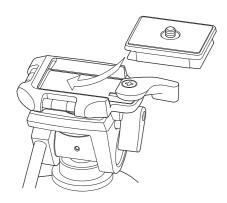


To attach the quick release shoe, slide into quick release shoe slantways. If will be closed automatically after attaching.

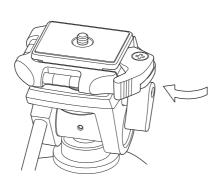


Fasten the quick release shoe locking lever on tightly. It will be certainly fixed.

Using the pan head

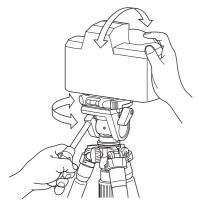


When you unlock the handle, your camera is free to move up and down. When the pan & tilt handle is unlocked, you can pan & tilt simultaneously.

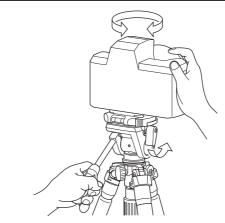


When you unlock the camera platform locking knob, raise the knob it to the vertical "release" position. The camera can be free to rotate.


How to get vertical position

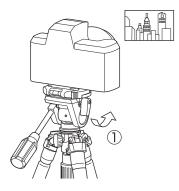

1.Loosen camera platform locking knob.

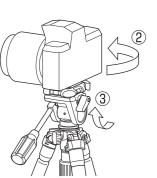


2.Turn your camera to the side. 3. Tighten camera platform locking knob.

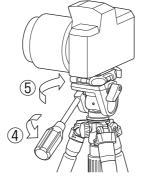


4.Loosen pan & tilt handle for your camera to the front.

5.Turn the whole of pan & tilt handle.

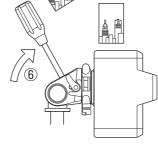


6.Adjust pan & tilt handle to get vertical position.

Removing the head from the center column

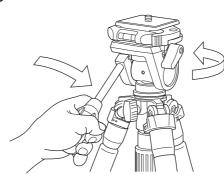


Use the following instructions if you wish to change heads or attach accessories. Tighten the pan & tilt handle. Turn the pan & tilt handle. Turn counter-clockwise to loosen.

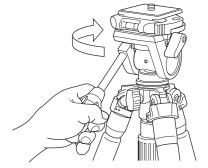


Set the new head or accessory on the tripod's threaded post. Turn clockwise until it comes to a stop.

Tighten the pan & tilt handle and turn clockwise slightly more.

How to change the panhead attachment screw

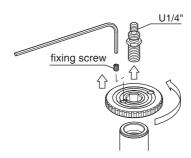


To change the U3/8" screw, loosen the fixing screw with an allen wrench (2.5mm width) and rotate the center column plate to remove from the center column. Then push out the panhead attachment screw from the bottom.

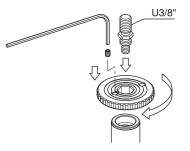


Flip the panhead attachment screw and put back to the center coumn plate. Screw in the center column plate and the panhead attachment screw. Tighten the fixing screw to avoid the rotating the center column plate while

Three position adjustable legs

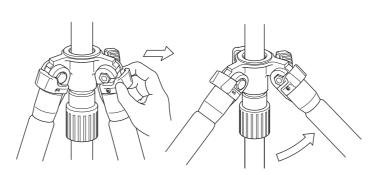

To change the angle of each leg, close the leg slightly. Then pull the 3-position leg angle adjustment locks. There is a choice of two other angle positions.


⚠ Caution

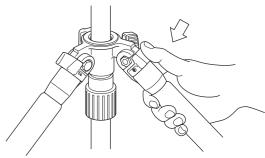

After choosing the desired leg angle, securely push the adjustment lock.

Inverting the center column

♠ Caution

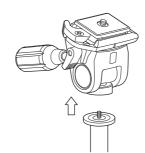

Remove the center column base stopper from the bottom of the center column.


and the locking collar, and then pull out the center column.

♠ Caution Center column base stopper

Insert the new replacement center column through the top, then tighten the locking collar. Always be sure to return the center

column base stopper back on the This prevents the center column pulled out accidentally.

○ Prohibition

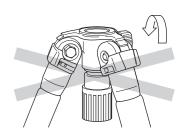

Please do not turn the center column stopper without a center column &/or an optional short center column. The internal parts may be damaged.

Remove the pan head when inverting or replacing the center column.

Loosen the center column stopper

bottom of the center column.