


Extending the tripod legs

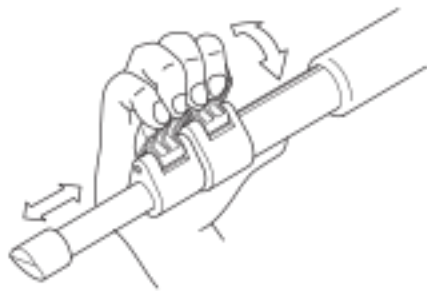

Flip up the leg lock lever to extend or shorten any of the individual leg sections to the desired length and press the leg lock lever flush against the leg to lock.

It is easier to extend the tripod legs if you turn the leg-tips to the foot, while leaving legs close.


Operating the center column



A - Screw-type
Center column stopper is used to lock or unlock center column.
B - Twist-type
Center column locking nut is used to adjust a tension of the movement.
The both of A and B must be locked for fixing center column.

To avoid unnecessary camera vibrations, try to keep the center column height to a minimum.
Also use the larger legs first when extending the legs.

How to get low position shots

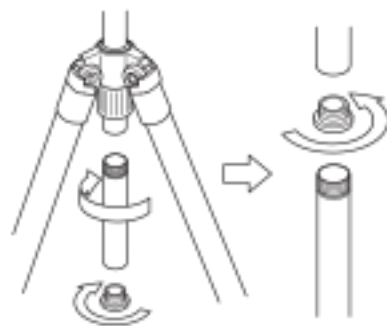

You can get lower height.

Remove the center column base stopper and then, remove the lower part of center column.
Put the center column base stopper on the upper part of center column.

Care of the tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION
853 Kayama, Hidaka City, Saitama 350-1231, Japan Phone 81-42-989-2141, Fax 81-42-985-0210 ©2015

SLIK®

PRO 300 SERIES Tripod

Operating Instructions

Thank you very much for choosing SLIK PRO 300 SERIES Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Tripod's many fine features.

Retain this operating instruction in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

| PRO 330DX, PRO 330DX-B | |
|-------------------------|--------------------|
| Length folded | 600 mm (23.7 in) |
| Max. operating height | 1,592 mm (62.5 in) |
| Max. center column ext. | 350 mm (13.7 in) |
| Weight | 1,705 g (3.8 lbs) |
| PRO 340DX, PRO 340DX-B | |
| Length folded | 490 mm (19.3 in) |
| Max. operating height | 1,440 mm (56.6 in) |
| Max. center column ext. | 290 mm (11.4 in) |
| Weight | 1,625 g (3.6 lbs) |


E646-3

Components

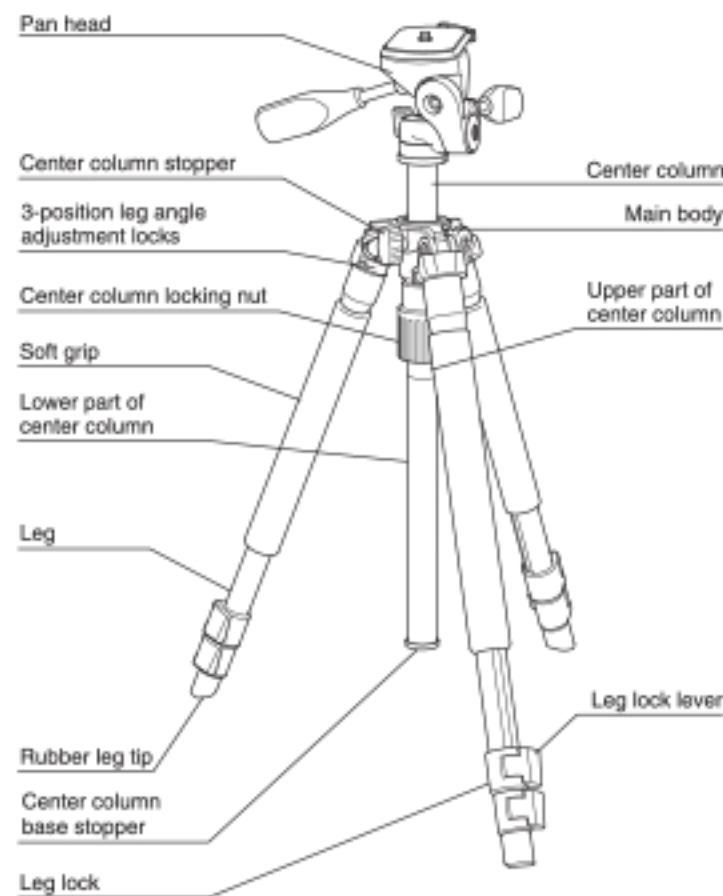

PRO 330DX, PRO 330DX-B

Pan head

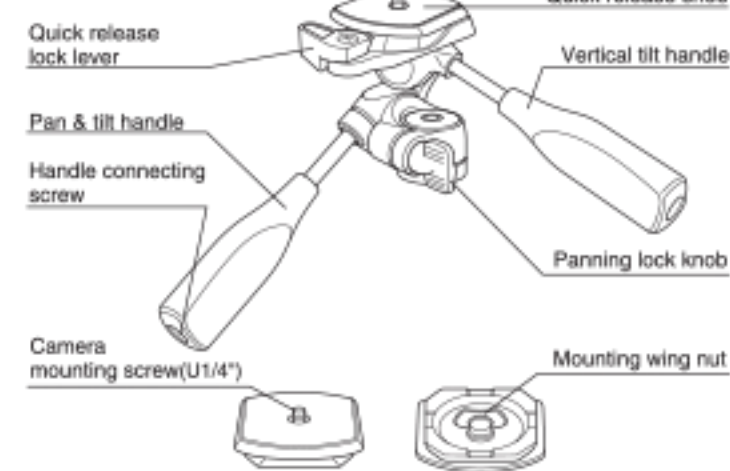

PRO 340DX, PRO 340DX-B

Equipment that can be loaded on this tripod

🚫 Prohibition


This product has been designed to handle equipment weighing under 3 kgs (6.6 lbs). Do not overload. Some equipment weighing over 3 kgs (6.6 lbs), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

⚠ Caution

- ※ Soft grip is consumables. Replace when it is worn out.
- ※ Color of the soft grip can be stained. Keep out from objects.

Carrying the tripod


🚫 Prohibition

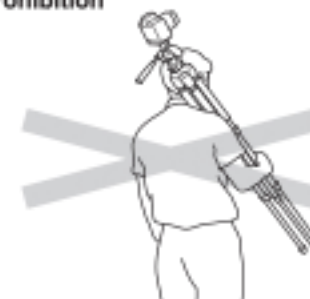

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Setting up


⚠ Caution

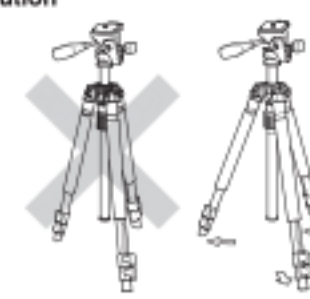

To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened. And all of the three legs are opened all the way.

Pan head mounting post

🚫 Prohibition

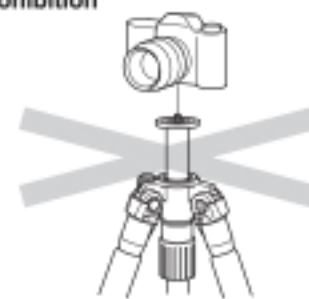

Do not attach a camera directly to the pan head attachment screw. This may damage both your camera and tripod.