



Inverting the Center column


Caution

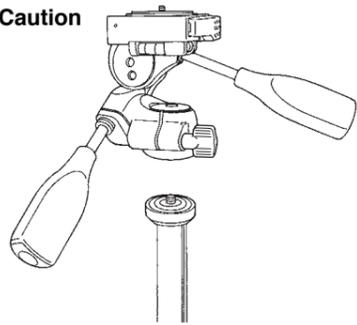


Always remove the Pan head when replacing the Center column.

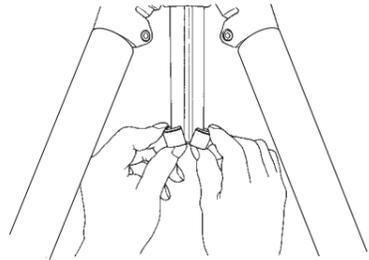

Remove the Rubber stopper from the Bottom of the Center column.

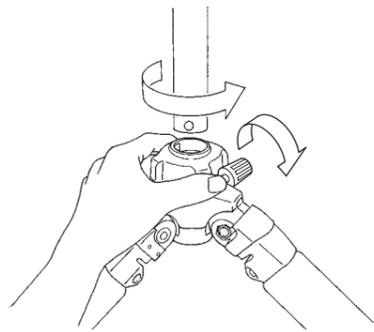


Loosen the Center column stopper and the Locking collar, and then pull out the Center column.

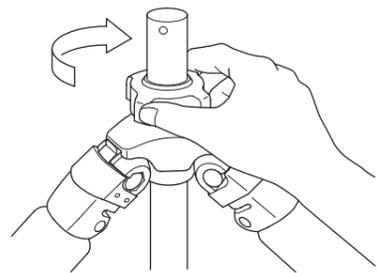


Insert the Center column from the lower side of Main body, and tighten the Locking collar and the Center column stopper.

Caution

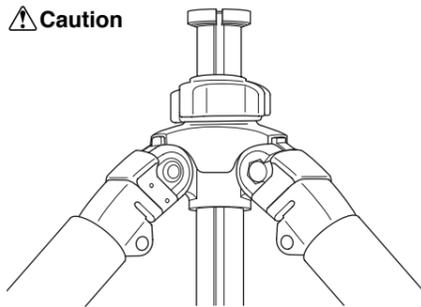


Make sure to re-attach the Rubber stopper, in order to prevent the Center column from falling out.

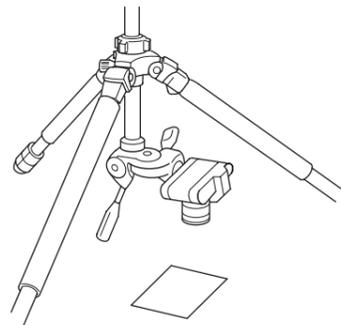


By inverting the Center column, it is possible to do copy, and close up work. Follow the same procedures in order to replace with optional Short center column.

How to change the Pan head attachment screw

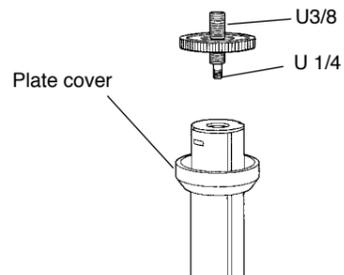

The Pan head fixing screw is reversible for either large thread (U3/8) or small thread (U1/4).


1. Move the Plate cover down.
2. Loosen the small screw in about three turnings with an Allen wrench (2mm width).
3. Loosen the plate without removing the small screw.

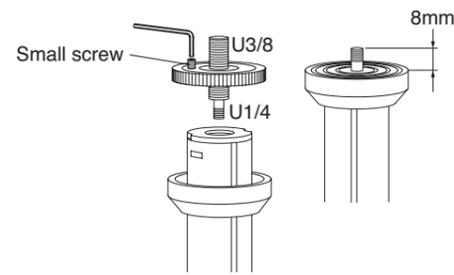

4. Loosen the Pan head fixing screw and pull it out. Then, screw it in again after reversing top and bottom.
5. Adjust the height of screw in approx. 8mm above the plate and then, tighten the small screw by an Allen wrench.
6. Put the Plate cover back.

Opening the Tripod legs

Caution

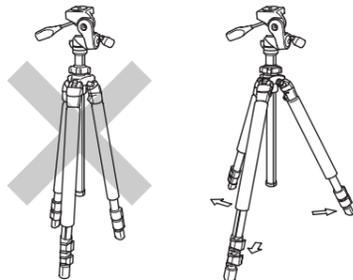

Be sure to open all three legs completely in order to prevent camera shakes, or accidental tip overs caused by unsteadiness.

Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



SLIK®

PRO 700DX

Operating Instructions

Thank you very much for choosing SLIK PRO 700DX Tripod. SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Tripod's many fine features.

Retain this operating instruction in case you might want to refer back to it.

Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification


Length folded	760mm (29 11/12")
Max. operating height	1900mm (74 5/6")
Max. center column ext.	380mm (14 11/12")
Weight	3.53kg (7lbs 13oz)

8339E-3

Components

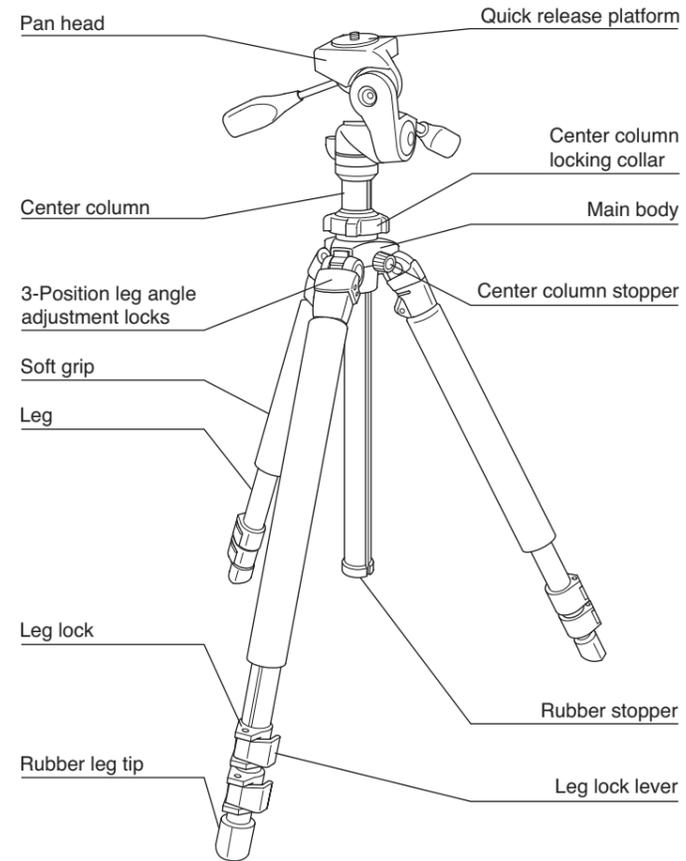


Pan head


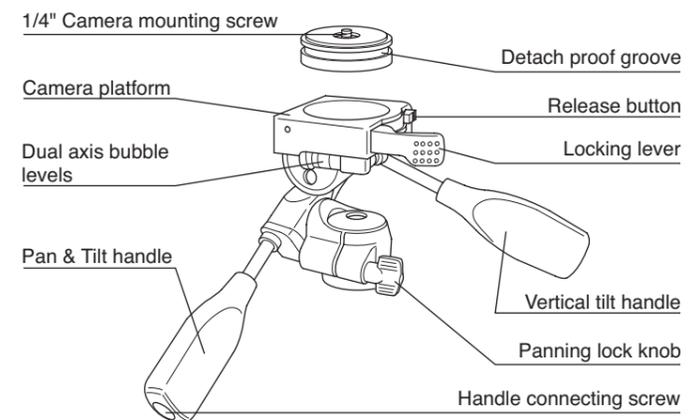


Options

 
BALL HEAD 800
QUICK SHOE (U3/8")
Cat. No. 618-340



THREAD ADAPTER SET
Cat. No. 618-331

  

PRO 700DX
SHORT CENTER COLUMN
Cat. No. 615-312

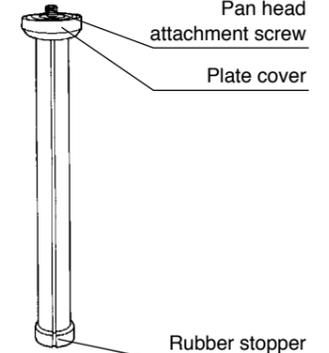


Caution

Soft Grip is consumption and cannot be used permanently. Please replace it whenever ragged.

Equipment that can be used with this tripod

Caution

Prohibition

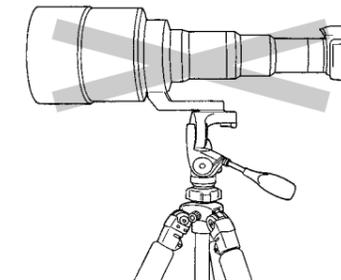


This product is designed to withstand equipment up to 6 kgs. Please do not use equipment exceeding this limit.

Equipment with uneven weight distribution should not be panned by the Quick release platform. A loose mounting screw may go unnoticed, and result in a sudden accidental fall.

Carrying the tripod


Caution

Prohibition

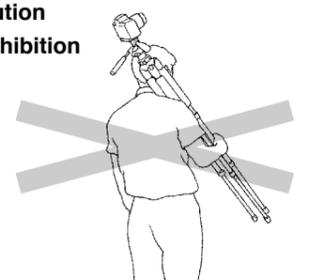


Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend that you remove your camera when carrying the tripod.

Pan Head Section **Install the handles**

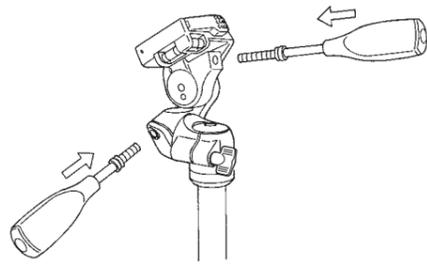


Attach the two Pan handles to the Pan head, by inserting the shorter handle to the left, and the longer horizontal tilt handle to the right. Do not reverse.

Attaching the Camera

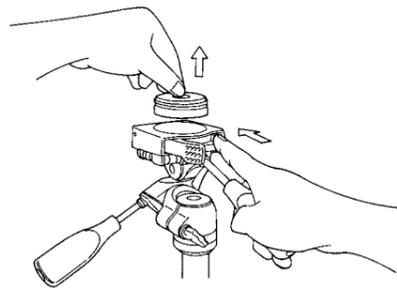


Remove Quick release platform by opening the Locking lever and then pressing the Release button.

Caution

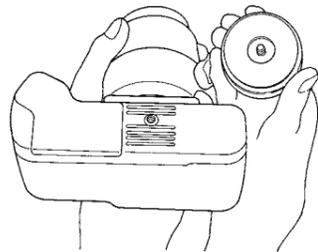


Screw quick shoe on to camera, and insert back into the Camera platform. Please DO NOT over tight your Quick release platform.

Removing the Head from the Center column

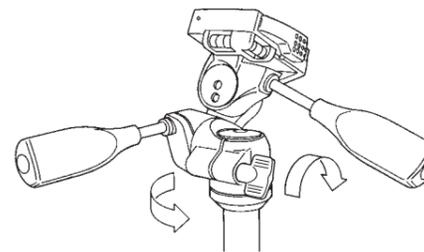


Use the following instructions if you wish to change heads, or attach accessories. First, lock the Panning lock knob, then grasp the pan, or Vertical tilt handle and turn the head, counter-clockwise to loosen.

Caution
Prohibition

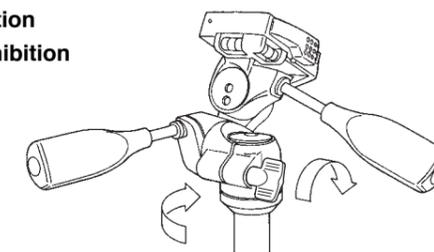


Set the new head, or accessory on the tripod's threaded post, and turn clockwise until it comes to a stop. Tighten the Panning lock knob and turn clockwise slightly more. Do not attach camera directly to the threaded post of the Center column. This can damage both camera and tripod.

Using the Quick release platform

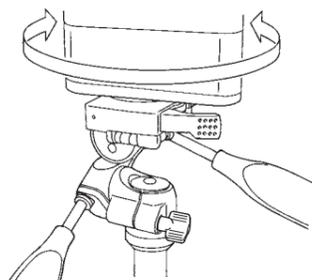


Correctly installed you will hear a "click", and the Quick shoe will rotate 360°.

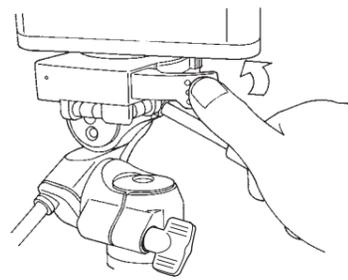


Fix the Quick shoe at a desired position by closing the Locking lever.

Adjusting the firmness of the Locking lever

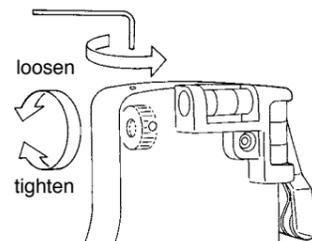


After long use, you may need to re-tighten the Lever lock mechanism through the window located underneath the Pan head. First, you will need to loosen the locking pin with an ordinary allen wrench(1.5 mm). We advise you not to tamper with this part until it becomes necessary.

Attaching the Head

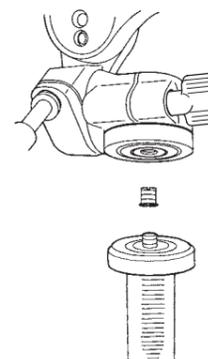


When attaching the Pan head to a tripod with a small thread(U1/4) use the optional small thread adapter.

Tripod Section **Three position adjustable legs**

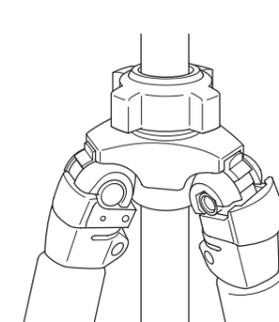


To change the angle of each leg, close the leg slightly, and then pull the Leg angle adjustment lock out. There is a choice of two other angle positions.

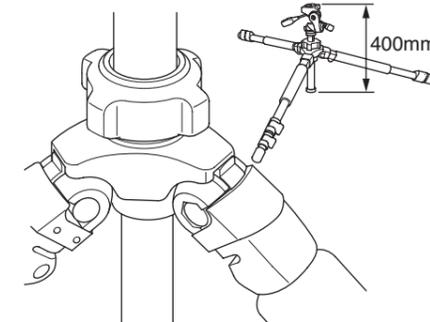


After choosing the desired leg angle, securely push in the Adjustment lock.


Using the Pan head

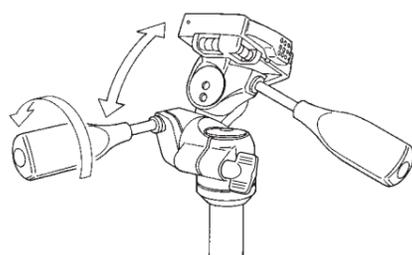

Loosen the Pan & Tilt handle, and the head will tilt back and forth.

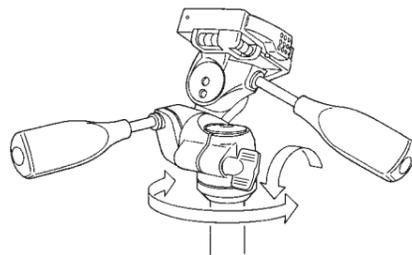


Loosen the Panning lock knob, and the head will rotate along the horizontal direction.

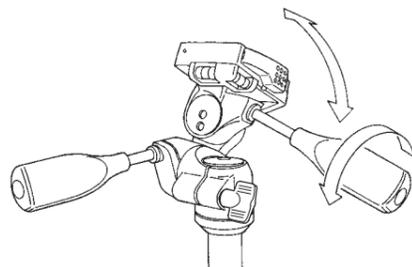


Loosen the Vertical tilt handle, and the level can be adjusted.

Extending the Tripod legs

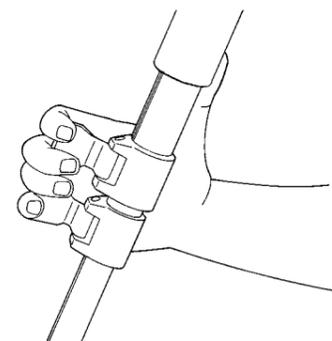


Flip up the Leg lock lever to extend or shorten any of the individual leg sections to the desired length, and press the Leg lock lever flush against the leg to lock.

Using the Center column

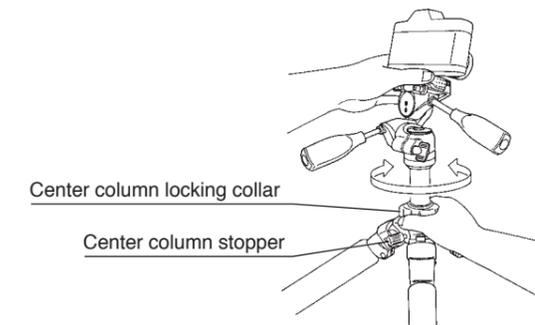

Hold onto the Pan head with one hand, and loosen the Center column stopper and the Center column locking collar with the other hand. Raise or lower Pan head to desired height, and while maintaining a hold of the Pan head, tighten the Locking collar and the stopper.


Bubble levels

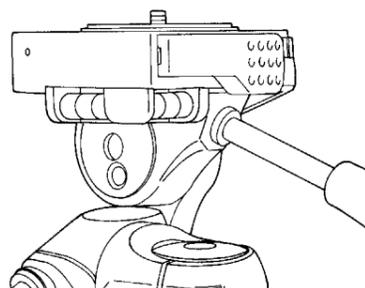

Two bubble levels are built-in for vertical and horizontal positioning.


Safeguards during operation with a Camera

Caution

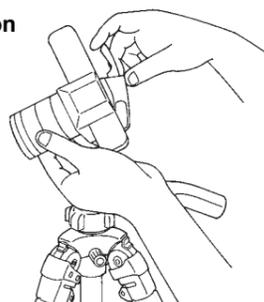


The camera will fall suddenly when the Locking lever is loosened, causing damages and injuries. Always hold on to the camera during such operation.

Caution

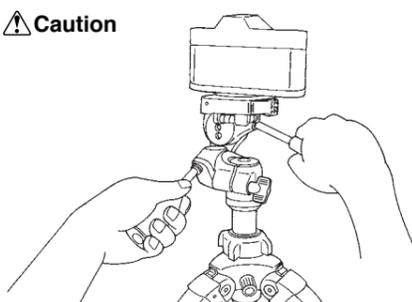


When loosening either the Pan & Tilt handle, or the Vertical tilt handle, take precaution by keeping a firm grip on the handle until the Pan head is locked down.

Caution
Prohibition

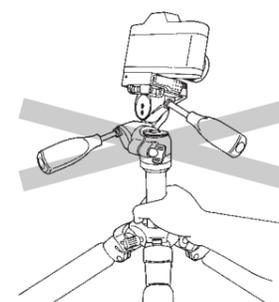

You may injure your hand by a sudden fall, if you let go of Pan head before locking the collar. Turn the Locking collar with your fingers on the side of the collar.

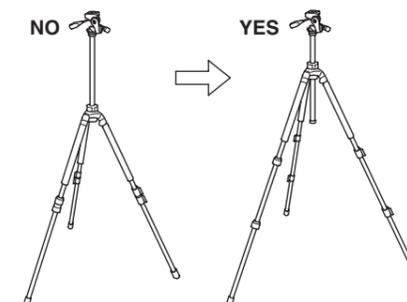

To avoid unnecessary camera vibrations, try to keep the Center column height to a minimum. Also use the larger legs first, when extending the legs.