

| | |
|-----------------------|---------|
| Length folded | 515mm |
| Max. operating height | 1,600mm |
| Weight | 500g |


Operating Instructions

Congratulations on the purchase of a Slik EASI POD JR. Unipod. The Slik Corporation has designed your unipod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.


Please take a few moments to read this instruction sheet carefully so you can take full advantage of your Unipod's many fine features.

6390E-1


Components

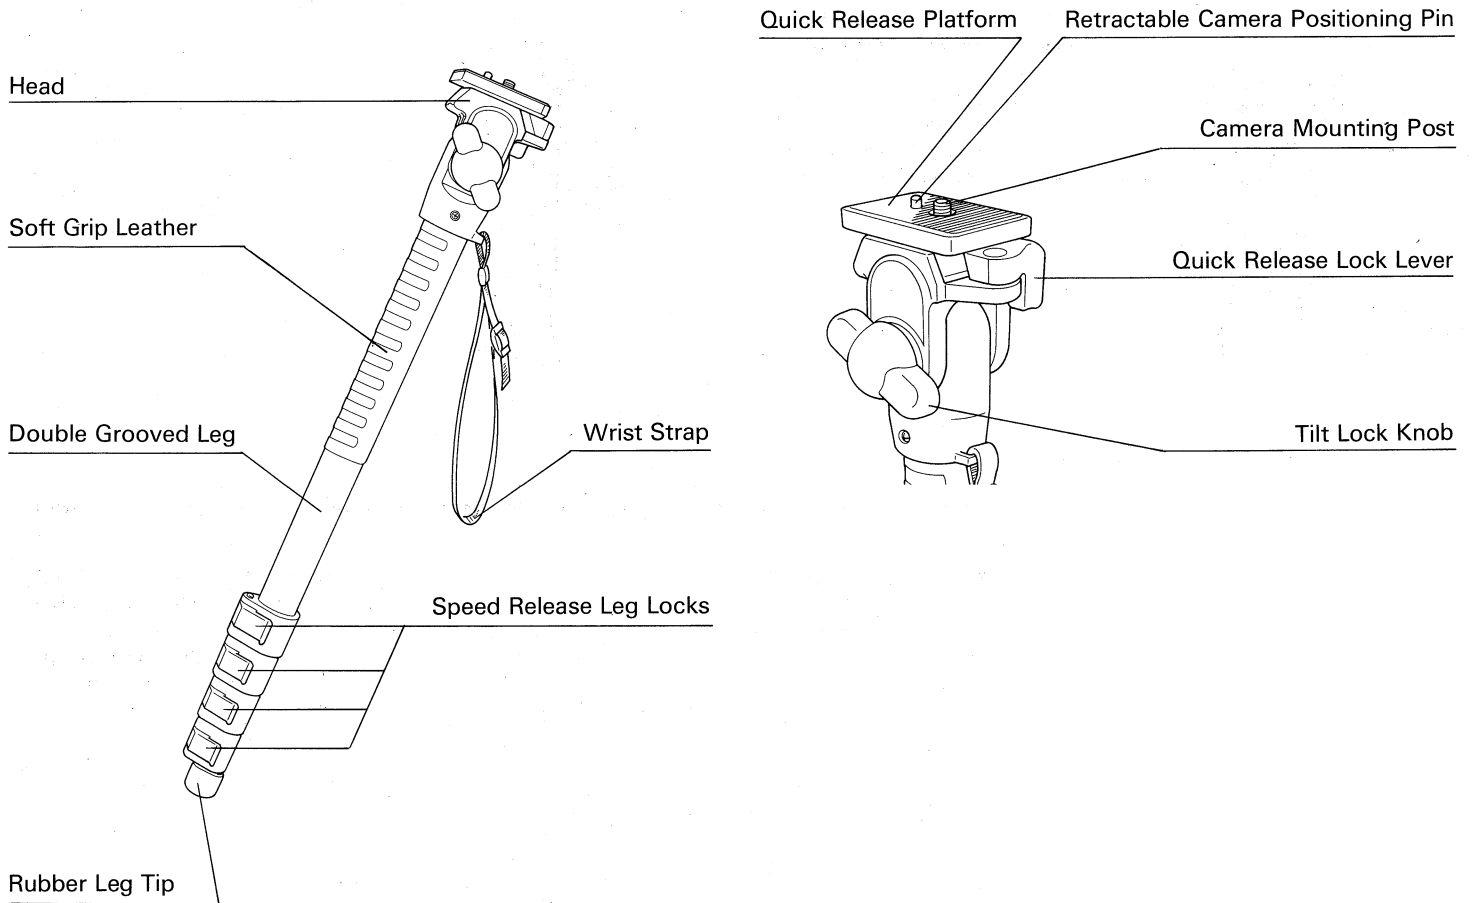


How to mount Camera

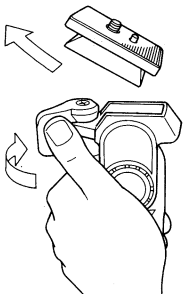

Move the Quick Release Lock Lever 90° to the left and remove the Quick Release Platform. Note that the Quick Release Platform has a threaded Camera Post and a Camera Positioning Pin. Position the Quick Release Platform so that the Camera Positioning Pin faces the front of your camera.

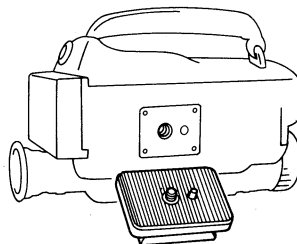


Mount your Camera to the Quick Release Platform by inserting the threaded Camera Post into the Tripod Mounting Socket of your camera. Raise the Wing Nut on the Camera Post and turn it counterclockwise until your camera is locked in position. (Make sure camera is locked firmly into position but do not overtighten.)

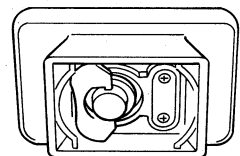

Wing Nut


Fold the head of the Wing Nut down before mounting your camera and Quick Release Platform to the EASI POD JR.

Retractable Camera Positioning Pin

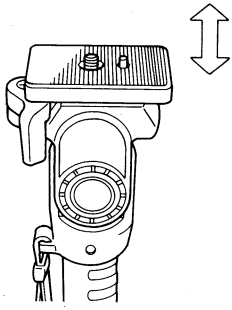

In case your camera has no positioning hole, the positioning pin will retract by itself.


How to Mount Camera Mount Quick Release

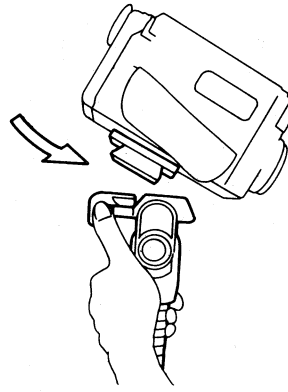


Move the Quick Release Lock Lever to the left again and, with the front of the camera tilted slightly down, slide the front of the Quick Release Platform into the head of the EASI POD JR. Once again, be sure that the Camera Positioning Pin is positioned forward of the Camera Post before inserting the platform into the head of the EASI POD JR.

When the Quick Release Platform is completely in place, move the Quick Release Lock Lever to the right to lock the platform in position.


How to use Panhead

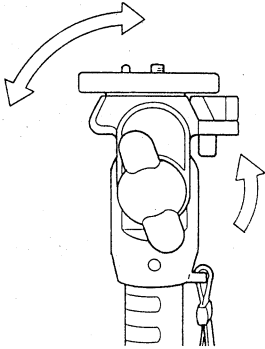

To tilt your camera once it is attached to the EASI POD JR. loosen the Tilt Lock Knob by turning it counterclockwise. To lock it in position, tighten the Tilt Lock Knob by turning it clockwise (be careful not to overtighten).

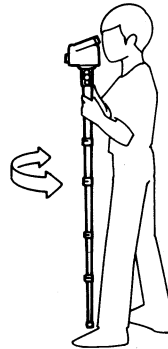

Extending the Leg

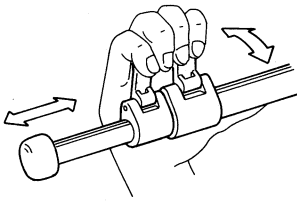

To extend the leg sections, open the Flip Lock Leg Levers and extend the EASI POD JR. to the approximate desired height. Close the Flip Lock Leg Levers by pressing them down.



You'll be glad to know the round tube design of your unipod's legs were made for maximum strength. This prevents twisting and provides excellent torsional rigidity.

How to Care for Your Product

- Do NOT apply any oil, grease to this product.
- To clean, use a mild detergent on a soft cloth.
- Do NOT bring close to fire. Avoid extreme heat, such as leaving it in a car on hot summer day.
- Do NOT attempt to disassemble your EASI POD JR. by yourself. (For servicing, please contact your Authorized Slik Dealer.)



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

853 Kayama, Hidaka city, Saitama 350-1231, Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2005