

### Operating Instructions

Congratulations on the purchase of a SLIK DV TRAVEL PRO Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this instruction sheet carefully so that you can take full advantage of many fine features on your tripod. Retain this instruction sheet in case you might want to refer back to it.

#### ⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, and damages which may occur as a result of mishandling this product.

#### 🚫 Prohibited


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

### Specification


Folded Length	675mm (26 7/12")
Maximum Height	1,375mm (54 1/12")
Ball Base	60mm (2 1/3")
Weight	1.96kg (4lbs 5oz)
Tilt Range	+67°/-80°

D779-2

### Components

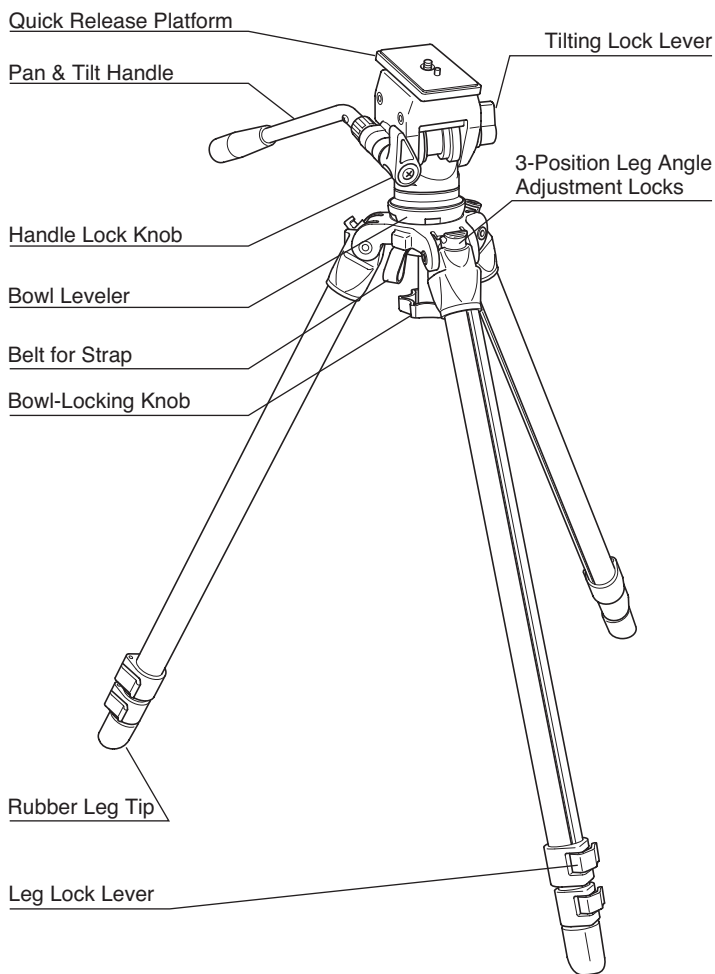

### Pan Head

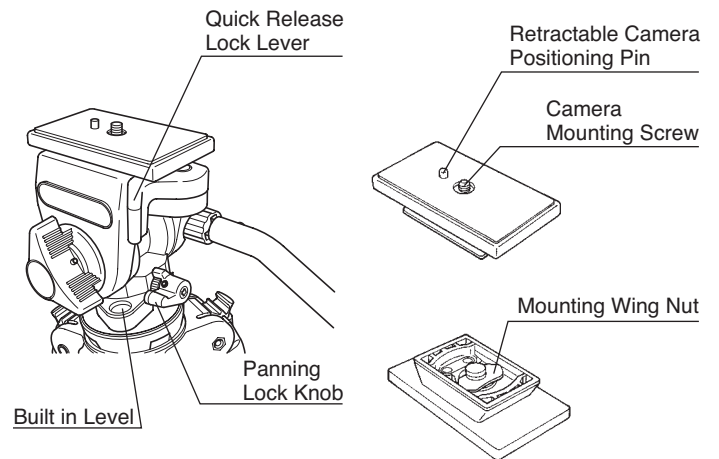

### Equipment that can be used with this Tripod


#### 🚫 Prohibited

This product has been designed to handle equipment weighing under 3 kgs (6 lbs 10oz). Do not overload.

Some equipment weighing under 3 kgs (6 lbs 10oz), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

### Carrying the Tripod

#### 🚫 Prohibited

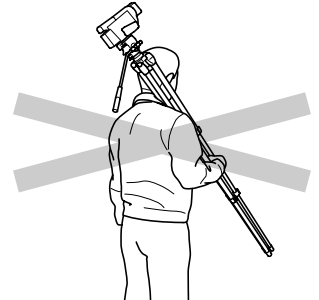


Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

### Setting up


#### ⚠ Caution

#### 🚫 Prohibited

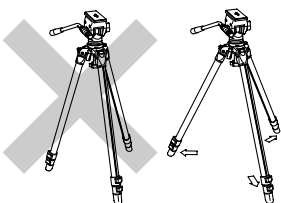

Prevent accidental equipment fall, or tripod tipping over, by making sure all levers, knobs, and handles on the tripod are securely tightened, and that all three legs are opened all the way.


### Install the Pan & Tilt Handle

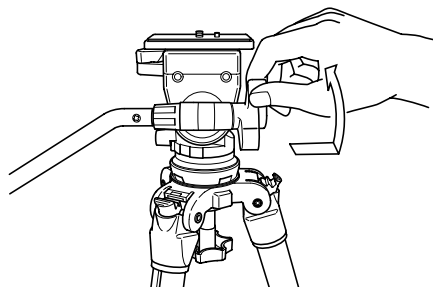

Please remove the Handle Lock Knob and then, insert Pan & Tilt Handle in the axis hole. Please tighten the Knob with your required angle.

You can change the position of a fin part of the Knob if you pull it to the front.

### How to adjust the level of pan head

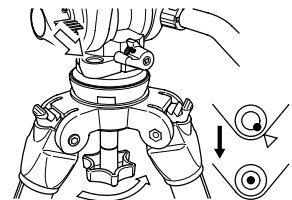

Adjust the level before putting the camera on the pan head.


- 1) Loosen the bowl-locking knob and adjust the bubble in the level to fit into the red color mark, while shaking the pan head.
- 2) Tighten the bowl-locking knob.

#### Remarks:

This is just rough aim and recommendable to test in advance before operating.


## Attaching the camera to the Quick Release Platform

**⚠ Caution**

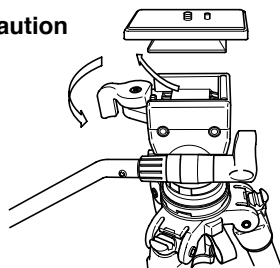

Remove the Quick Release Platform turning the Lock lever.


\*In this case, please do not put the Lock Lever back by force as it has been stood by the stopper.

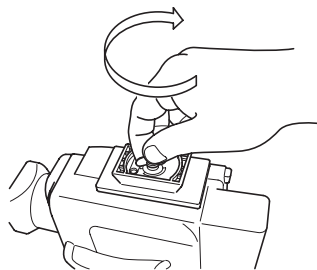

Please set the Camera Mounting Screw and the Retractable Camera Positioning Pin to holes at the camera side. Then, fix it with Mounting Wing Nut tightly.


\*You can also use this tripod for your still camera as the Camera Positioning Pin is retractable.

**⚠ Caution**

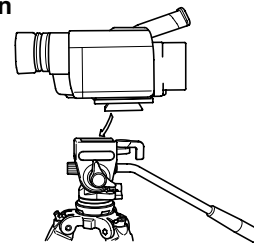


The Video camera should be attached from the front of the Quick Release Platform. The Lock lever should be locked surely to put the forwards, while it returns automatically.

## Using the Pan Head

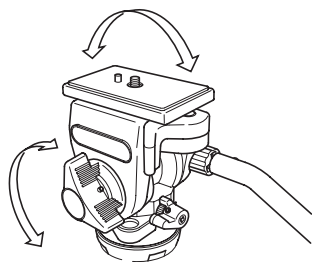


Loosen the Tilting Lock Lever, and the head will tilt back and forth.

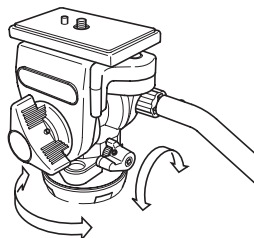

Loosen the Panning Lock Knob, and the head will rotate along the horizontal direction.

## Extending the Tripod Legs

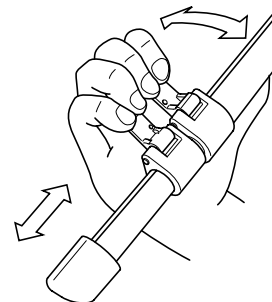


Flip up the Leg Lock Lever to extend or shorten any of the individual leg sections to the desired length, and press the Leg Lock Lever flush against the Leg to Lock.

For greater stableness, use the thicker leg columns first.


## Leg Angle Adjustment

PAT.

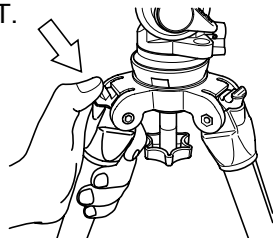


You can adjust the leg angle in 3 different positions.


To change the angle of each leg, move the leg slightly towards the center column, and while pressing down the Leg Angle Adjustment Lock, pull leg open to the desired position.

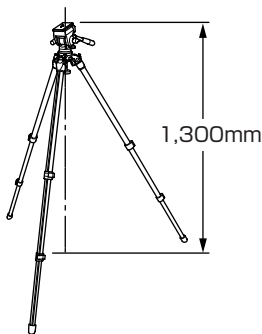

Highest position

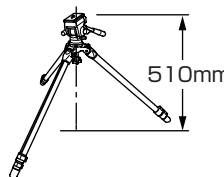

The middle position

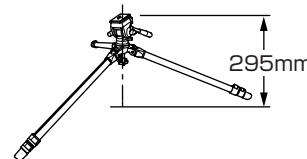

Lowest position

## Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

853 Kayama, Hidaka-shi, Saitama 350-1231, Japan Phone 81-429-89-2141 Fax. 81-429-85-0210 ©2006

Printed in Thailand.