

Operating Instructions

Congratulations on the purchase of a Slik "The Pro-Pod" Series. The Slik Corporation has designed your unipod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

 
Please take a few moments to read this instruction sheet carefully so you can take full advantage of your Unipod's many fine features.

Specifications

The Pro Pod	715/8"
Max. operating height	(1,820mm)
Folded length	237/8"
Camera platform diameter	(605mm)
Weight	2 1/4"
	(58mm)
	2.3lbs
	(1,050g)
The Pro Pod 5	63"
Max. operating height	(1,600mm)
Folded length	19 1/8"
	(500mm)
Camera platform diameter	2 1/4"
	(58mm)
Weight	2.0lbs
	(930g)
The Pro Pod Sport	63"
Max. operating height	(1,600mm)
Folded length	21 1/4"
	(540mm)
Camera platform diameter	2 1/8"
	(54mm)
Weight	1.7lbs
	(780g)

7129U

Components

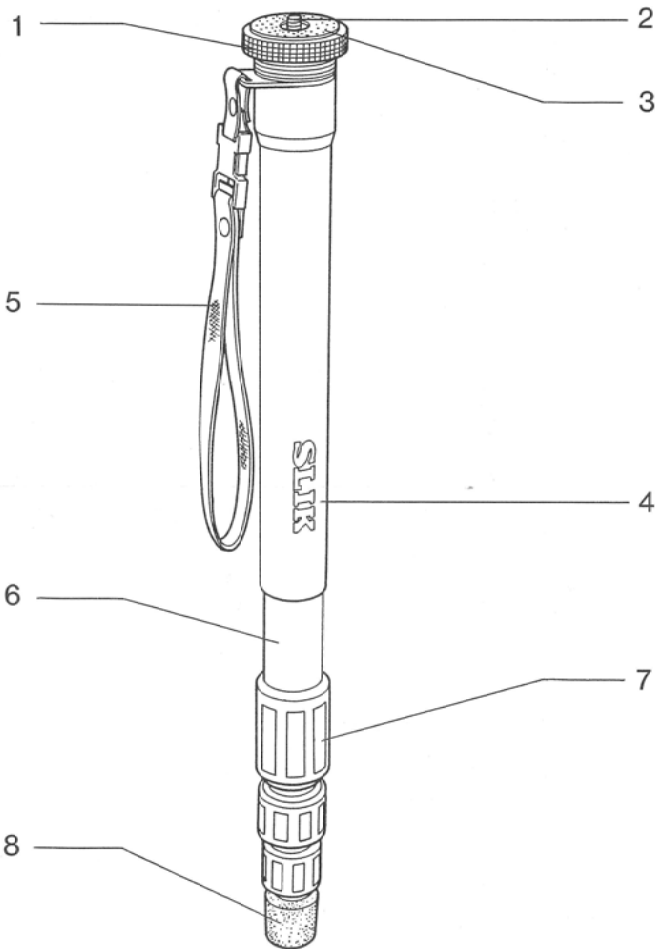

The Pro Pod




The Pro Pod 5



The Pro Pod Sport

1. Camera Platform
2. Camera Mounting Screw
3. Camera Platform Rotating Plate
4. Soft Rubber Grip
5. Removable Wrist Strap
6. Leg
7. Leg Lock
8. Rubber Leg Tip

Attaching a Camera/Lens

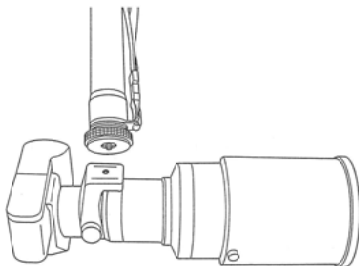

Support Camera/Lens with one hand and screw monopod into tripod socket. Always check the screw engagement, and rotate the monopod slowly, and carefully, in the beginning.




The Camera Platform Rotating Plate will not damage the camera base. It acts as a washer, to give the camera a secure grip.




The Pro Pod Sport

Soft Rubber Grip

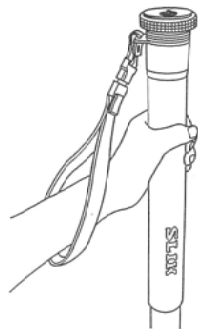


The large Soft Rubber Grip gives you a wide area to grasp and keeps your hands from slipping. It also stays warm and easy to work with even in the coldest weather.

Removable Wrist Strap

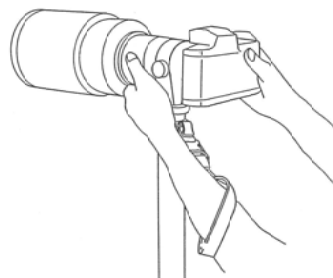


The Wrist Strap rotates freely. As a safety measure it is advisable to hold the camera through the Wrist Strap.

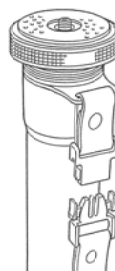


The Wrist Strap can be removed.

 Extending Legs



Release the Leg Locks by rotating one half turn. Because the legs are grooved, the Leg Locks can be released in any order.

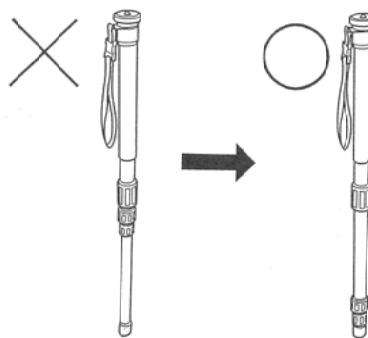

Note: Extending the larger legs first gives you better support. Extend legs from the top. Fold legs from the bottom.

How to Care for Your Product

- Do NOT apply any oil, grease to this product.
- To clean, use a mild detergent on a soft cloth.
- Do NOT bring close to fire. Avoid extreme heat, such as leaving it in a car on hot summer day.

