


NEW

HALO

HALO Remote User Guide

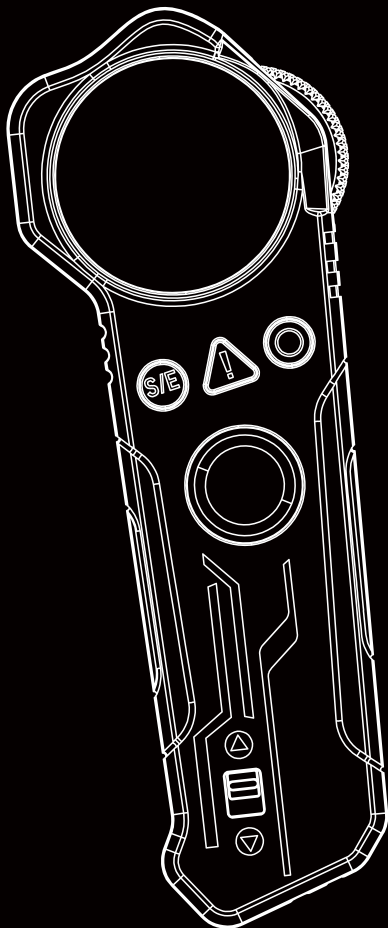


01 BACKFIRE
Remote Layout

- A single button to power on/off your board and remote.

Backfire boards can stay in standby mode for up to a day, within which the remote can be used to power the board on or off.

- Double clicking the Power Button turns on the board's ambient lights. The color of the lighting changes with the riding mode.

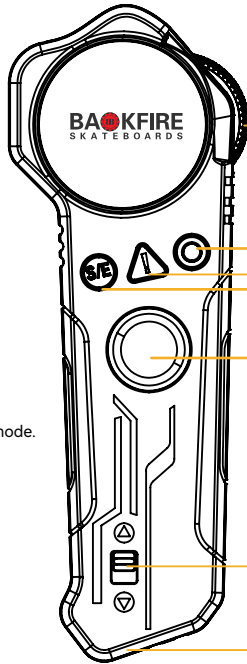

Throttle Wheel: Acceleration/
Braking/Preview/Navigation

- Power Button: ON/OFF/Menu/Select
- △ Turbo Button: Turbo Mode/Tank Turn Mode/Main Menu
- S/E Button: Sport Mode/Eco Mode/
Previous Menu

Fingerprint Sensor

Forward/Reverse Toggle

Type-C Charging Port

02 BACKFIRE
Technical Info



Aluminum Housing



Battery Capacity:
1000mAh



Display Size: 1.3 inch



LCD Panel



Voltage: 5V



Weight: 130g



3hr Charge Time





Fingerprint Sensor




03

BACKFIRE
Dashboard Layout




Enable  →  Bluetooth Enabled
Connect to the Backfire APP for Firmware Updates

Enable  →  Cruise Control Enabled

Enable  → Unlocked  →  Fingerprint Unlock Enabled
Remote automatically locks itself after 6 seconds of inactivity to prevent accidental inputs

TRIP: 14 KM Current Trip Meter
Displays the distance traveled since the board was powered on

ODO: 1142 KM Odometer
Displays the total distance traveled since the remote was first paired with the board. Mileage is retained and unique to each board.

R  Remote Battery Indicator

B  Board Battery Indicator

20 Current Speed


04

BACKFIRE
Pairing Instructions

⦿ Hold the Power Button for 3 seconds to power ON/OFF the board.

When both the remote and board are in the OFF state, hold the Power Button on both the board and remote at the same time for 3 seconds to pair.

In the 4WD configuration, the rear controller (ESC1) should be paired before the front (ESC2).

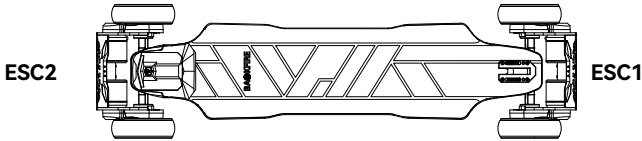

Auto-Pairing



Select 2WD/4WD



Hold the Power Button on ESC1 for 3 seconds




Hold the Power Button on ESC2 for 3 seconds


2WD ONLY REQUIRES THE PAIRING OF ONE ESC




Select between KM and MILES using the Throttle Wheel, and press the Power Button on the remote to confirm your choice.

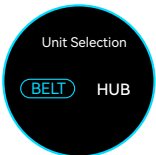

Select the drivetrain setup on your board using the throttle wheel.

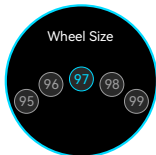


Select the wheel size of your board using the throttle wheel. [Between 90MM-200MM]

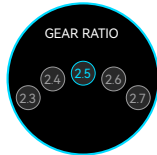

Select the gear ratio of your drivetrain using the throttle wheel.



Select the number of Pole Pairs for your board's motor configuration. [Between 2-26]

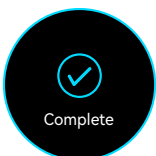

Pairing and configuration complete.

*整机出厂时，默认遥控已和滑板配对设置完成

05 BACKFIRE Ride Modes




ECO Mode

Default Mode after Pairing.



Sport Mode

Press the S/E Button once to activate Sport mode. The remote display will turn blue/red and vibrate once.

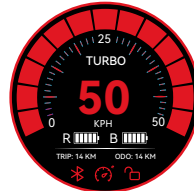

Turbo Mode

Press the Turbo Button once to engage Turbo Mode.



⊙ Cruise Control Mode

While riding, press the Power Button then release the Throttle Wheel to engage Cruise Control Mode.



06 BACKFIRE Battery Status




While the board is stationary, press the Power Button once to open the settings menu

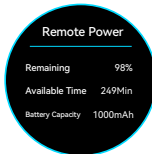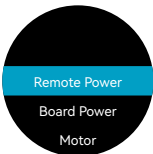

Select Remote Power to display the Battery Status, Time Since Power On, and Battery Capacity. Press the S/E Button to return to the Previous Menu.

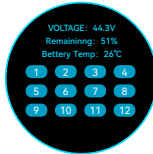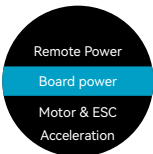

Select Board Power to display the Battery Voltage, Remaining Capacity, Temperature, and Battery Health. [Blue: Healthy, Red: Unbalanced]


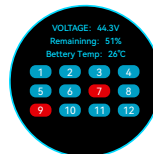


In the event one or more of the cells are unbalanced, contact the Backfire Support Team or use the Backfire Balance Charger to restore the pack to a healthy state



07

BACKFIRE



Advanced Settings

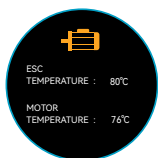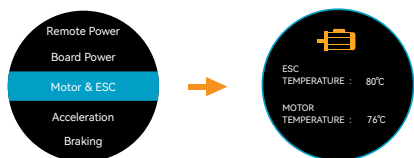


Select Motor & ESC to display their temperatures.

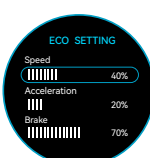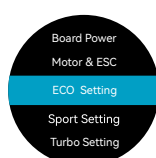

Select ECO Setting to adjust the Speed, Acceleration and Brake profile for ECO Mode.

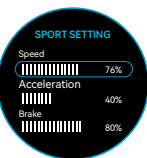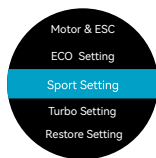

Select Sport Setting to adjust the Speed, Acceleration and Brake profile for Sport Mode.


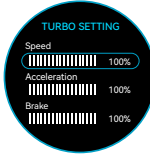


Select Turbo Setting to adjust the Speed, Acceleration and Brake profile for Turbo Mode.

08




BACKFIRE

 Fingerprint Setup

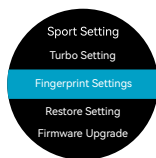


To add a fingerprint, place your finger on the sensor until the remote vibrates, then lift it off and repeat until the status displays 100%

Select Fingerprint Settings to add and remove fingerprints. A total of 3 fingerprints can be stored on the remote.

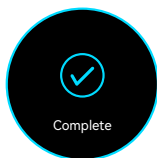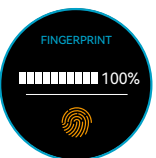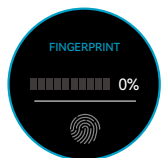

Multiple fingerprint calibration cycles are required for maximum reliability and accuracy.

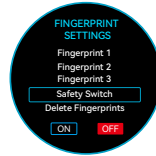

The Safety Switch option enables/disables fingerprint unlock.


To remove all stored fingerprints, select the Delete Fingerprints option.

Single fingerprint delete is currently not supported.



09

BACKFIRE

Restore Factory Settings and Updating Firmware

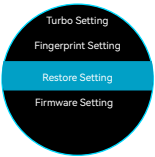

Select Restore Setting to Restore the Remote to its Factory Calibrated Settings.

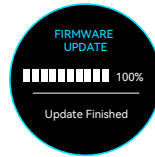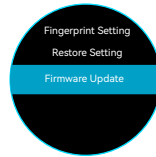


Select Firmware Update to Update the Remote Firmware


10

BACKFIRE


Charging Status

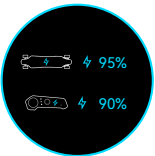


Board: Charging
Remote: Charging

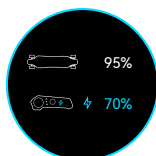


Board: Not Charging
Remote: Charging

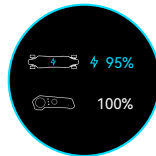

Board: Charging
Remote: Not Charging

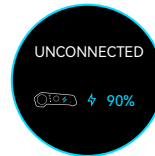

Board: Not Connected
Remote: Charging

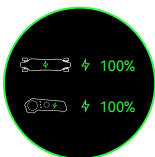

Board: Fully Charged
Remote: Fully Charged

11 BACKFIRE

Tank Turn Mode





Press the Turbo Button twice to engage Tank Turn Mode.
Press the Power Button once to disengage.

⚠ Warning: Keep clear of the board when Tank Turn Mode is engaged. Standing on it may lead to serious injury.


12 BACKFIRE

Rider Controls

For beginners and children, we recommend donning protective gear and starting out with ECO Mode. Roll the Throttle Wheel forwards in small increments to accelerate gently. Position your feet slightly wider than shoulder-width on the deck and bend your knees slightly to lower your center of gravity.

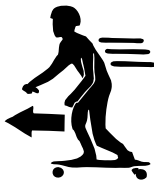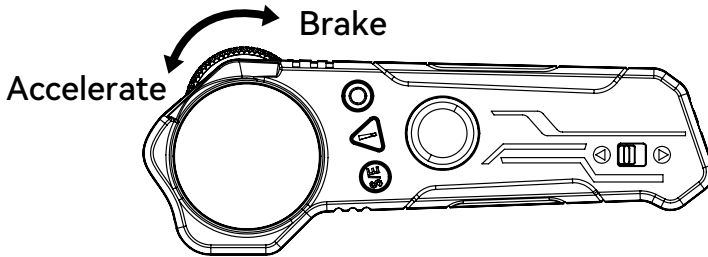

Lean forward when accelerating to prevent falling backwards when the torque kicks in.

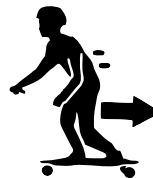

Lean back when braking to prevent being thrown forward by the sudden deceleration.

13

BACKFIRE

Malfunctions




DISCONNECTED

Board and Remote are Disconnected



BOARD OVER CURRENT

Over-Current Protection Active

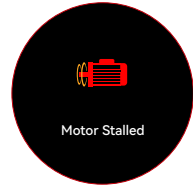

Motor Stalled

Motor Stalled




Throttle Failure !

Throttle Wheel Requires Calibration



Board Over Voltage !

Board Over-Voltage

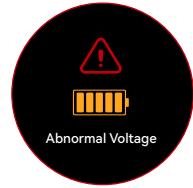

Abnormal Voltage


Battery Cells out of Balance

In the event you encounter any of these errors, please reach out to the Backfire Support Team for assistance.

13


BACKFIRE

提示说明

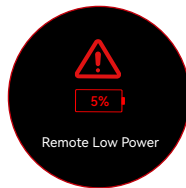


Remote Low Power

Remote Power Under 5%

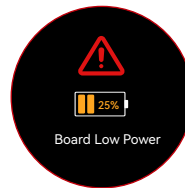


Board Low Power

Board Power Under 25%

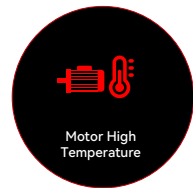

Motor High Temperature


High Temperature Warning: Motor

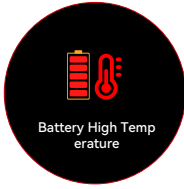


High Temperature
Warning: Battery




Fingerprint Unlock Failed

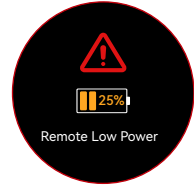


Remote Power Under 25%

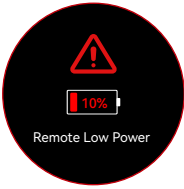

Remote Power Under 10%

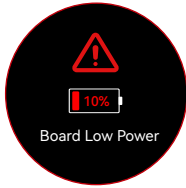

Board Power Under 10%

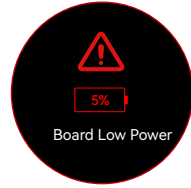

Board Power Under 5%



High Temperature Warning: ESC

14

BACKFIRE

Gear Ratio and Pole Pair Configurations

Model	Drive Type	Gear Ratio	Pole Pairs
G2 Black	Hub	-	10
ERA	Hub	-	10
G3	Hub	-	10
Ranger X3	Hub	-	20
Zealot	Belt	2.6	7
Zealot S	Belt	2.6	7
Hammer	Belt	3.6	7
Hammer S	Belt	3.6	7

CONTACT US

TIKTOK : @backfireboardsusa

Official Website: <https://www.backfireboards.com/>



Facebook



Instagram



You Tube



User Guide

