 
 




CIPHER BLUETOOTH
USER GUIDE

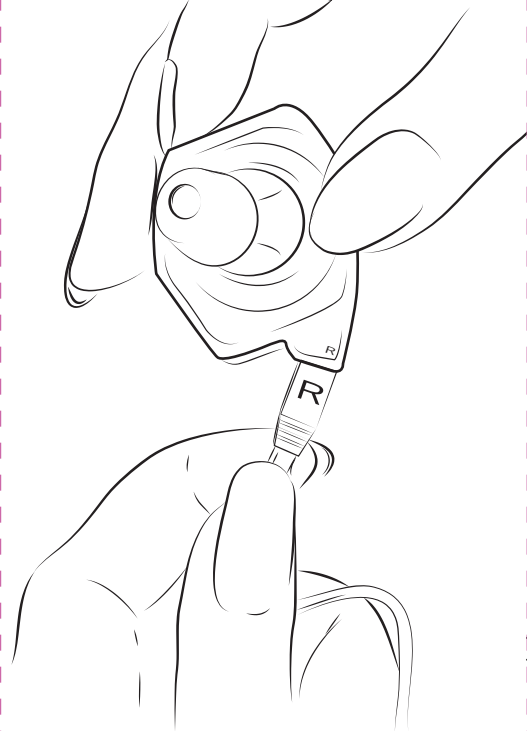

**CONNECT
RELIER**

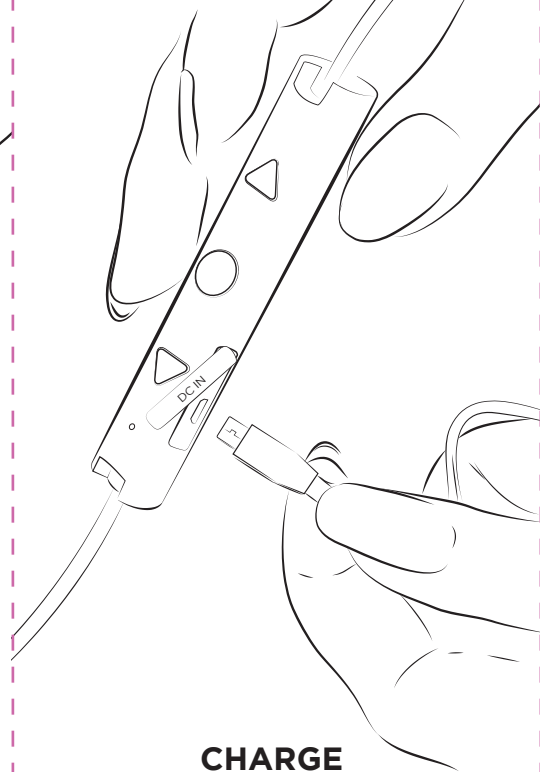

CHARGE

www.audeze.com

CIPHER FUNCTIONS

Volume Up Button

Single Press Volume Up
Press 2 Seconds Next Track

Function Button

Press 3 seconds Power On
Press 5 seconds Bluetooth Pairing Mode
Press 3 seconds Power Off
Single Press Play/Pause/Answer Call
Double Press Voice Assistant Mode

During Call

Single Press End Call
Double Press Answer Incoming/Switch Call

Volume Down Button

Single Press Volume Down
Press 2 Seconds PreviousTrack

LED

POWER ON

Press second button and hold



POWER OFF

Press second button and hold



BLUETOOTH PAIRING

Press second button and hold



PLAY / PAUSE

Press second button



VOLUME UP

Press third button



 
VOLUME DOWN

Press first button



PREVIOUS TRACK

Press first button and hold



NEXT TRACK

Press third button and hold



 
ANSWER / END CALL

Press second button



REJECT CALL

Press second button and hold



DURING CALL - END CALL

Press second button



DURING CALL - ANSWER INCOMING

Press second button twice



DURING CALL - SWITCH CALL

Press second button twice



VOICE ASSISTANT

Press second button twice



CIPHER FUNCTIONS

Pression brève: volume augmenté

Une pression Volume augmenté
Pression 2 secondes Piste suivante

Bouton de fonction

Appuyer dessus 3 secondes Allumer
Appuyer dessus 5 secondes Mode d'appariement Bluetooth
Appuyer dessus 3 secondes Eteindre
Une seule pression dessus Lecture /pause / répondre à un appel
Mode assistant vocal

Pendant l'appel

Une pression Fin d'appel
Deux pressions Répondre à un appel entrant / supprimer l'appel entrant

Bouton de réduction du volume

Une pression Volume réduit
Pression 2 secondes Piste précédente

LED

ALLUMER

Appuyez sur le deuxième bouton et maintenez-le enfoncé



ÉTEINDRE

Appuyez sur le deuxième bouton et maintenez-le enfoncé



BLUETOOTH PAIRING

Appuyez sur le deuxième bouton et maintenez-le enfoncé



 
JOUER / PAUSE

Appuyez sur le deuxième bouton



MONTER LE SON

Appuyez sur le troisième bouton



BAISSER LE VOLUME

Appuyez sur le premier bouton



PISTE PRÉCÉDENTE

Appuyez sur le premier bouton et maintenez-le enfoncé



PISTE SUIVANTE

Appuyez sur le troisième bouton et maintenez



 
RÉPONSE / FIN D'APPEL

Appuyez sur le deuxième bouton



REJETER UN APPEL

Appuyez sur le deuxième bouton et maintenez-le enfoncé



PENDANT L'APPEL - FIN D'APPEL

Appuyez sur le deuxième bouton



PENDANT L'APPEL - REPONSE ENTRANT

Appuyez deux fois sur le deuxième bouton



PENDANT UN APPEL - SUPPRIMER L'APPEL ENTRANT

Appuyez deux fois sur le deuxième bouton



ASSISTANT VOCAL

Appuyez deux fois sur le deuxième bouton

