

GUARANTEE


Congratulations on the purchase of your ROTORCRAFT. Valid from the date of shipment (see invoice date; a copy of the sales slip is to be enclosed when making a claim), this quality product is guaranteed against material and construction failure for 24 months. Batteries, watch strap, glass and wear parts are excluded. Damage incurred through incorrect usage, interference by a third party, incorrect battery replacement and through other extreme interference such as falls, impact, water, result in the loss of a guarantee claim.



**FOR MORE INFO ABOUT YOUR GAURANTEE
PLEASE VISIT ROTORCRAFTWATCHES.COM**



YOUR MANUAL 2115

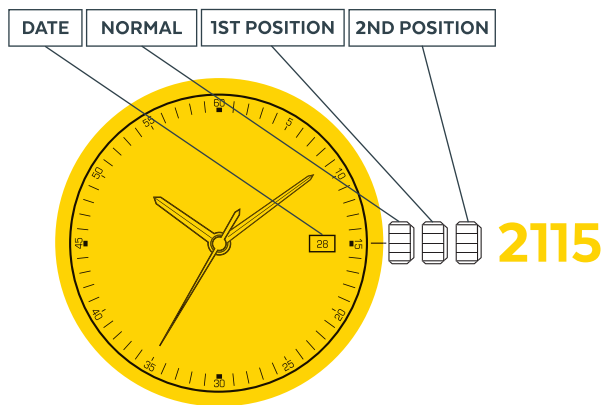

SETTING THE TIME

- 1 Pull the crown out to the 2nd position.
- 2 Turn the crown to set the hour and minute hands.
- 3 When the crown is pushed back to the normal position, second hand begins to run.

SETTING THE DATE

- 1 Pull the crown out to the 1st position.
- 2 Turn the crown counter-clockwise to set the date.
*If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.
- 3 After the date has been set, push the crown back to the normal position.

*Date position may be located at different position depends on models.