

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED. INCLUDING THE FOLLOWING:

READ ALL INSTURCTIONS BEFORE USING TO REDUCE THE RISK OF ELECTRICAL SHOCK:

ALWAYS unplug the appliance from the electrical outlet immediately after using and before cleaning.

DO NOT reach for an appliance that has fallen into water, unplug it immediately.

DO NOT use while bathing or in the shower.

DO NOT place or store appliance where it can fall or be pulled into a tub or sink.

DO NOT place in or drop into water or other liquids.

NEVER use pins or other metal fasteners with this appliance.

Keep dry and **DO NOT** operate in wet or moist conditions.

CAUTION: PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING

If you have any concerns regarding your health consult your doctor before using this product.

> Individuals with pacemakers should consult a doctor before use.

> NEVER leave the appliance unattended, especially if children are present.

> NEVER cover the appliance when it is in operation.

> DO NOT use this product for more than 15 minutes at a time.

 Extensive use could lead to the products excessive heating and lead to shortened life span. If overheating does occur, discontinue use and allow the unit to cool.
NEVER use this product directly on swollen or

This product is a non-professional appliance designed to

provide soothing massage topically. DO NOT use this product as a substitute for medical attention.

 > DO NOT use this product before bed as the massage has a stimulating effect and can delay sleep.
> NEVER use this product in bed.

This product should NEVER be used by any individual suffering from any physical condition that would limit the users capacity to operate the controls or by any individual who has sensory deficiencies in the lower half of the body.
This product should not be used by children or adults with diminished capacity without adult supervision.

ONE YEAR LIMITED WARRANTY

This product is warranted for 1 year, from the original date of purchase, against defects in materials and/or workmanship when utilized for normal household use. During this period if the product is proved defective it will be replaced at the discretion of the warranty holder.

The unit shall be returned, by the purchaser, freight prepaid with proof of purchase date and \$19.95 for return shipping/packing charges included. This warranty does not apply to any defect or damage arising from a buyers or users misuse, negligence, dropping or failure to follow instructions, use with wrong voltage, any alteration or opening of the unit. Attempted repair or disassembly will null and void the warranty.

If unit is replaced under warranty during the 1 year limited warranty period, from original date of purchase, the warranty is not extended in any way. The 1 year warranty is only from the original date of purchase.

MAINTENANCE

CAUTION: All servicing of this unit must be performed by authorized service personnel only. THIS APPLIANCE HAS NO USER SERVICEABLE PARTS

TO CLEAN:

Unplug the unit and allow it to cool before cleaning. Clean only with a soft damp cloth. Never allow water or other liquids to come in contact with the unit. > After cleaning, wipe surface with a dry cloth > Never use abrasives, detergent or cleaning agents > Periodically straighten cord if it becomes twisted

TO STORE:

Unplug the appliance from the wall outlet and allow to cool completely.

 Store in the box and in a clean and dry location
To avoid damage, do not wrap the power cord around the unit. Wrap cord around the storage posts located on the bottom of the unit.
Do not hang the unit by the power cord

MASSAGER FEATURES

Invigorating percussion action massage
Soothing infrared heat
4 different massage settings
Convenient toe tap massage control

 The appliance should NEVER be left unattended when plugged in. Always unplug from outlet when not in use.
Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
Use this appliance only for its intended use as described in this manual.

> NEVER operate this appliance if it has a damaged power cord or plug, if it is not working properly or has been dropped or damaged in any way.

› Keep cord away from heated surfaces.

> NEVER use while sleeping or falling asleep.

> NEVER drop or insert any object into any opening.

DO NOT operate where aerosol spray products are being used or where oxygen is being administered.

 DO NOT operate unit under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.

> DO NOT carry this appliance by power cord or use the power cord as a handle.

> To disconnect, turn ALL controls to the "off" position, then remove the plug from the wall outlet.

This appliance is designed for personal, non-professional use ONLY.

> DO NOT use outdoors.

 DO NOT use on an infant, invalid or a sleeping or unconscious person.

> DO NOT use on sensitive, unsensitive skin or a person with poor blood circulation.

INSTRUCTIONS FOR USE

- 1. Plug the unit into an AC outlet.
- 2. Sit down and place your feet on the massager. To avoid injury and irreparable damage, never stand on the unit.
- 3. Using the foot control button, turn the massger on. The LED light will illuminate to indicate your selection. There are 4 massage options; 3 individual and 1 program mode. The corresponding LED light will illuminate to show the selected mode:
 - > L: Percussion action at low speed
 - > M: Percussion action at medium speed
 - > **H:** Percussion action at high speed

Massage types at different intervals and intesities, in a series which repeats itself approximately every minute.

- 4. To activate the infrared heat feature, press the red button located above the massage control button. The unit can be used with or without heat.
- 5. When finished , first turn off (LED lights will turn off), unplug the unit from the wall outlet and let cool.

THIS APPLIANCE IS DESIGNED FOR HOUSEHOLD USE ONLY

MASSAGER FEATURES

- A. Comfort foam handle
- **B.** Massage accunodules
- C. Heat on/off button
- D. Massage on/off button
- E. Massage Selection
- F. Infrared heat
- G. Dual percussion massage heads

