 


TEBOTM

Chair
Luxurious Robotic Hands

Elite

Owner's Manual

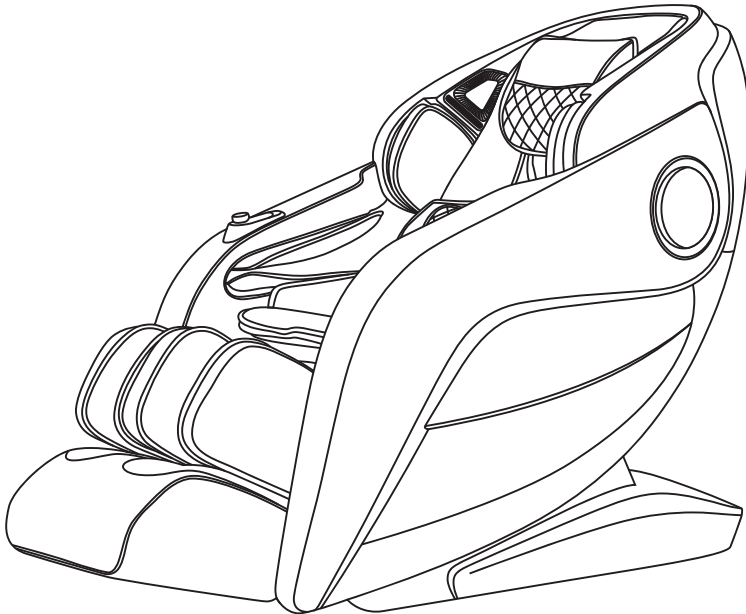

Relax, Unwind

LEAVE STRESS BEHIND

A701-2

Contents


WELCOME	4
SAFETY AND MAINTENANCE	5
1. Important Safety Warning	5
2. Environment	5
3. Do not use this product if you:	5
4. Safety	6
5. Maintenance	6
6. Trouble shooting: Solutions for common malfunctions	7
SAFETY WARNINGS	8
MASSAGE CHAIR OVERVIEW	10
FUNCTION & FEATURES OVERVIEW	11
REMOTE CONTROL OVERVIEW	12
Remote control display	12
Remote control buttons	13
USER GUIDE	14
Switch power supply on	14
Start Guide	14
Automatic Massage	18
Manual mode	19
Massage Functions	19
Area Mode Functions	20
Air Massage Pressure	21
Adjustment Function	24
Customize	27
Setting	28
Zero Gravity button	30
ZERO Gravity function	30
Back Button	30
Angle adjustment buttons	31
Armrest shortcut button introduction	32
Voice control operation	34
Voice Control Commands	34
Turn off power, stop massage	35
Bluetooth® Player Operation	35

INSTALLATION	36
PRODUCT SPECIFICATION	43
WARRANTY	44

Welcome

Thank you for purchasing this product. Please read this instruction manual carefully so you know how to use the product correctly right from the start. This manual contains important health and safety information. Keep it somewhere safe for future reference.

 Note: Our Company reserves the right to revise the design and description of this product at any time. "Please refer to your product model"

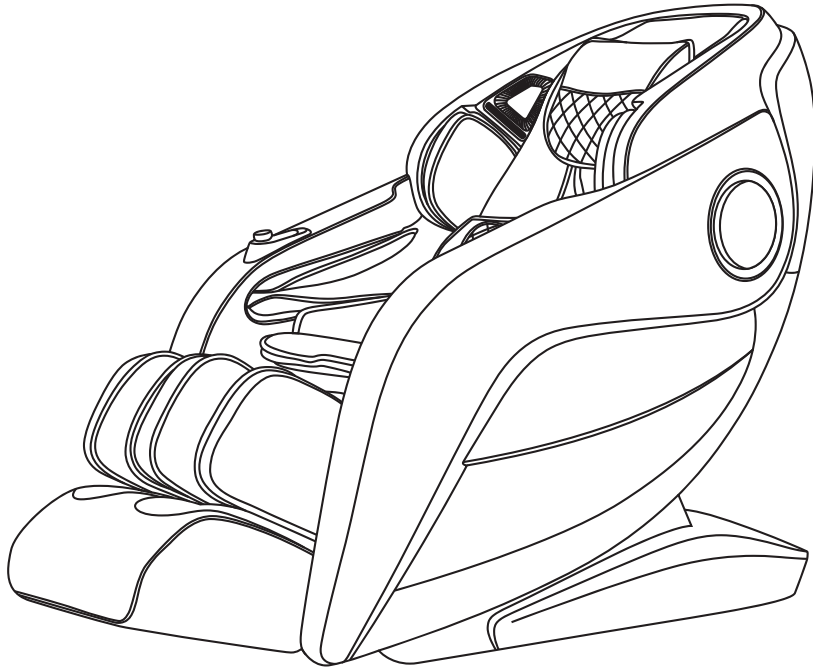

Safety and Maintenance

IMPORTANT:

Please read this Owner's Manual carefully before operation.



1. Important Safety Warning

- Do not allow children to touch moveable parts of this product.
- Only use grounded power supply for this product.
- Pull out the plug after use and before cleaning to avoid the risk of electric shock, or damage to the product.
- Only use this product as directed in this instruction manual.
- Do not use accessories other than those specifically recommended for the product.
- Do not use this product outdoors.
- Please read the instruction manual carefully before operation.
- Any usage other than that specified in this instruction manual may be dangerous, and is forbidden.
- For optimal results, do not exceed 20 minutes of usage per session.
- Do not use if leather is broken or damaged.
- Do not use if the cover is damaged.
- Do not use if the radiator hole is covered or blocked.
- Do not drop anything into this product.
- Do not fall asleep while using this product.
- Do not use if you are under the influence of alcohol, drugs, or prescription medications.
- Do not use if you feel unwell, or within one hour of having a meal.
- To avoid injury, adjust massage intensity to avoid irritating an existing condition or causing injury.

2. Environment

- Do not use in hot environments, or moist areas such as bathrooms.
- Do not use at times when there are rapid changes in temperature.
- Do not use in very dusty or acidic environments.
- Do not use in areas that lack adequate space or ventilation.

3. Do not use this product if you:

- Have osteoporosis.
- Suffer from heart disease.
- Wear a pacemaker or other electronic medical implants.
- Have a fever.
- Are pregnant or menstruating.
- Have open wounds or skin disease.

- Have been told by a doctor to rest, or feel unwell.
- Do not use if your skin is wet.
- The appliance has a heated surface. If you are sensitive to heat, use with care.
- Children under 14 years of age and people with cognitive impairments must be supervised if they use the machine.

4. Safety

- Check that your power voltage is suitable to the specifications of the product.
- Do not use wet hands to pull the plug.
- Keep water away from the product to avoid the risk of electric shock or damage.
- Do not interfere with the wires or change the circuit of the product.
- Do not use a wet cloth to clean the electric parts such as the switch or plug.
- If there is a power cut, stay clear of the product until the power is back on to avoid the risk of injury from a power surge.
- Stop using this product if it ceases to function in its normal way, and consult your local agent immediately.
- Stop using the product if you feel unwell, and consult your health care practitioner.
- This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified person for safety reasons.

5. Maintenance

- This product should only be maintained by appointed agents. Users are prohibited to disassemble or maintain by themselves.
- Always turn the power off after usage.
- Do not use the product if the socket is loose.
- If you leave the product for a lengthy period without use, always store with the power cord wrapped up. Store in a dry environment and protect from dust.
- Do not place the product in hot or sunny environments.
- If the detachable cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons for safety reasons.
- Only clean this product with a dry cloth. Do not use thinners, benzene, or alcohol.
- The mechanical components of this product require specific maintenance and should only be maintained by the manufacturer or authorised service agent.
- Do not roll or pull this product along uneven ground. It should be lifted before moving.
- Do not use the product for lengthy periods. 20 minutes per session is optimal, 40 minutes is the maximum programmable time.


6. Trouble shooting: Solutions for common malfunctions

- It is normal to hear the motor during usage.
- If the controller doesn't work, check the plug and socket to ensure there is an adequate connection. Make sure the switch is turned on.
- The product will automatically switch off when it needs to cool down. This feature is designed to protect your safety and enhance the lifespan of the product. If the product activates the automatic shut down feature, leave it to rest for half an hour before using again.

Safety Warnings


⚠ WARNING

DO NOT apply downward pressure to the footrest when it is raised. This could cause the massage chair to fall forward, resulting in personal injury or damage to the product.

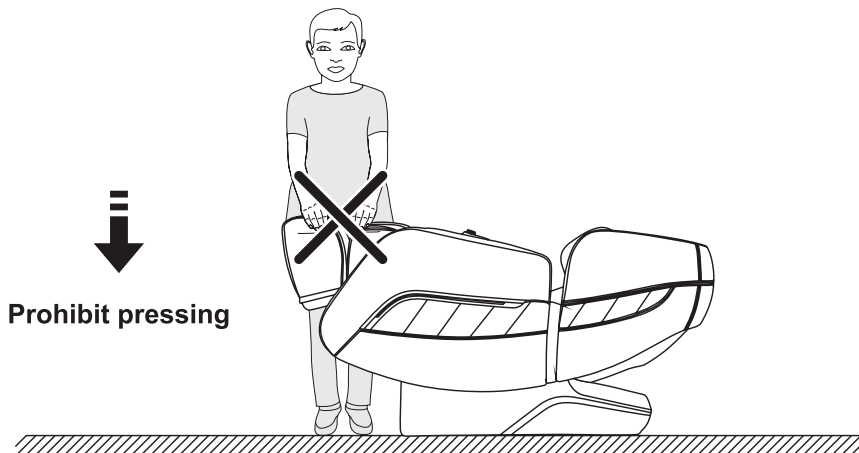


⚠ WARNING

Before sitting on the massage chair, make sure that the massage hand stays in the seat cushion position to avoid discomfort to the buttocks during use and damage to the massage hand.

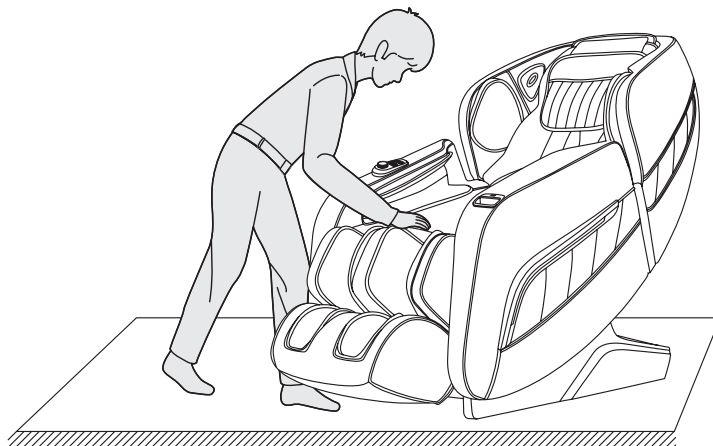


⚠ WARNING



DO NOT try to pull out the control cable or power cord during standby or power on states due to the risk of electric shock or damage to the product. Always unplug the controller cable and power cord and put away after you use the chair.

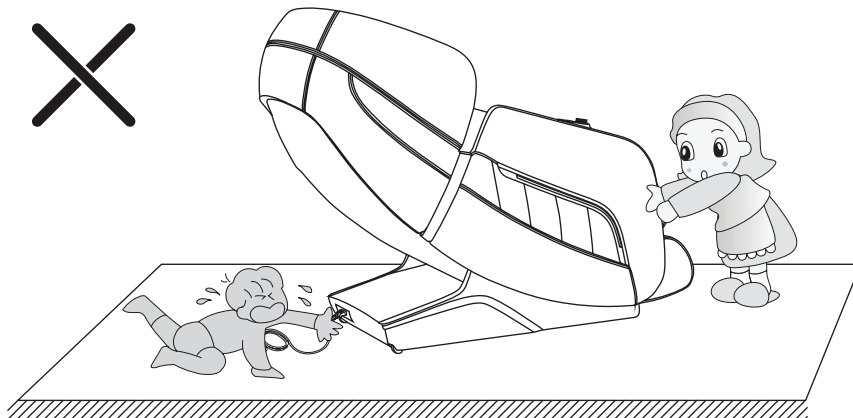**⚠ WARNING**

When using the zero-gravity lying function, first check to ensure there are no children or pets under the bottom of the footrest and backrest, to avoid the risk of personal injuries or damage to the product.

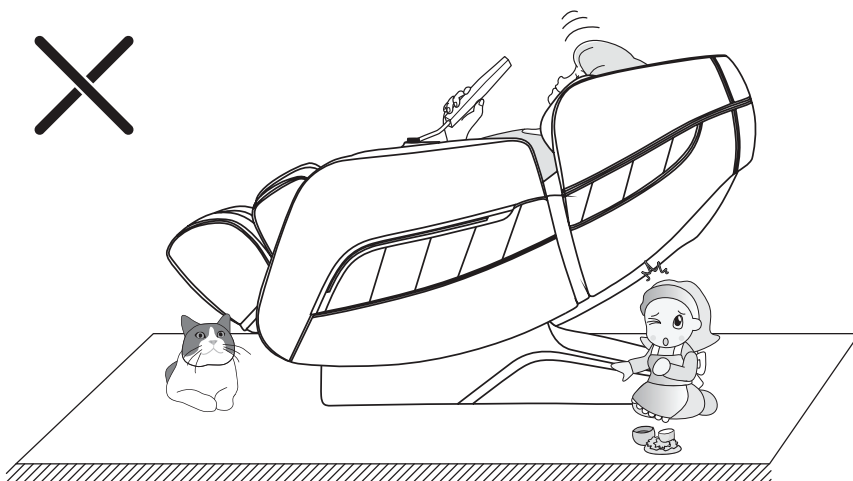

Massage Chair Overview

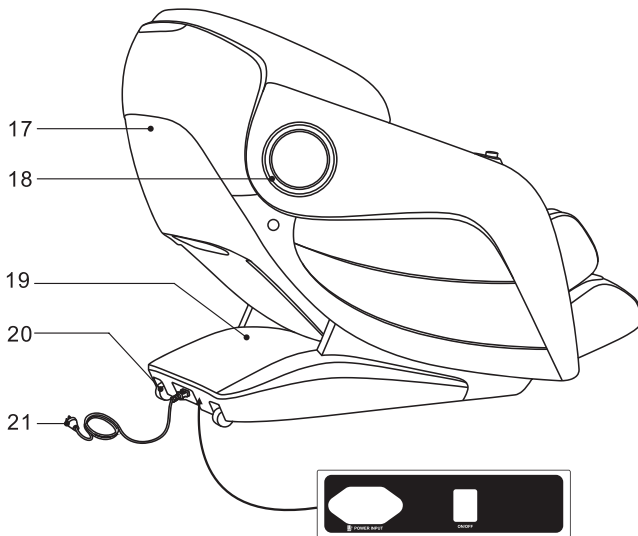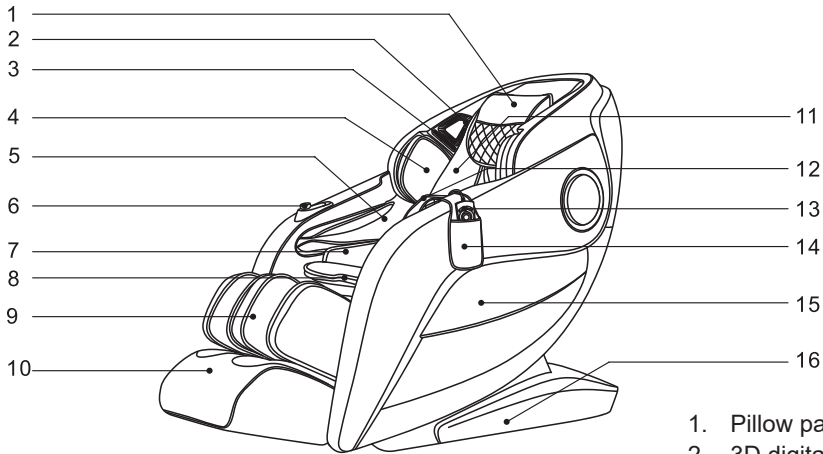


1. Pillow pad
2. 3D digital speakers (with voice control microphone on left)
3. O2 Ionizer
4. Upper arm air bag component
5. Arm air bag component
6. Shortcut button
7. Hip air bag component
8. Seat cushion
9. Calf rest
10. Foot rest
11. Back cushion
12. Back air bag
13. Remote controller
14. Controller Pocket
15. Armrest
16. Side panel
17. Back cover
18. LED lights
19. PCB box cover
20. Wheels
21. Power cord and plug
22. Power cord socket
23. Power switch

Function & Features Overview

- This product is designed with an intelligent, silent 3D massage hand that can move up and down, push forward and retract backwards.
- It can automatically detect the shoulder position and can also be manually adjusted.
- Provides a customised massage by detecting the natural curves of your body and spine and auto adjusting the motion of the massage hand moving forward and back to vary the length of the movements.
- Features eight special automatic massage functions: Fast, Comfort, Relax, Stretch, Full body, Shoulder and neck, Back and waist, Gentle Traction and Full air pressure.
- Three memory functions: program memory I, program memory II, program memory III.
- The Upper Body manual massage function features five kinds of massage position options: Full, Partial, Fixed point, Upper back and Lower back. There are six massage techniques: Kneading, Tapping, Shiatsu, Kneading and tapping, Shoulder grasp and 3D. The massage has five adjustable speeds. When using the Shiatsu or Tapping mode, the robot massage hand adjusts to five different widths.
- Air Massage function: arm pressure massage function (designed with 8 airbags), upper arm pressure massage function (designed with 4 airbags), and three levels of air pressure intensity adjustment.
- Air pressure massage function: upper arm air pressure massage (4 built in airbags) lower arm massage function (4 built in airbags) side cushion air pressure massage (4 built in air bags) waist air pressure massage function,(4 built in airbags), leg and hip air pressure massage function (26 built in airbags), foot air pressure massage function (18 built in airbags), and three levels of air pressure intensity adjustment.
- The back and leg heating function uses carbon fibre as an infrared heating source.
- The product is designed with a wall-saver function, so the chair will slide forward when the back rest reclines down.
- The backrest rail adopts 'SL' rail technology, which fits perfectly with the curve of your back, so you can enjoy a form fitting massage..
- Intelligent voice control and identification function (microphone in left side speaker).
- Music play system: features 3D digital speakers in the left and right upper arms.
- Can play music by connecting with Bluetooth on your smart phone or other smart device.
- Waist twisting function: uses the left and right waist airbags to swing the waist, relieving tension in the waist muscles resulting from a sedentary lifestyle or too much time sitting.
- The right arm rest is equipped with a Power button, 3D Intensity dial, Footrest Length adjustment button, Negative ions button, Heating button, Auto Mode button,Recline angle adjust button, Voice Control button and a Zero Gravity adjust .
- Leg lifting and recline adjustment. Lifting or recline adjustment of leg and back, Zero Gravity I or Zero Gravity II.
- Foot roller massage function: at the bottom of the foot rest there are rotating massage heads to massage the base of your toes and additional rollers to provide a deep, scraping massage to the arches and heels of your feet.
- The foot rest is equipped with an automatic sensor to detect the leg length. When the leg is raised or reclined to a suitable angle, the foot rest will automatically detect the length of the leg and provide a targeted massage to exactly the right area.
- Arm rest LED light decoration.
- The upper arms are fitted with a width adjustment function, which adjusts in two steps adapting to different shoulder widths.
- Shutdown automatic reset function, massage robot automatic reset function.
- Configuring TFT colour screen manual controller.

Remote Control Overview

 
Remote control display

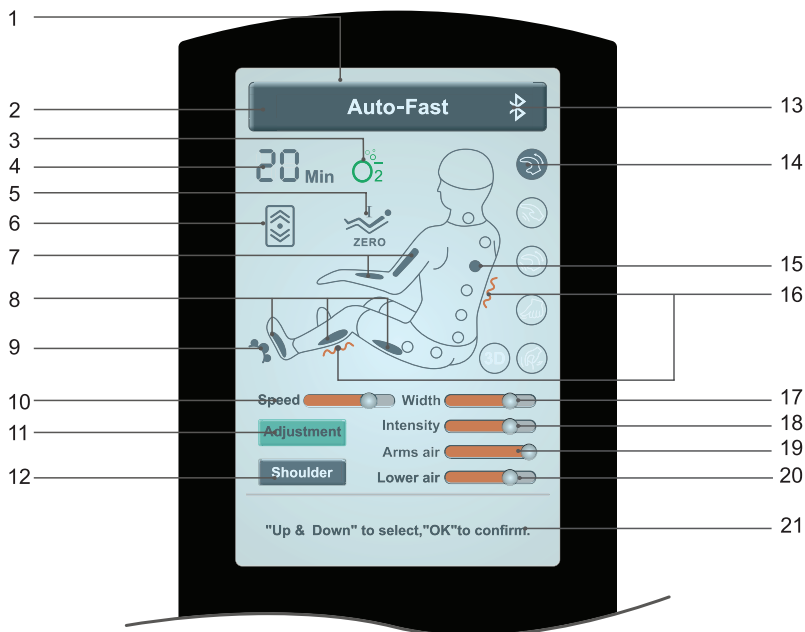

Note: The Remote Control shows the massage function and massage function icon settings

- | | |
|--------------------------------------|--|
| 1. TFT colour liquid crystal display | 12. Shoulder position adjustment |
| 2. Massage status display | 13. Bluetooth display |
| 3. Negative oxygen ions display | 14. Massage modes display |
| 4. Timing display | 15. Massage position display |
| 5. Zero gravity display | 16. Leg and back heating display |
| 6. The back adjustment display | 17. Width adjustment |
| 7. Arm air pressure display | 18. Massage strength adjustment |
| 8. Leg and foot air pressure display | 19. Arm air pressure adjustment |
| 9. Foot roller display | 20. Lower body air pressure adjustment |
| 10. Speed adjustment | 21. The status bar |
| 11. Adjustment | |

 
Remote control buttons

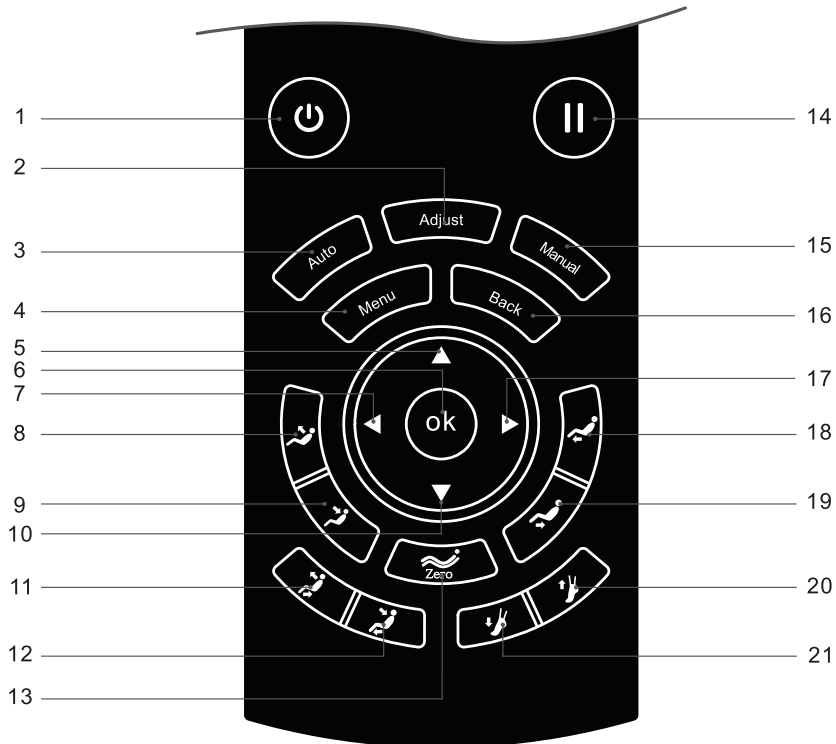

1. Power button: turn on or off massage chair
2. Adjustment button: enter the massage function selection interface
3. Auto button: enter the automatic mode selection interface
4. Menu button: enter main menu interface
5. Up button: navigation key up
6. OK button: OK
7. Left button: navigation key turn left
8. Backrest rise button: adjust the backrest rise
9. Backrest down button: adjust the backrest down
10. Down button: navigation key down
11. Sit Up button: Massage chair lifts up.
12. Laying Down button: 12. Massage chair reclines down
13. Zero G button: select Zero Gravity setting.
14. Pause button: Pauses all the functions
15. Manual button: enter the manual mode selection interface
16. Back button: return to massage information interface
17. Right button: navigation key turn right
18. Leg rest up button: adjust leg rest up
19. Leg rest down button: adjust leg rest down
20. Foot rest shorten button: shortens the foot rest
21. Foot rest extend button: extends the foot rest

User Guide

 
1. Switch power supply on

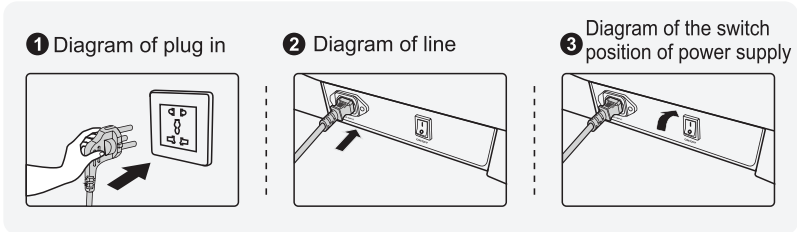

2. Start Guide



2.1 Standby

The massage chair cannot enter any mode of operation in standby mode and will display the logo until the Power button is pressed.

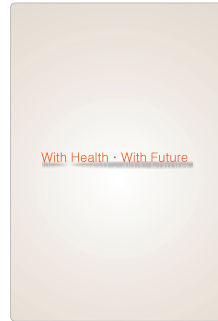

2.2 Start massage


Press "Power" button to start Chair. The back rest maintains the default position, leg rest raises slightly. Choose an Auto mode to start the Body Sensing and Shoulder detection process. The massage chair will shut down automatically if a selection is not made within 5 minutes.

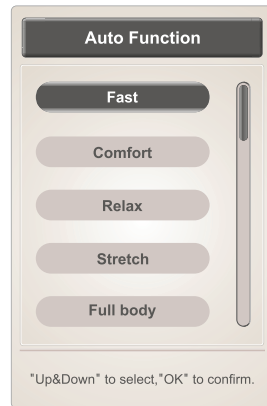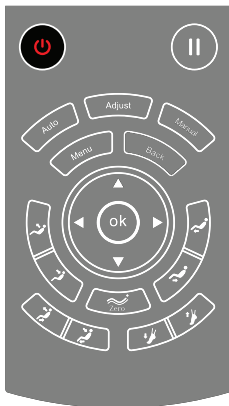


2.3 Body Sensing & Shoulder Adjustment


Choose one automatic mode, then back rest and leg rest position will adjust to a standard fixed angle.

After adjusting the angle, the massage chair will automatically detect the shoulder position and body (note: Fast mode only detects shoulder position, other modes detect whole body and shoulder position). Wait for the detection to complete during which you will hear beeping. If you press the "OK" button before detection completes, the massage chair will start massaging in the default setting without shoulder positioning and body sensing adjustments.

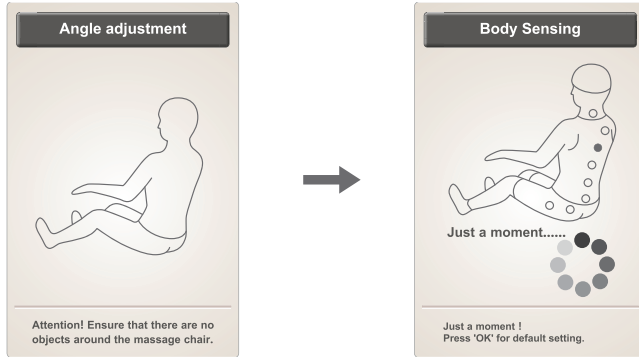


After the shoulder detection and adjusting completes, you can adjust the shoulder position by pressing the up or down button to modify the setting. There are 11 levels for shoulder adjustment. If no adjustment occurs for 10 seconds, the massage function will commence automatically.

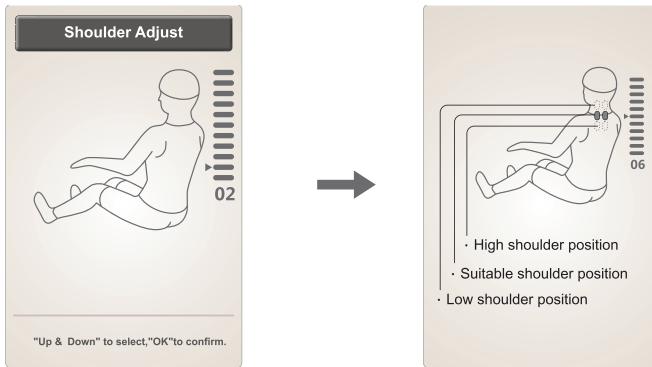


Button	Description
	Move the massage balls upward to a suitable position.
	Move the massage balls downward to a suitable position.

 After the massage starts you can adjust the shoulder position by selecting the Shoulder adjustment interface from the Massage Status display.

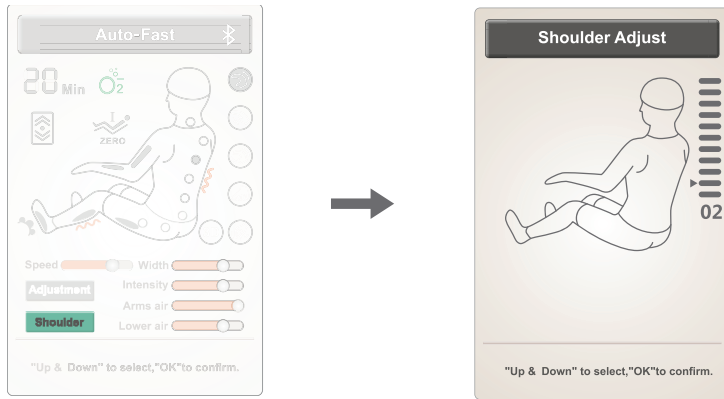

2.4 Pause button


When the massage is in progress, you can pause it instantly by pressing the "Pause" button. Press it again to restart to the massage function you were using. If you leave the massage paused for more than 20 minutes, all massage functions will automatically switch off.

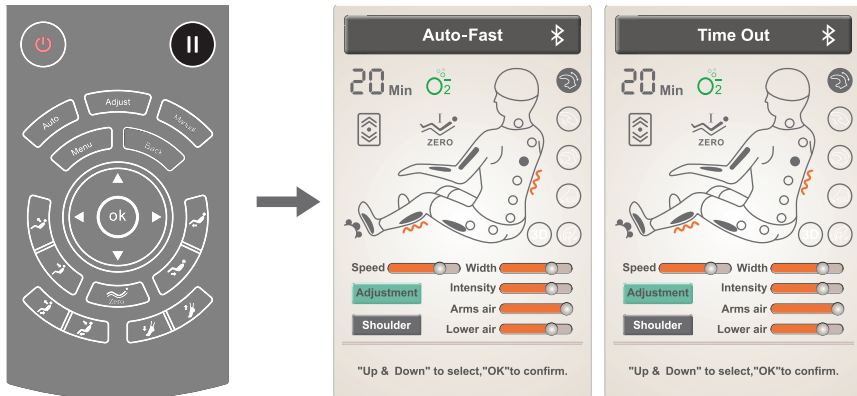

2.5 Menu button

Use the “Menu” button to select the main message function menu. The selection includes Auto function, Manual mode, Adjustment, Customise, Setting, and Device information options.


Press the “up” or “down” buttons to select menu items. Press the “OK” button to make your selection. Press the “Back” button to return to the function selection information interface.

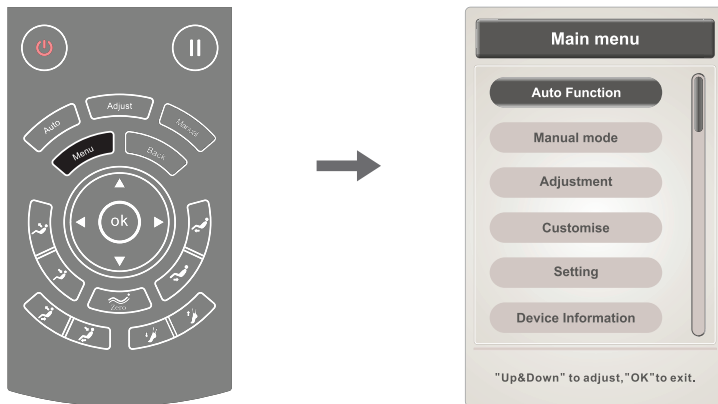

2.6 Auto Function Interface (Auto button is also a shortcut to the Auto Function interface)

This will give you a choice of automatic modes including Fast, Comfortable, Relax, Stretch, Full body, Shoulder and neck, Back and waist and Full pressure.

Press the “up” or “down” buttons to select a message function, and then press the “OK” button to select your choice of function. Press the “Back” button to return to the function selection information interface.

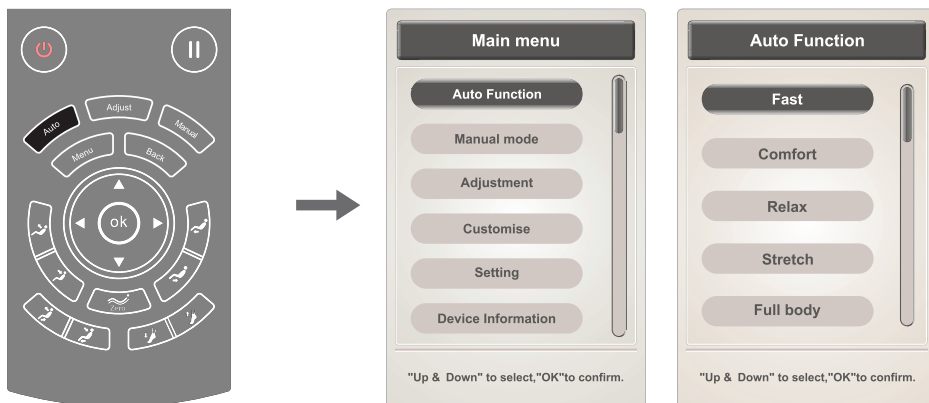


Note: the automatic function you have chosen will display in the message function status bar. Press the “Back” button to check the operation.


AUTOMATIC MESSAGE	
Function	Description
Fast Massage	Fast for the ultimate massage experience.
Comfort Massage	The most comfortable massage experience.
Relax Massage	Gentle and comfortable deep massage to relax the body and alleviate exhaustion.
Stretch Massage	Uses the waist airbag pressure to swing around to form a twisting massage function, which relieves tension in the waist muscles cause by prolonged periods of sitting and a sedentary lifestyle.
Full Body Massage	Deep massage to boost energy.
Neck and Shoulder Massage	Focused neck and shoulder massage, relieves sore, tired muscles with an effective massage.
Back and Waist Massage	Focused back and waist massage to relieve aches and pains in these areas.
Full Air Pressure Massage	Focused upper arm, arm, knee, leg and foot massage to relax the entire body.

2.7 Manual mode (use Manual button to enter the manual mode interface)

Press “menu” button to enter the main menu interface. Choose manual mode icon: includes Massage mode, Massage position, Air pressure and other massage functions.

Press “left” or “right” button to change submenu, then press “up” or “down” button to choose massage function. Press “Back” button to return to operating information interface.

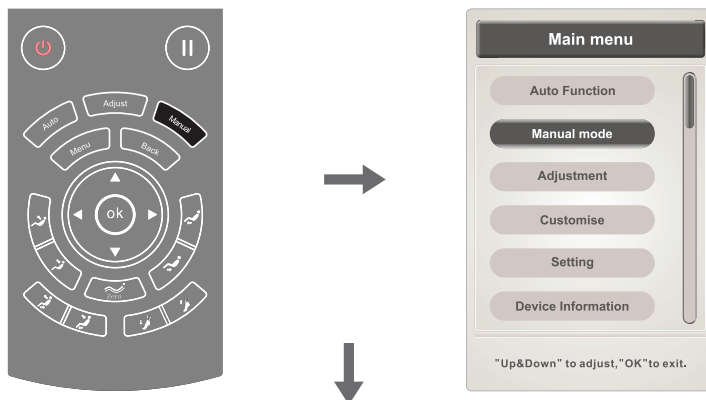


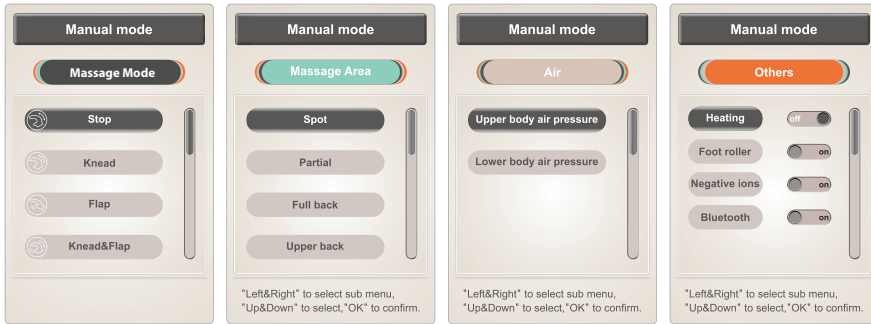


3. Manual mode

3.1 Manual Massage modes

Manual Mode: includes six massage modes including kneading, tapping, kneading and tapping, shiatsu, 3D and shoulder lifting. In Tapping and Shiatsu modes, the width and speed can be adjusted. Other massage modes can adjust the speed but not stop the massage.

Press “up” or “down” button to choose message mode icon, and then press “OK” button to confirm the massage mode is starting.

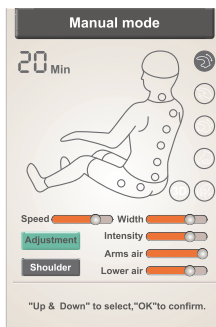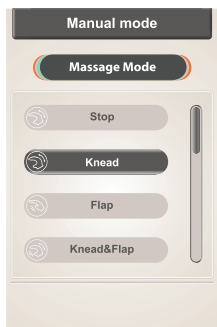

Note: Press Stop icon and all message functions will stop. Selecting one message mode icon and pressing Okay will start that massage mode.

MESSAGE FUNCTIONS	
Function	Description
Kneading	Speed
Tapping 1 - Single Speed	Speed and Width
Tapping 2 - Alternating Speed	Speed and Width
Kneading and tapping	Speed
Shiatsu 1 - Consistent pressure	Speed and Width
Shiatsu 2 - Alternating pressure	Speed and Width
Shoulder lifting	Speed
3D	Speed

 
5-level speed adjustable

5-level width adjustable

3.2 Massage Area

Manual Massage Area Mode: massage spot, partial, full back, upper back and lower back.

Press “up” or “down” button to choose partial massage function icon, press “OK” button to confirm.

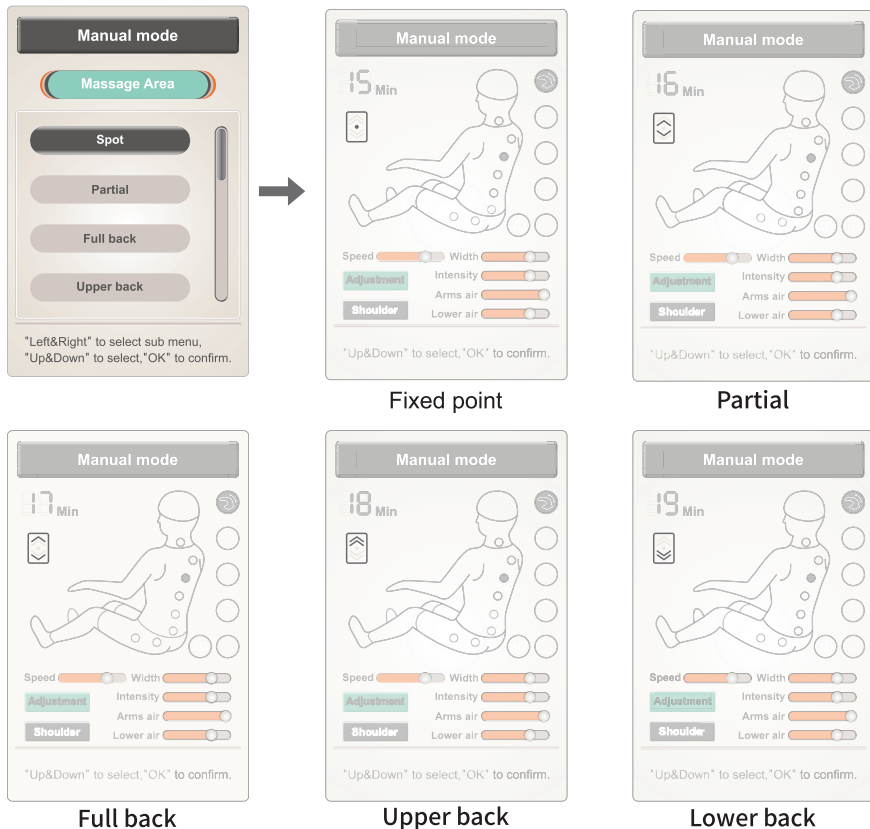


AREA MODE FUNCTIONS		
Function	Description	
Spot	Massage at spot	When choosing the mode of spot and partial massage, press “up” and “down” button to adjust massage range.
Partial	Partial massage back and forth in small range	
Upper back	Upper back massage back and forth	
Lower back	Lower back massage back and forth	
Full back	Full back massage back and forth	

3.3 Air Pressure Massage Area

Manual mode (air pressure) includes upper body air pressure and lower body air pressure massage functions.

Press “up” or “down” buttons to choose different air pressure massage functions, and then press “OK” button to confirm your selection.

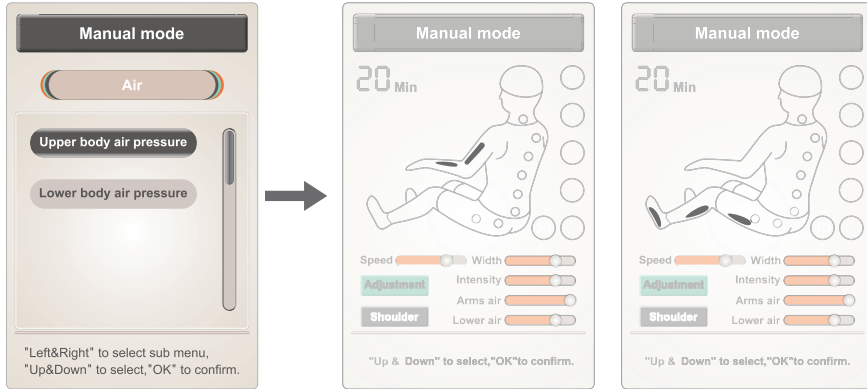


AIR MESSAGE PRESSURE	
Function	Description
Upper body air pressure	Switch on or off upper body air pressure massage function
Lower body air pressure	Switch on or off lower body air pressure massage function

3.4 Others

“Others” includes Heating, Foot Roller, Negative oxygen ions, Bluetooth and other massage functions.


Press “up” or “down” to choose massage function, press “OK” button to switch the massage function on or off.

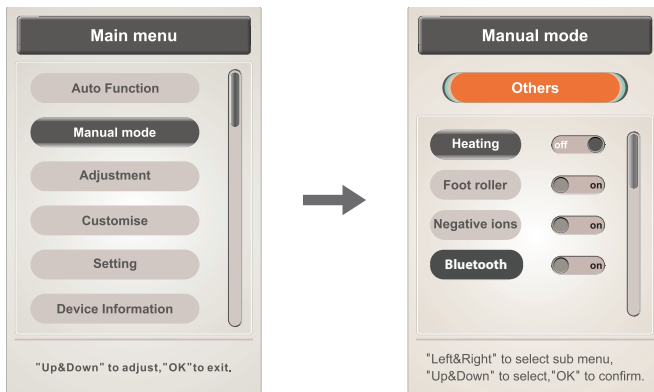

3.5 Back Heating

Press "OK" button to switch the heating massage function on or off. It will heat up in 3 minutes.

 
Press "up" or "down" buttons to choose other massage functions. Press "Back" button to return to the operating information interface.

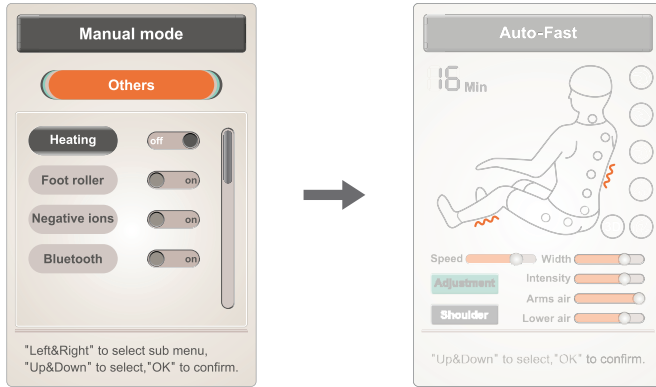

3.6 Foot Roller

Press "OK" button to switch the foot roller massage function on or off.

 
Press the "up" or "down" button to choose other massage functions. Press "Back" button to return to the operating information interface.

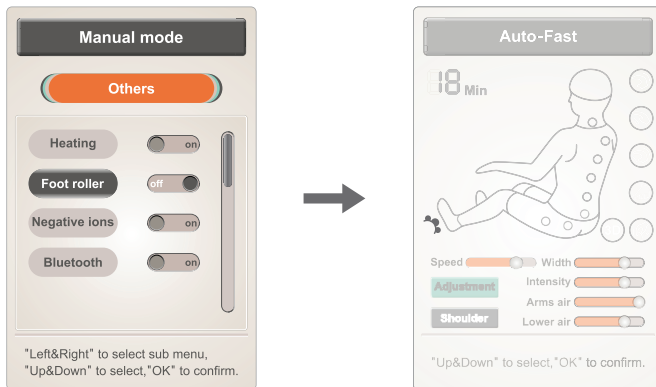

3.7 Negative oxygen ions

Press "OK" button to switch the negative oxygen ions massage function on or off.

Press the "up" or "down" button to select other massage functions. Press "Back" button to return to the operating information interface.

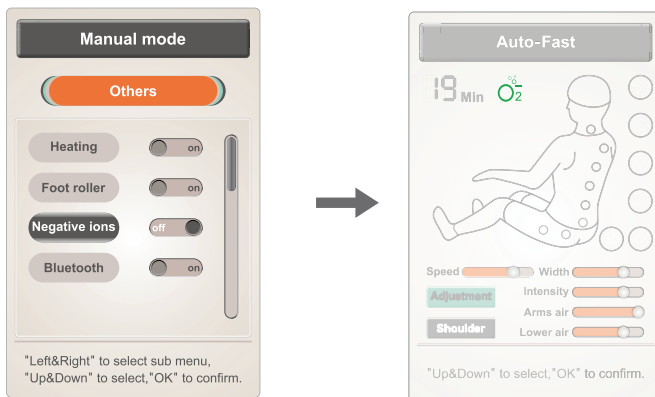


3.8 Bluetooth

Press "OK" button to switch the Bluetooth function on or off.

After connecting, the Bluetooth in the massage chair will source a Bluetooth capable device to pair with for connection. The Bluetooth function of the smart device can be used to play music on a wireless connection.

 Press the "up" or "down" button to select other massage functions. Press the "Back" button to return to the operating information interface.

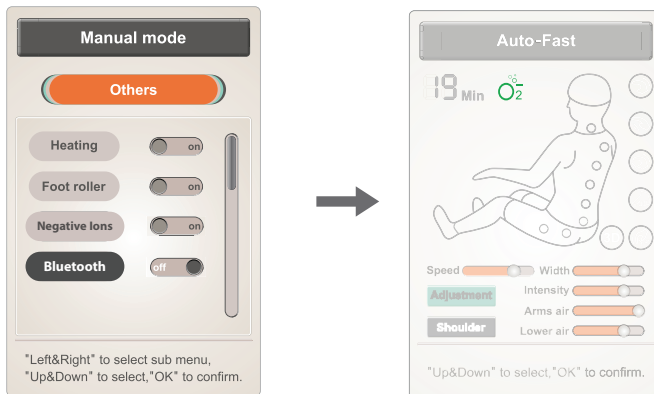


4. Adjustment Function


4.1 Adjustment Menu

The Adjust button is also a shortcut to the Adjust Function interface

 Press “left” or “right” buttons to access the submenu options. The 4 options are Massage – adjustment of Speed, Width and Intensity, Massage Area, Air Pressure Intensity and Time (Others) Choose massage function in the menu, then press “up” or “down” button to select function to adjust. Press “OK” button to adjust level then press “Back” button to return to the operating information interface.

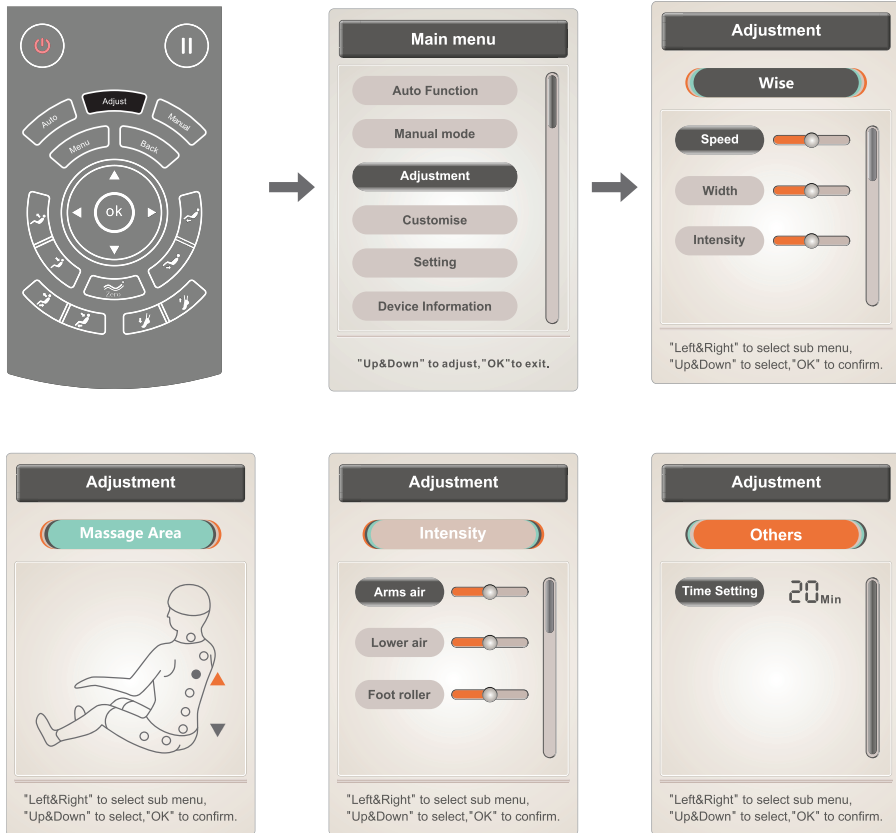


 While in the operating information interface, press “adjust” button to directly enter the adjustment interface.

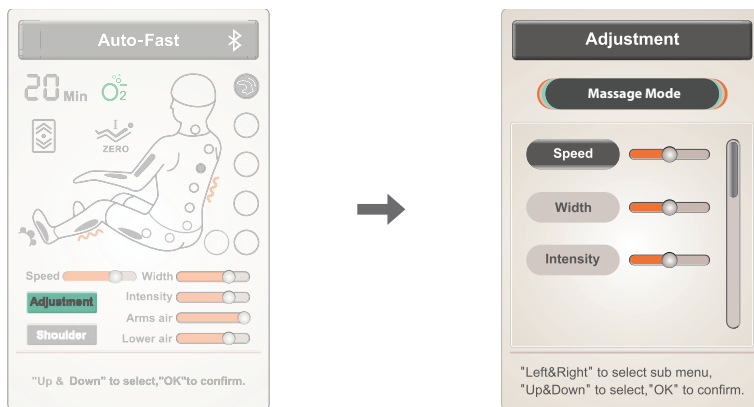

4.2 Adjustment Function (Manual massage mode)

Adjustment function (Manual massage mode) allows you to adjust the speed, width, and intensity and so on.

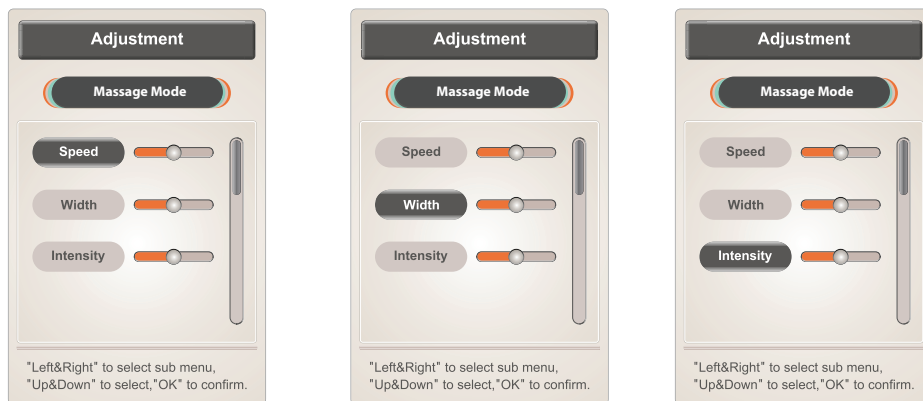


Press the “up” or “down” buttons to select speed or width function. Press the “OK” button to adjust speed and width levels.

Note:

- Speed: five levels for massage speed adjustment.
- Width: five levels for massage width adjustment when in tapping and shiatsu mode.

4.3 Adjustment function (Massage Area)

Adjustment function (massage area) when using fixed or partial massage area, whilst pressing the “up” button, the massage head will rise and stop when at the top of the range or you remove your finger; pressing the “down” button and the massage head will go down and stop when at the bottom or when you remove your finger.

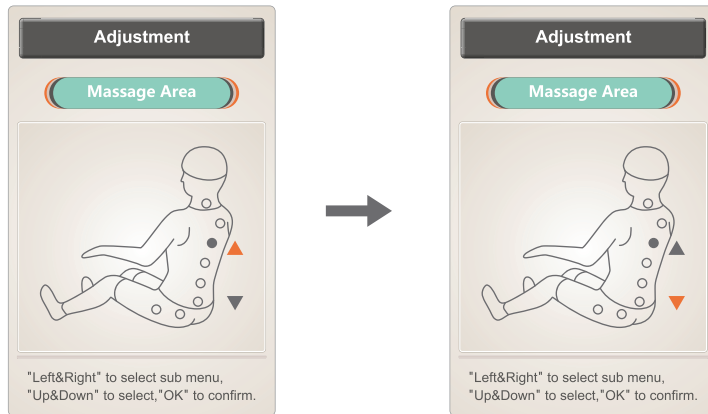


4.4 Adjustment function (Intensity)

Adjustment function (adjust button-intensity) include upper body air pressure, lower body air pressure and foot roller. There are three levels to select from.

Press the “up” or “down” buttons to select air pressure intensity or foot roller intensity. Press "OK" button to adjust intensity.

 
Press “Back” to return to Operating Information screen.

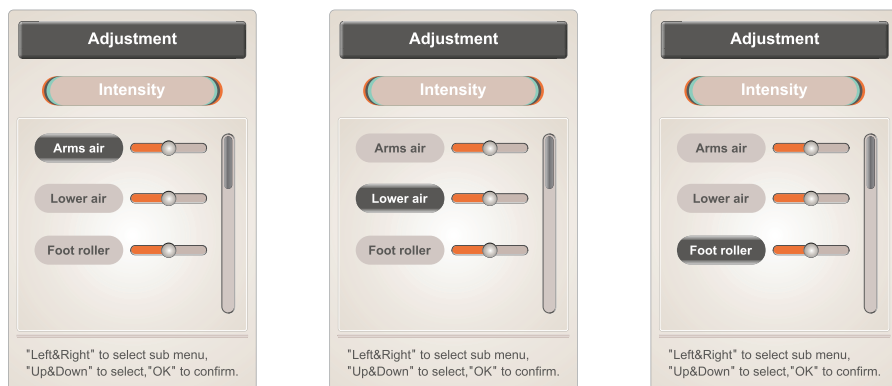

4.5 Adjustment function (Other)

Adjustment of time setting function. Press "OK" button one time to add five minutes to your massage. After 40 minutes, it will return to zero.

Can also be used during massage to extend time by 5 minute increments.

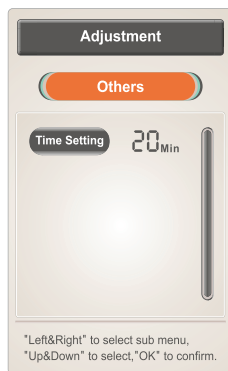

5. Customize

Press "menu" button to enter Main Menu. Select "Customise" function to enter the customise function interface. This includes Save and Use functions for program memory I, program memory II, program memory III.


Press "left" or "right" button to choose Save or Use, press "OK" button to confirm.

Press "up" or "down" button to choose program memory I, program memory II, program memory III.

Save: save all current massage modes, air pressure, angle and other massage functions.

Use : retrieve previously saved settings, including air pressure, angle and other massage functions.

Press "Back" button to return to the operating information interface.

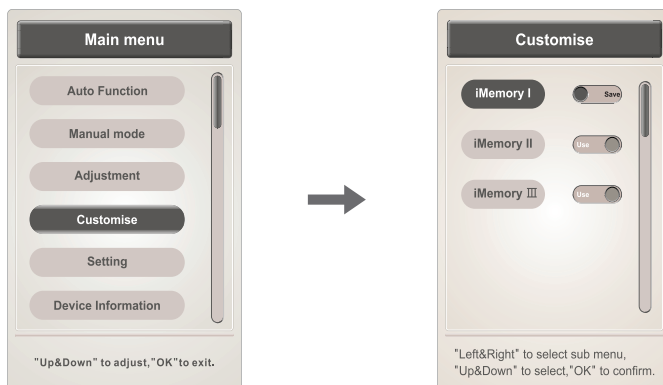

6. Setting

Press “menu” button to enter main menu interface, choose “setting” function icon, enter setting interface include language, backlight, lock screen and so on.


Press “left” or “right” button to switch to submenu. Press “up” or “down” button to select function or press “return” button return to operating information interface



6.1 Language

Setting (language): set language to Chinese or English

Press “up” or “down” button to choose one language, press "OK" button to confirm.

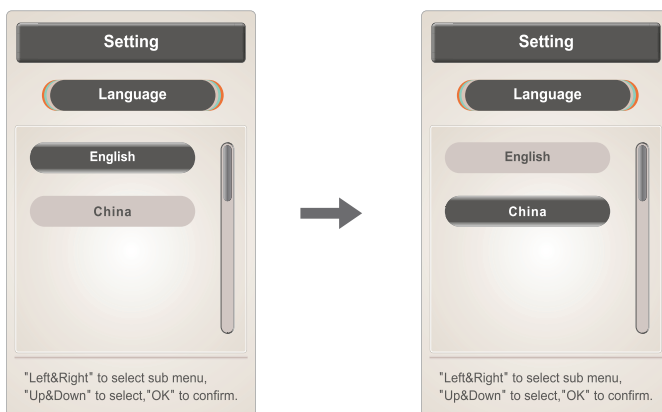

6.2 Lock Screen

 
Setting (lock screen) includes a choice of time lock, never lock and automatic lock when there has been no input for 2 seconds.

Press the "OK" button on the remote control to adjust the screen lock time. The screen lock time starts at 15 secs, then 30 secs, 1 min, 2 min, or never locked by each single press on the "OK" button.

6.3 Backlight

Setting (backlight) select from five levels for light adjustment.


Press "Back" to return to the operating information interface.

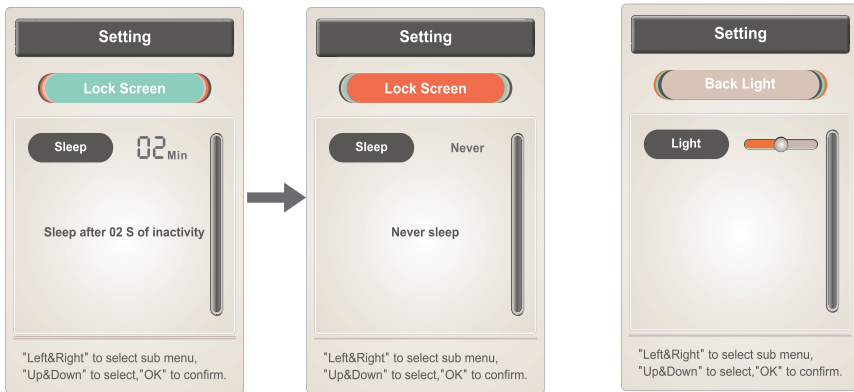

6.4 Device Information




Press "menu" button to enter main menu interface to select equipment information function and display current equipment information.

Press "up" or "down" buttons to select your choice, then press the "OK" button to confirm. Press "Back" button to return to the operating information interface.

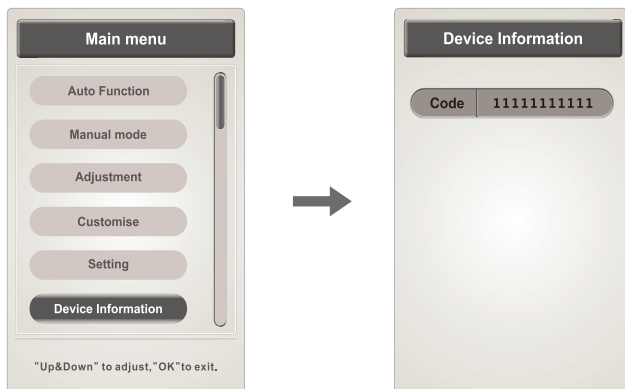

7. Zero Gravity button



Press “zero gravity” button to adjust the zero gravity position. Choose “zero gravity I” or “zero gravity II” according to your requirements

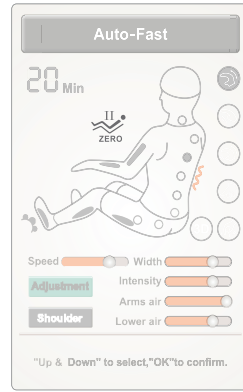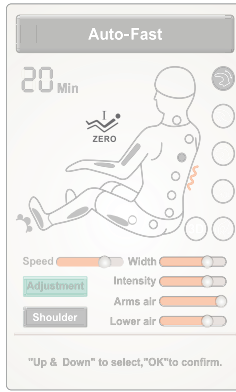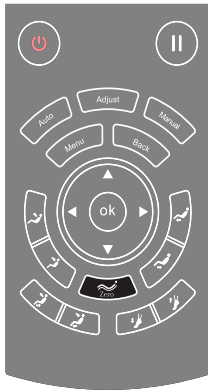







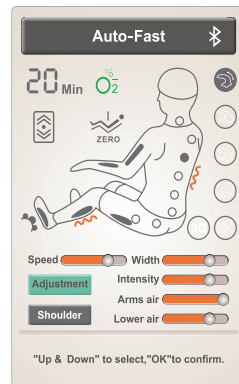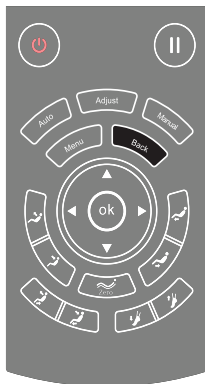


ZERO GRAVITY FUNCTION	
Button	Description
	Zero Gravity I: adjust to Zero Gravity I angle 150°
	Zero Gravity II: adjust to Zero Gravity II angle 158°

8. Back Button


When adjusting the massage functions, you can press the “Back” button to return to the main operating information interface.




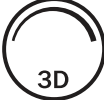




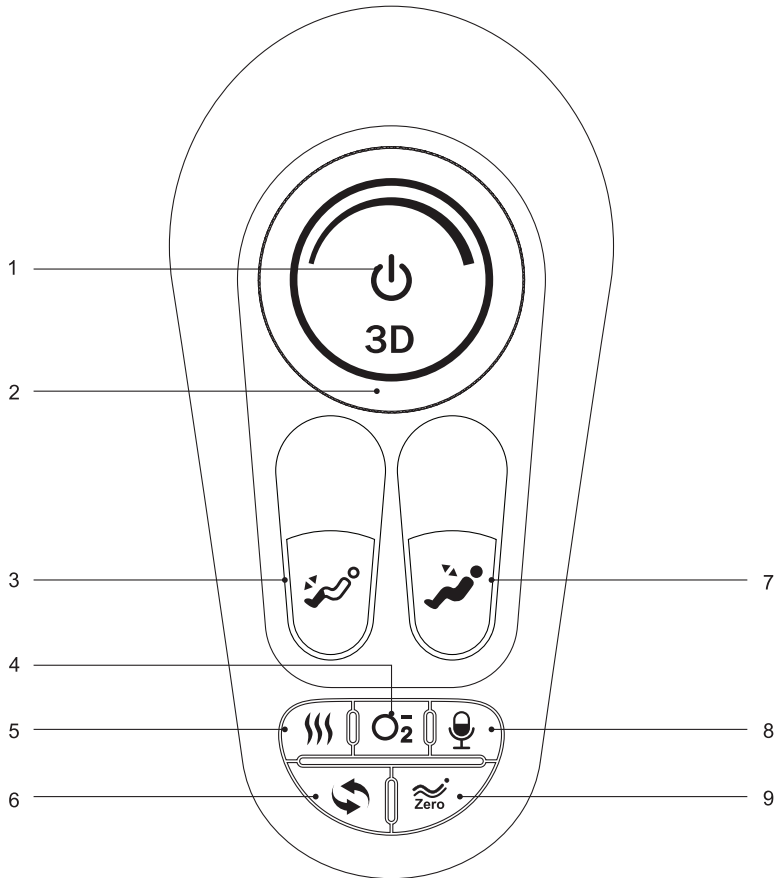


9. Angle adjustment buttons

Button	Description
	<p>Leg rest up button: press to rise, release to stop. When finished, it will automatically detect foot length.</p>
	<p>Leg rest down button: press to go down, release to stop. When finished, it will automatically detect foot length.</p>
	<p>Back rest up position: press to rise, release to stop.</p>
	<p>Back rest down position: press to go down, release to stop.</p>
	<p>Tilt up button: press to lift up back rest and lower the leg rest at the same time. Release to stop. When finished, it will automatically detect foot length.</p>
	<p>Tilt down button: press to lower the back rest and lift the leg rest at the same time. When finished, it will automatically detect foot length.</p>
	<p>Zero gravity button: press to adjust leg and back rest position to zero gravity position. There are two modes to select from.</p>
	<p>Foot rest shorten button: press to manually retract the foot rest, release to stop.</p>
	<p>Foot rest extend button: press to manually extend the foot rest, release to stop.</p>

Armrest shortcut button introduction



1. Power button: switch on or off (press for 3 seconds to Start)
2. 3D intensity Dial: 3D intensity adjustment.
3. Foot Rest Adjust button: adjust the length of the foot rest.
4. Negative oxygen ions button: switch negative ions on or off.
5. Heating button: switch heating on or off.
6. Automatic button: Scroll through Auto massage modes.
7. Link down button: adjust the angle of the recline.
8. Voice button: switch on voice control massage function.
9. Zero gravity button: adjust zero gravity angle.

Button	Description
	Power button: press in for one second to Pause, press in for 3 seconds to switch on or off. If the pause time exceeds 20 minutes, all massage functions are automatically turned off.
	3D intensity massage Dial: Adjusts the strength of the massage by extending the massage head forward or retracting it back.
	Foot rest shorten button: lift up to retract the foot rest, release to stop.
	Foot rest extend button: press to extend the foot rest, release to stop.
	Tilt up button: lift up to elevate the back rest while the leg rest goes down. Release to stop. When finished, it will automatically detect leg length.
	Tilt down button: push down to recline the back rest while the leg rest goes up. Release to stop. When finished, it will automatically detect leg length.
	Heating button: switch the heating function on or off.
	Negative oxygen ions button: switch the negative ions function on or off.
	Voice button: switch the voice control massage function on or off.
	Automatic mode button: press to switch automatic massage function.
	Zero gravity button: automatically adjust leg rest and back rest to zero gravity position. There are two zero gravity preset positions to choose from.

10. Voice control operation

When the massage chair is on or in standby mode, say “Hi Alice” or press the voice control wake-up button on the right armrest to wake up the voice control function.

After the successful wake-up, the massage chair will reply “I am here”. At this time, give the voice control instruction from the table corresponding to the function required within 6 seconds. The massage chair will confirm by voice and action the instruction. If there is no voice command made within 6 seconds, the function turns off and needs to be reawakened.

Note: When waking up the voice control function keep your speech rate moderate. Voice commands will be confirmed back by Alice.


VOICE CONTROL COMMANDS	
To awaken Alice say: “Hi Alice” Alice will answer: “I am here”	
Your Command	Alice’s Answer
Massage on	Answer: OK, massage on.
Massage close	Answer: OK, massage close
Comfort Massage.	Answer: OK, comfort massage
Relax massage.	Answer: OK, relax massage
Full body massage.	Answer: OK, full body massage
Neck and shoulder massage.	Answer: OK, neck and shoulder massage
Back and waist massage.	Answer: OK, back and waist massage
Stretch massage.	Answer: OK, stretch massage
Fixed massage.	Answer: OK, fixed massage
Change the other mode.	Answer: OK, change the other mode
Go little down.	Answer: OK, go little down
Go little up.	Answer: OK, go little up
Open the air pressure.	Answer: OK, open the air pressure
Close the air pressure.	Answer: OK, close the air pressure
Up the seat position.	Answer: OK, up the seat position
Down the seat position.	Answer: OK, down the seat position
Stop adjustment	Answer: OK, stop adjustment

11. Turn off power, stop massage

Pressing the power button during the massage will stop all massage functions immediately and return the back rest and footrest to the default position.

When the set massage time is up, the massage hand will return to its original position and all the massage functions will stop. The Backrest and footrest will not return to their original position, they can be returned to the Sitting position using the armrest controls.

The power switch key cuts power to the entire machine, as illustrated below (schematic diagram of power being cut to the machine).

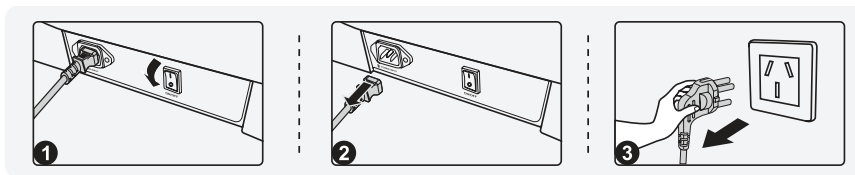

1. Turn the Power off

2. Unplug the machine cord.

3. Unplug the power plug.


12. Bluetooth® Player Operation

- 12.1 Switch on the Bluetooth® function on your smart device and search for new Bluetooth® devices.
- 12.2 The device will locate Bluetooth® (IMCM-XXXX), select this and it will sync with the chair.
- 12.3 Turn on the Music Player in the smart device.


Installation

1. Installing the arm rest.


- 1.1 Locate the connector plug corresponding to the arm rest from the bottom of the frame and feed it out from the centre of the rear end of the frame.

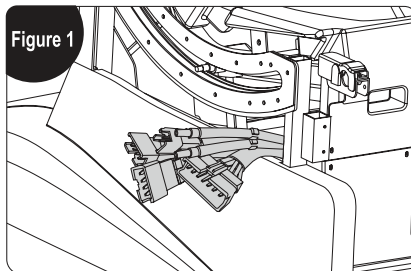


- 1.2 After passing the connector plug from the middle of the rear end of the frame, locate the corresponding wiring plugs (docking according to the marks on wiring)

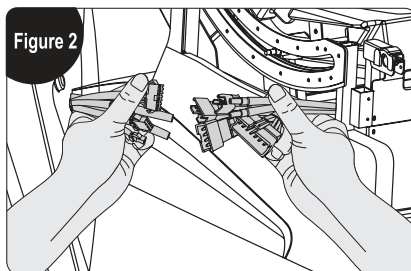


- 1.3 The connecting plug and the air pipe on the armrest are inserted into the connecting plug and the air pipe at the bottom of the base. Make sure the plug and air pipe are connected correctly

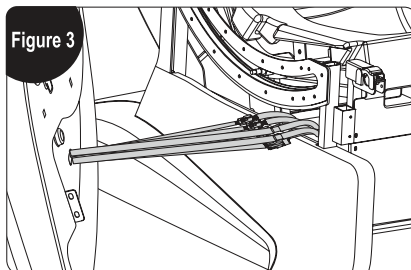


- 1.4 After the air pipe and plug are docked, tuck them into the bottom of the base and take care to avoid the air pipe pinching or crushing.

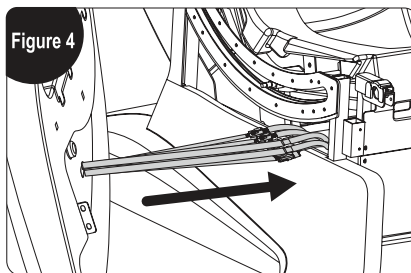


-
- 1.5 Hold the handrail with both hands. Hook the front end of the armrest, hang it onto the steel of clip on the frame and press down the front end of the handrail to lock in place

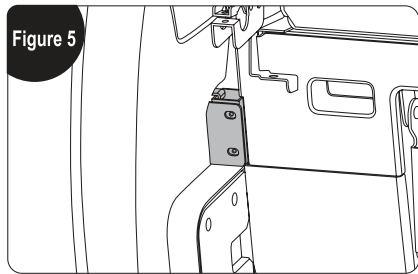


-
- 1.6 Then connect the lamp wire at the rear end of the armrest to the connector on the main body. Make sure the lamp wire is tucked into the main body. Then align the male & female buckles. And then clip into place.

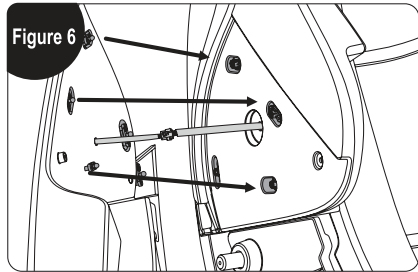


-
- 1.7 Secure the rear end of the armrest with an M6*20 screw.

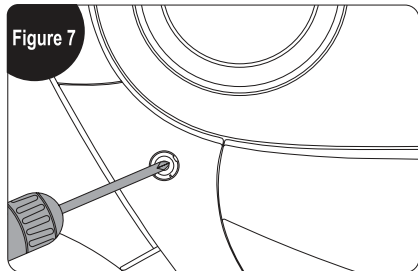


-
- 1.8 Then pull the upper arm holster and fix it with a M5*16 screw.

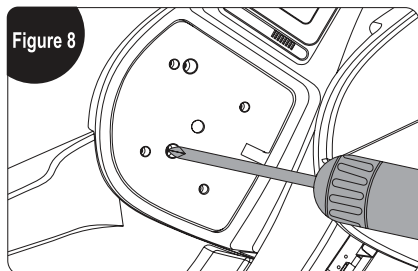

- 1.9 Align the mounting holes on the steel frame at the front end of the fixed armrest and tighten the armrests to the steel frame of the frame with two M5*16 screws.

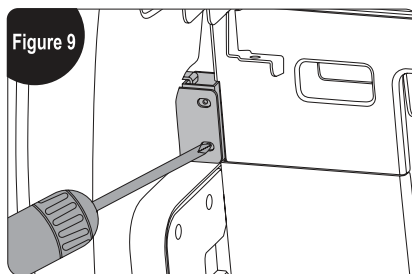


- 1.10 Install the cover over rear end screw hole.

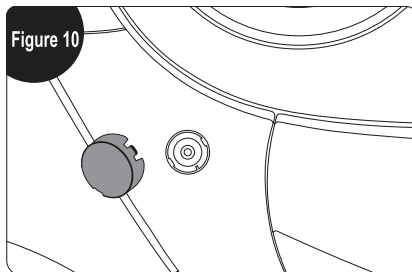


2. Leg rest installation


- 2.1 Cut the cable tie that is holding the wires onto the steel pipe (Figure 1).
- 2.2 Connect the connecting wire and the air pipe and the leg joint in the lower end of the frame. Then insert the docking cable and the air pipe from the lower end of the frame into the lower side of the frame, and pay attention to the plug. Don't let the pipe become pinched or crushed which could impede air flow (Figure 2).

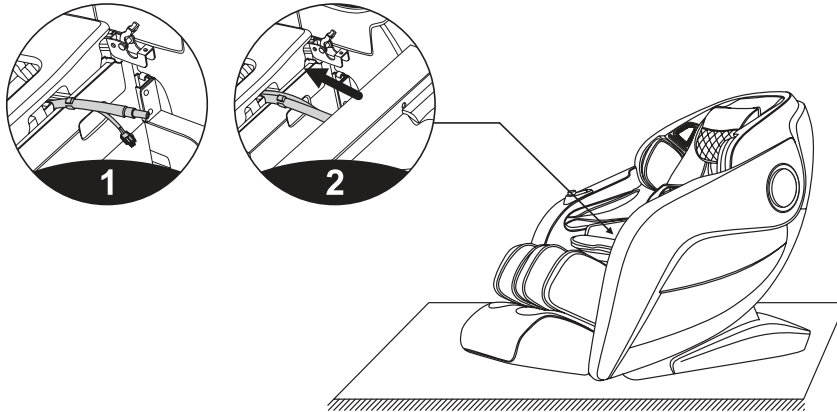


- 2.3 Insert the rotating inner sleeve and the rotating outer sleeve into the left side of the leg rest and the right side of the lower leg (Figure 3).
- 2.4 Open the leg rest support hinge cover on the left and right mounts of the massage chair (Figure 4).

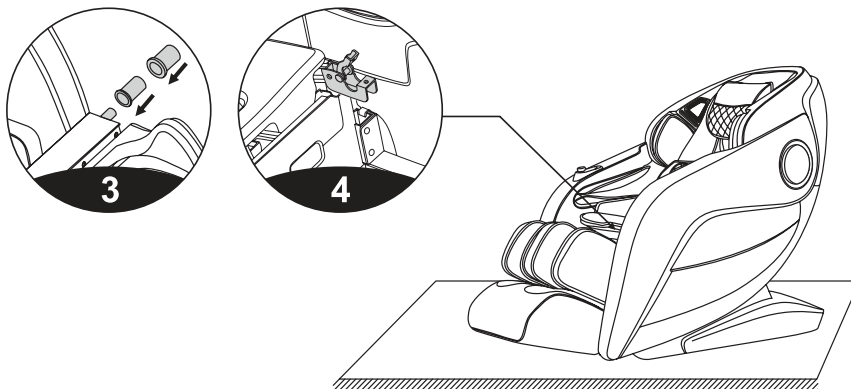

- 2.5 Then clip the lower leg (left and right shaft) into the frame support hinge plate at the same time (figure 5).
- 2.6 Cover the rotating shaft cover, press leg rest rotating cover, and then tighten leg rest rotating cover board with two M5×14-12.9 screws and a 6×12×1.5 flat pad by supplied 4# hex wrench. (Fig. 6)

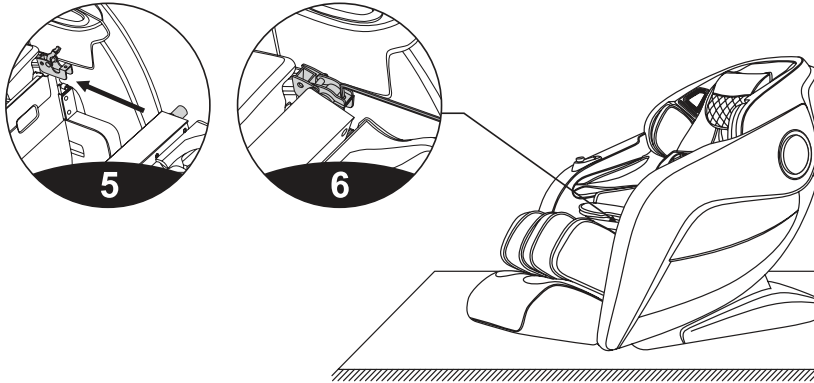


- 2.7 After the screw is locked, insert the rear slot of the leg rest cover into the pin, and then press the front end of the leg rest cover down and the rotating shaft. Make sure the cover is completely parallel and the leg rest is installed (Figure 7)

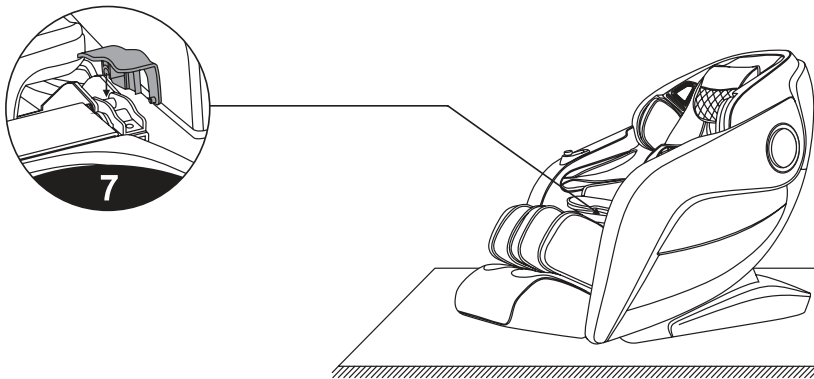


3. Head cushion and back rest's pad

Using head cushions can reduce the kneading massage intensity on the neck and shoulder. You can choose to use the head or neck cushions according to your needs, but they are recommended for an optimal user experience. Back rest cushions and back rest are connected by a zipper (1) head cushions and back rest are connected by thread gluing (2).

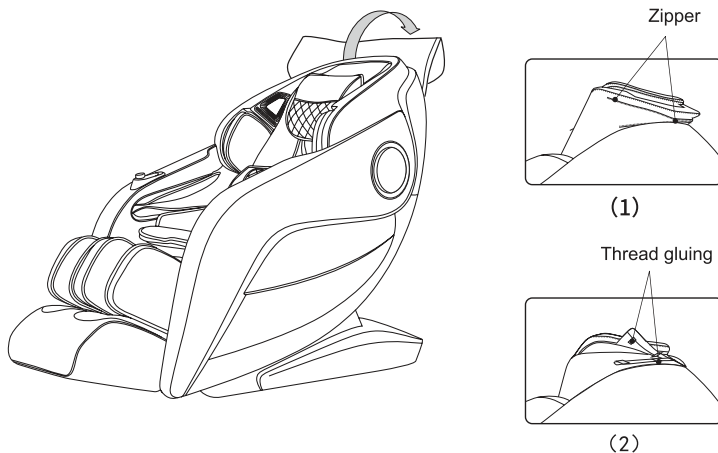


4. Floor Protection

Placing the heavy massage chair on wood may damage the floor, so please place a carpet or other barrier to avoid this type of damage.

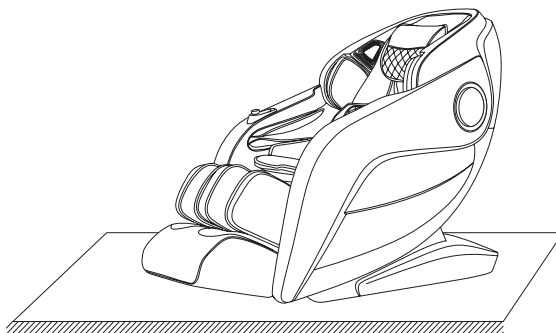

5. Moving the chair

Make sure that all wires are well above the ground. Tilt the back rest backwards until the weight of the chair is resting on the wheels. Push the chair forwards or backwards with your hands, before returning the chair to the normal position in a slow, deliberate manner.

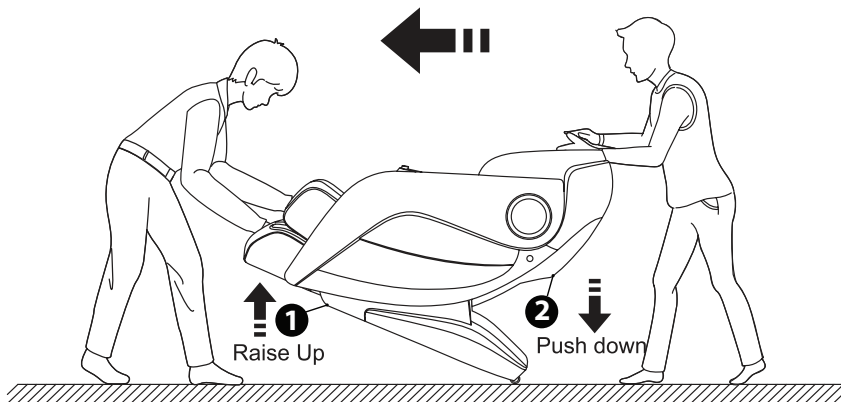

Note: Always turn the power off and disconnect the power cord and controller cord before moving the chair.

⚠ CAUTION

DO NOT pull the chair with its wheels on wooden floors, rough ground or in a narrow space. **MOVING:** Two or more people are required to lift the chair. Lift from the calf rest end plate (1) and back rest cover grooves (2). Do not lift arm rest directly. **DO NOT** lift from the leg rest/calf rest.

6. Fuse Replacement

Undo two screws to remove the top cover. Then four screws to open the power box. The fuse holder is in a protective casing inside the power box.



Product Specification

Model: A701

Configure: 2

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz
220-240V~ 50Hz/60Hz

Rated power input: 220W

Rated time: 20Min

Safety structure: Class I

Warranty

1 Year Limited Warranty

This product is warrantied for 1 year from the original date of purchase, against defects in materials and/or workmanship when utilized for normal household use.

During this period if the unit is proved defective it will be repaired or replaced at the discretion of the service technician. The unit shall be returned, by original purchaser, freight prepaid with proof of original purchase date and \$39.95 return shipping/handling charges included.

Redfern Enterprises does not accept C.O.D.'s and will not reimburse for any fees associated with the return or shipping of the item. This warranty does not apply to any defect arising from a buyers misuse, negligence, failure to follow instructions, use on current or voltage other than that stamped on the unit or repairs not authorized by a Redfern Ent. technician will null and void the warranty.

If you believe that your product is defective, contact Redfern Enterprises Customer

Services Department:

CANADA

101-127 Commercial Drive,

Calgary, AB T3Z 2A7

TF: 1-877-387-7770 (Toll Free)

info@redferment.com www.redferment.com

UNITED STATES

4168 N North Pecos Road, Ste 102

Las Vegas, Nevada, 89115

1-877-462-5757 ext. 1 (Toll Free)

infous@redferment.com www.redfermentus.com

Obtain a repair authorization number (RA Number) and bring in or send prepaid to the Service Center with proof of original purchase date, and prepaid return shipping of \$39.95. jurisdiction.